



Manuals.plus /

› EUREKA /

› Eureka RapidWash NEW630 Cordless Wet and Dry Vacuum Cleaner User Manual

EUREKA NEW630

Eureka RapidWash NEW630 Cordless Wet and Dry Vacuum Cleaner

USER MANUAL

Introduction

Thank you for choosing the Eureka RapidWash NEW630 Cordless Wet and Dry Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

Safety Instructions

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This appliance is for household use only.

- Do not immerse the appliance in water or other liquids.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not handle plug or appliance with wet hands.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

Product Overview

The Eureka RapidWash NEW630 is a versatile cordless wet and dry vacuum cleaner designed for efficient cleaning of hard floors. It combines powerful suction with a washing function, featuring intelligent detection, self-cleaning, and hot air drying capabilities.



Figure 1: Eureka RapidWash NEW630 and its accessories, including the main unit, charging base, clean water tank, dirty water tank, brush roll, filter, cleaning solution, and cleaning brush.

Main Components:

- **Main Unit:** Contains the motor, battery, and control panel.
- **Clean Water Tank:** Holds clean water and cleaning solution for washing floors.
- **Dirty Water Tank:** Collects dirty water and debris.
- **Brush Roll:** The primary cleaning component that scrubs and collects debris.
- **Charging Base:** Used for charging the vacuum and initiating the self-cleaning cycle.
- **HEPA Filter:** Filters air to prevent dust re-emission.

- **Cleaning Solution:** Specially formulated solution for optimal cleaning.
- **Cleaning Brush:** For manual cleaning of components.

Setup

1. Assembly

1. Carefully unpack all components from the packaging.
2. Insert the handle into the main unit until it clicks securely into place.
3. Place the charging base on a flat, stable surface near a power outlet.

2. Initial Charging

Before first use, fully charge the vacuum cleaner. Place the main unit onto the charging base. The LED display will indicate charging status. A full charge takes approximately 5 hours.



Figure 2: The vacuum cleaner charging on its dedicated base. Ensure the unit is properly seated for charging to begin.

3. Filling the Clean Water Tank

1. Remove the clean water tank from the main unit.
2. Open the tank cap and fill with clean tap water up to the MAX line. For optimal cleaning, add a small amount of Eureka cleaning solution as per instructions on the solution bottle.
3. Close the cap securely and reinsert the tank into the main unit until it clicks.

Operating Instructions

1. Powering On/Off

Press the Power button located on the handle to turn the vacuum cleaner on or off. The LED display will illuminate upon activation.

2. Mode Selection

The Eureka RapidWash NEW630 features multiple cleaning modes to suit various needs:

- **Auto Mode:** The intelligent detection system automatically assesses floor dirt levels and adjusts suction power and water flow for efficient cleaning. This mode is ideal for everyday cleaning.
- **Turbo Mode:** Provides maximum suction power and brush roll speed (up to 600 rpm) for tackling stubborn stains and heavily soiled areas.
- **Rapid Mode (Dry Mode):** Designed to quickly absorb large quantities of water without spraying, making it ideal for wet environments like bathrooms or accidental spills.

Cycle through the modes by pressing the Mode button on the handle. The current mode will be displayed on the LED screen.



Figure 3: The intuitive LED display clearly shows the selected cleaning mode, battery level, and other important alerts.

3. Cleaning Tips

- For best results, pre-vacuum large debris if necessary, though the RapidWash NEW630 is designed to handle both wet and dry messes.
- Move the vacuum cleaner slowly and steadily across the floor. The auto-propulsion feature assists in effortless movement.
- The 170° recline capability allows for easy cleaning under furniture with low clearance (as low as 21.3 cm).



Inclinaison jusqu'à 170°

Nettoyage facile sous les meubles

Figure 4: The vacuum's ability to recline up to 170 degrees allows for thorough cleaning in hard-to-reach areas under furniture.

- For quick pauses during cleaning, simply push the machine upright into its vertical position. It will automatically enter pause mode without needing to be turned off.
- The vacuum is designed for low noise operation (74 dB), minimizing disturbance during use.

4. Battery Life

The 4000 mAh battery provides up to 38 minutes of continuous operation, allowing you to clean large areas on a single charge. The LED display shows the remaining battery level.

Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your Eureka RapidWash NEW630.

1. Self-Cleaning Function

After each use, place the vacuum cleaner back on its charging base. Press the foot pedal on the brush head to activate the self-cleaning cycle. This washes the brush roll thoroughly, removing dirt and debris.



Séchage à l'air chaud de 60°C

Séchage en 30 minutes - sans odeur, sans moisissure

Figure 5: The self-cleaning function flushes the brush roll with clean water, followed by a hot air drying cycle to prevent odors and mold growth.

2. Hot Air Drying

Following the self-cleaning cycle, the vacuum automatically initiates a 60°C hot air drying mode. This process takes approximately 30 minutes and effectively prevents mold growth and odors, ensuring the brush roll is dry and ready for the next use. The brush roll rotates in both directions during drying for uniform results.

3. Emptying and Cleaning the Dirty Water Tank

The dirty water tank should be emptied after each use. Remove the tank, open the lid, and dispose of the dirty water. Rinse the tank thoroughly with clean water and allow it to air dry before reattaching.

4. Cleaning the Brush Roll

While the self-cleaning function is effective, occasional manual cleaning of the brush roll may be necessary, especially if there is excessive hair or debris. The RapidWash NEW630 features an enhanced anti-tangle design with an integrated comb and scraper to minimize hair entanglement.



Anti-enchevêtrement de double mécanisme

Fini les cheveux emmêlés

Figure 6: The advanced anti-tangle mechanism, featuring a comb and scraper, significantly reduces hair wrapping around the brush roll.

5. Cleaning the HEPA Filter

The HEPA filter should be cleaned regularly to maintain suction performance. Remove the filter from the dirty water tank assembly and rinse it under running water. Allow it to air dry completely for at least 24 hours before reinserting. Do not use the vacuum without a dry filter.

Troubleshooting

This section addresses common issues you might encounter with your Eureka RapidWash NEW630. If the problem persists, please contact customer support.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is depleted.	Charge the vacuum fully.
Poor suction or cleaning performance.	Dirty water tank is full. Brush roll is tangled or dirty. Filter is clogged. Clean water tank is empty.	Empty dirty water tank. Clean brush roll. Clean or replace filter. Refill clean water tank.
Water leakage.	Water tanks not properly installed. Tank caps not sealed.	Ensure tanks are securely clicked into place. Check that tank caps are tightly closed.
Unpleasant odor.	Dirty water tank or brush roll not cleaned.	Perform self-cleaning cycle. Empty and rinse dirty water tank. Ensure brush roll is dry after use.
Voice prompts or LED alerts.	System notifications (e.g., low battery, full dirty water tank).	Follow the instructions provided by the voice prompt or LED indicator. The vacuum can also be set to silent mode.

Demonstration Video

The following video demonstrates the key features and operation of the Eureka RapidWash NEW630. (Note: Creator type for this video was not explicitly identified as 'Seller' in the provided data, but it is included for illustrative purposes of product functionality.)

Your browser does not support the video tag.

Video 1: A comprehensive overview of the Eureka RapidWash NEW630, showcasing its versatility, powerful suction, washing capabilities, extended battery life, ease of use, and efficient self-cleaning system.

Specifications

Feature	Specification
Brand	EUREKA
Model Number	NEW630
Color	Black
Product Dimensions (L x W x H)	27 x 23.5 x 116 cm
Weight	6 Kilograms
Power	220 Watts
Noise Level	74 dB
Battery Runtime	38 minutes
Charging Time	5 hours
Special Features	LED Display, Self-cleaning, Auto-drying, Auto-charging Base, Self-propelled, Voice Prompts, Multi-surface Cleaning
Filter Type	HEPA Filter
Recommended Uses	Hard floors, parquet, marble, upholstery
Clean Water Tank Capacity	700 ml
Dirty Water Tank Capacity	600 ml

Warranty and Support

Eureka products are manufactured to the highest quality standards. For information regarding warranty coverage, technical support, or spare parts, please refer to the official Eureka website or contact their customer service department. Keep your purchase receipt as proof of purchase for any warranty claims.