

coucheta ZlyZD-PEL_0QQJEQO0LeQodq

coucheta Portable 88 Key Weighted Digital Piano User Manual

Model: ZlyZD-PEL_0QQJEQO0LeQodq

1. INTRODUCTION

Thank you for choosing the coucheta Portable 88 Key Weighted Digital Piano. This manual provides essential information for the safe and efficient use of your instrument. Please read it thoroughly before operation and retain it for future reference.

2. SAFETY INSTRUCTIONS

- **Power Supply:** Use only the specified power adapter. Ensure the voltage matches your local power supply.
- **Water and Moisture:** Do not expose the instrument to water or excessive moisture. Avoid placing liquids near the piano.
- **Heat Sources:** Keep the instrument away from direct sunlight, radiators, or other heat sources.
- **Ventilation:** Ensure proper ventilation. Do not block ventilation openings.
- **Cleaning:** Use a soft, dry cloth for cleaning. Avoid abrasive cleaners or solvents.
- **Servicing:** Do not attempt to service the instrument yourself. Refer all servicing to qualified personnel.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- coucheta Portable 88 Key Weighted Digital Piano
- Power Adapter
- Sustain Pedal
- Music Rest
- User Manual (this document)



Image: The coucheta Portable 88 Key Weighted Digital Piano shown with its included sustain pedal and power adapter.

4. SETUP

Follow these steps to set up your digital piano:

1. **Placement:** Place the digital piano on a stable, flat surface. Ensure there is enough space for comfortable playing.
2. **Connect Power:** Insert the power adapter cable into the DC IN jack on the rear panel of the piano. Plug the other end into a suitable wall outlet.
3. **Attach Music Rest:** Slide the music rest into the designated slots on the top panel of the piano.
4. **Connect Sustain Pedal:** Plug the sustain pedal cable into the SUSTAIN jack on the rear panel.
5. **Headphones (Optional):** For private practice, connect headphones to one of the two 3.5mm headphone jacks on the front or rear panel.
6. **USB MIDI Connection (Optional):** To connect to a computer for music software, use a USB cable (not included) to connect the USB TO HOST port on the piano to your computer's USB port.



Image: The coucheta 88 Key Digital Piano ready for use, displaying its full keyboard and control layout.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation

- **Power On/Off:** Press the **POWER** button to turn the piano on or off.
- **Volume Control:** Use the **VOLUME** knob or buttons to adjust the overall sound level.
- **Tone Selection:** Press the **TONE** button and use the number keys or +/- buttons to select from 238 available tones.
- **Rhythm Selection:** Press the **RHYTHM** button and use the number keys or +/- buttons to select from 200 available rhythms.
- **Demo Songs:** Press the **DEMO** button to play one of the 100 built-in demo songs. Use the +/- buttons to navigate through songs.

5.2 Advanced Features

- **Dual-Tone Mode:** Activate dual-tone mode to layer two different voices simultaneously, such as piano and strings. Refer to the on-screen display for specific tone combinations.
- **Sustain Pedal:** Connect the included sustain pedal to achieve a sustained note effect, similar to an acoustic piano.
- **USB MIDI Interface:** Connect the piano to a computer via USB to use it as a MIDI controller for music production software or for interactive learning applications.

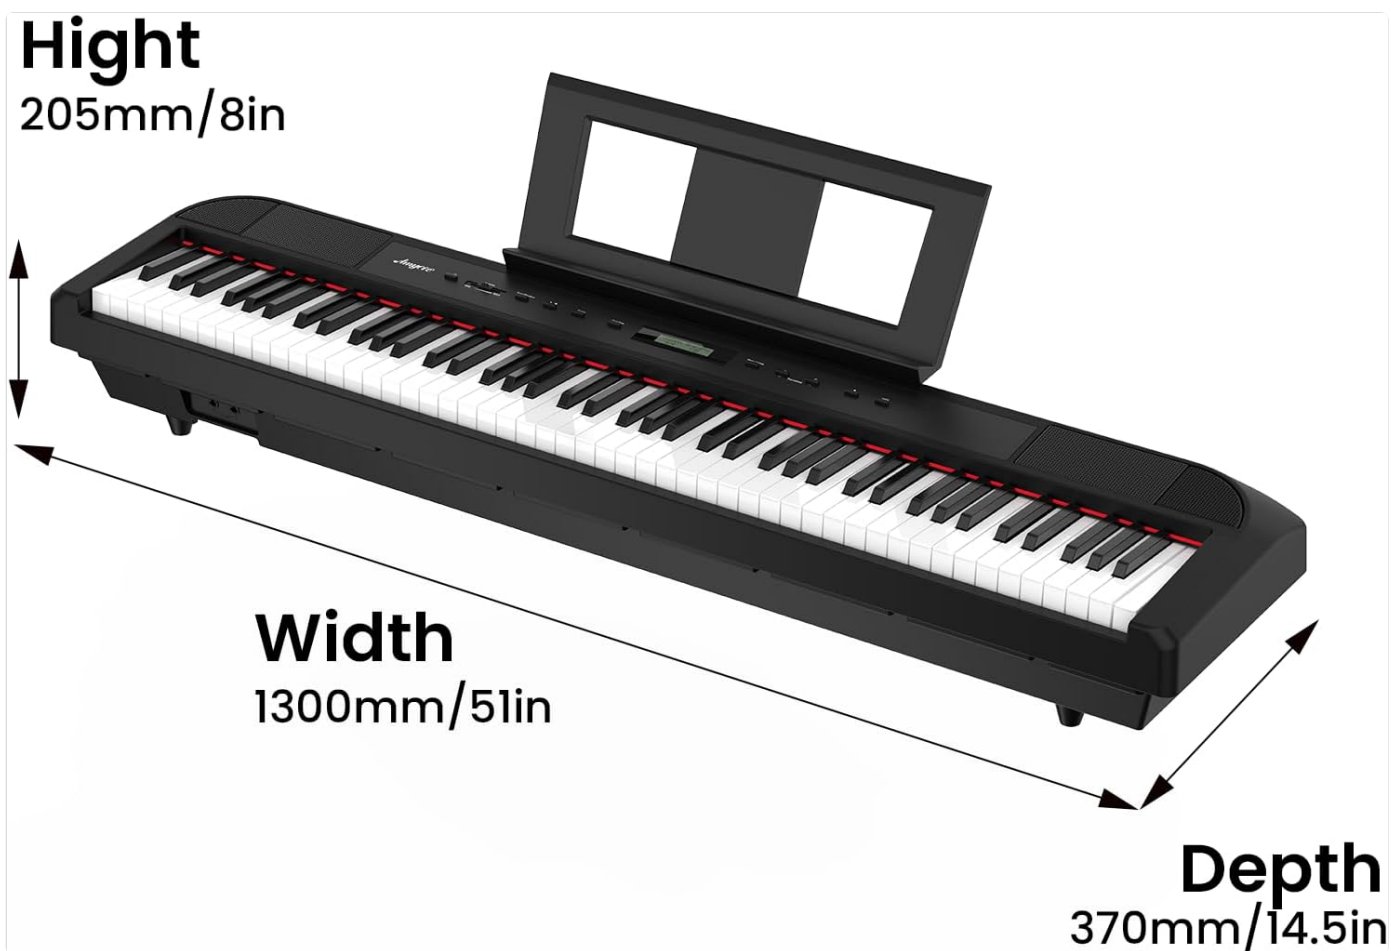


Image: A musician's hands demonstrating the hammer action keys, emphasizing the authentic playing experience.

Your browser does not support the video tag.

Video: An overview demonstrating the features and sound capabilities of the coucheta Portable 88 Key Weighted Digital Piano.

6. MAINTENANCE

- **Cleaning:** Wipe the surface of the piano with a soft, dry, lint-free cloth. For stubborn dirt, slightly dampen the cloth with water, then wipe dry immediately. Do not use chemical cleaners.
- **Key Care:** Keep the keys clean. Avoid touching them with dirty or greasy hands.
- **Storage:** When not in use for extended periods, store the piano in a cool, dry place, away from direct sunlight and extreme temperatures. Cover it with a dust cover to protect it from dust and debris.
- **Transportation:** When moving the piano, ensure it is powered off and all cables are disconnected. Handle with care to avoid damage.

7. TROUBLESHOOTING

If you encounter issues with your digital piano, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No sound	Power not connected, volume too low, headphones connected, internal speaker disabled.	Check power connection. Increase volume. Disconnect headphones. Ensure internal speakers are enabled (if applicable).

Problem	Possible Cause	Solution
Distorted sound	Volume too high, faulty cable, external interference.	Reduce volume. Try a different cable. Move away from other electronic devices.
Keys not responding	Instrument not powered on, specific settings enabled.	Ensure piano is powered on. Check for any 'Local Off' or similar MIDI settings if connected to a computer.
USB MIDI not working	Incorrect cable, driver issue, software settings.	Use a standard USB A-to-B cable. Install necessary drivers (if required by your OS). Check MIDI input settings in your music software.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Description
Model Name	ZlyZD-PEL_0QQJEQO0LeQodq
Brand	coucheta
Number of Keys	88 Weighted Keys (Hammer Action)
Tones	238
Rhythms	200
Demo Songs	100
Connectivity	USB MIDI, 3.5mm Headphone Jacks (x2)
Power Source	Corded Electric
Product Dimensions	14.5"D x 51"W x 8"H (370mm D x 1300mm W x 205mm H)
Item Weight	25.6 pounds
UPC	198723652566



200 Rhythms 238 Tones 100 Demos

DIGITAL PIANO WITH RICH RYTHM TONE

Image: Detailed dimensions of the digital piano for placement and compatibility.

9. WARRANTY AND SUPPORT

Your coucheta Portable 88 Key Weighted Digital Piano is covered by a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions.

For technical support, troubleshooting assistance, or warranty claims, please contact coucheta customer service through the retailer where you purchased the product or visit the official coucheta website for contact information.

© 2024 coucheta. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question