

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [NutriChef](#) /

› [NutriChef 1.6 QT Portable Electric Rice Cooker & Lunch Maker User Manual \(Model NC12BBLACK\)](#)

NutriChef NC12BBLACK

NutriChef 1.6 QT Portable Electric Rice Cooker & Lunch Maker User Manual

Model: NC12BBLACK | Brand: NutriChef

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your NutriChef 1.6 QT Portable Electric Rice Cooker & Lunch Maker (Model NC12BBLACK). Please read all instructions carefully before use and retain this manual for future reference.

IMPORTANT SAFEGUARDS

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse the cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "OFF", then remove plug from wall outlet.
- Do not use the appliance for other than intended use.

- This appliance is for household use only.

PRODUCT COMPONENTS

Your NutriChef Portable Electric Rice Cooker comes with the following components:

- Main Cooker Unit with Non-Stick Ceramic Coated Pot
- Lid with Handle
- Power Cord
- Measuring Cup
- Instruction Manual (this document)



Figure 1: Overview of the NutriChef 1.6 QT Portable Electric Rice Cooker.

NON-STICK CERAMIC COATING



SUPERIOR HEAT DISTRIBUTION



Figure 2: The non-stick ceramic interior and heat distribution design of the cooker.

SETUP

- 1. Unpack:** Carefully remove all components from the packaging.
- 2. Initial Cleaning:** Before first use, wash the inner pot and lid with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth.
- 3. Placement:** Place the cooker on a stable, flat, heat-resistant surface away from water and heat sources.
- 4. Connect Power:** Insert the power cord into the designated port on the cooker, then plug the other end into a standard 110V electrical outlet.

Your browser does not support the video tag.

Video 1: Unboxing the NutriChef Portable Electric Rice Cooker, showing initial components and setup.

OPERATING INSTRUCTIONS

The NutriChef rice cooker features a user-friendly digital control panel with multiple cooking functions.

NON-STICK CERAMIC COATING FOR HEALTHIER COOKING



User-friendly interface



2 hours heat preservation



Heat-resistant plastic material



Figure 3: The digital control panel for selecting cooking functions.

Control Panel Functions:

- **Function Button:** Press to cycle through the available cooking modes: Rice, Soup, Stew, Porridge, Noodles, Chafing Dish (Hot Pot).
- **OFF Button:** Turns the appliance off.
- **Keep Warm Button:** Activates or deactivates the automatic keep warm function. The cooker can keep food warm for up to 2 hours.
- **Timer Delay Button:** Allows you to set a delayed start time for cooking.

General Cooking Steps:

1. **Add Ingredients:** Place your desired ingredients and appropriate amount of liquid into the non-stick ceramic inner pot. Ensure not to exceed the 'MAX' fill line.
2. **Close Lid:** Securely place the lid on the cooker.
3. **Select Function:** Press the "Function" button repeatedly until the desired cooking mode (e.g., Rice, Soup, Stew) is highlighted on the digital display.
4. **Start Cooking:** Once the desired function is selected, the cooker will automatically begin the cooking process after a few seconds. The display will show the remaining cooking time.
5. **Keep Warm:** After cooking is complete, the unit will automatically switch to "Keep Warm" mode (if

not manually turned off) to maintain food temperature.

KEEP YOUR MEALS WARM AND READY TO SERVE

Enjoy perfectly warm meals anytime with automatic keep-warm mode.



Figure 4: The automatic keep-warm mode ensures meals stay ready to serve.

Your browser does not support the video tag.

Video 2: A demonstration of how to use the NutriChef rice cooker for various meals.

COOKING GUIDE

The NutriChef rice cooker offers 6 versatile cooking programs for various dishes.

nutrichef™

PERFECT FOR EVERY KITCHEN SETTING

Compact, portable design ideal for home, dorms, and travel.



Figure 5: The 6-in-1 cooking functions for versatile meal preparation.

Recommended Ratios and Times (Approximate):

- **Rice:** Use the provided measuring cup. Typically, 1 cup of rice to 1.5-2 cups of water, depending on rice type. Select "Rice" function. Cooking time is usually around 40 minutes.
- **Soup/Stew:** Add ingredients and liquid. Select "Soup" or "Stew" function. Cooking times vary based on ingredients, typically 1-2 hours.
- **Porridge:** Use a higher water-to-grain ratio (e.g., 1 cup grain to 7-10 cups water). Select "Porridge" function. Cooking time is usually around 1.5-2 hours.
- **Noodles:** Add water and bring to a boil using a suitable function, then add noodles and other ingredients. Select "Noodles" function. Cooking time depends on noodle type.
- **Hot Pot (Chafing Dish):** Add broth and desired ingredients. Use the "Chafing Dish" function to keep contents hot for serving.

Note: Cooking times and water ratios may vary based on the type of ingredients and desired consistency. Always ensure food is cooked thoroughly.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your NutriChef rice

cooker.

1. **Unplug:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Clean Inner Pot:** The non-stick ceramic inner pot should be hand washed with warm, soapy water and a soft sponge. Do not use abrasive cleaners or metal scouring pads, as this can damage the non-stick coating. Rinse thoroughly and dry.
3. **Clean Lid:** Wash the lid with warm, soapy water and rinse.
4. **Clean Exterior:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water or any other liquid.
5. **Storage:** Store the clean and dry appliance in a cool, dry place.



Figure 6: The non-stick ceramic coating allows for easy cleaning.

TROUBLESHOOTING

If you encounter any issues with your NutriChef rice cooker, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in correctly; power outage; unit malfunction.	Ensure the power cord is securely plugged into both the unit and the wall outlet. Check the power supply. If the issue persists, contact customer support.
Food not cooking properly (e.g., rice too hard/soft).	Incorrect water-to-ingredient ratio; wrong function selected.	Adjust the water-to-ingredient ratio according to the cooking guide or recipe. Ensure the correct cooking function is selected for your dish.
Food sticks to the bottom.	Insufficient liquid; prolonged "Keep Warm" cycle; damaged non-stick coating.	Ensure adequate liquid is used. Avoid leaving food on "Keep Warm" for excessively long periods. Use only non-abrasive utensils and cleaning methods to protect the coating.
Unit overheats or shuts off unexpectedly.	Anti-burn dry technology activated; internal malfunction.	This is a safety feature. Ensure there is always sufficient liquid in the pot. If it happens frequently without apparent cause, contact customer support.



Figure 7: The cooker includes safety features like automatic power-off and anti-burn dry technology.

SPECIFICATIONS

Feature	Detail
Brand	NutriChef
Capacity	1.6 Liters
Product Dimensions	9.84"D x 7.48"W x 6.69"H
Power Source	Corded Electric
Product Care Instructions	Hand Wash
Color	Black
Special Features	Automatic Shut Off, Boil Dry Protection, Non-Stick, Portable, Programmable
Material	Polypropylene (PP)
Lid Material	Plastic
Wattage	600 watts
Included Components	Inner Pot, Instruction Manual, Measuring Cup
Voltage	110 Volts
Model Name	NC12BBLACK
Manufacturer	NutriChef
UPC	842893165127
Manufacture Year	2024
Item Weight	2.59 pounds

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official NutriChef website. You may also contact customer service directly for assistance.

NutriChef Customer Service: [Visit NutriChef Store on Amazon](#)