

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [KOOFORWAY](#) /
- › [KOOFORWAY 8-inch 2-in-1 Mini Laptop User Manual \(Model N150\)](#)

## KOOFORWAY N150

# KOOFORWAY 8-inch 2-in-1 Mini Laptop User Manual

Model: N150

## 1. INTRODUCTION

Welcome to the user manual for your KOOFORWAY 8-inch 2-in-1 Mini Laptop. This device combines the portability of a tablet with the functionality of a laptop, featuring an 8-inch HD rotatable touch screen and Windows 11 Pro. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device to ensure optimal performance and user experience.

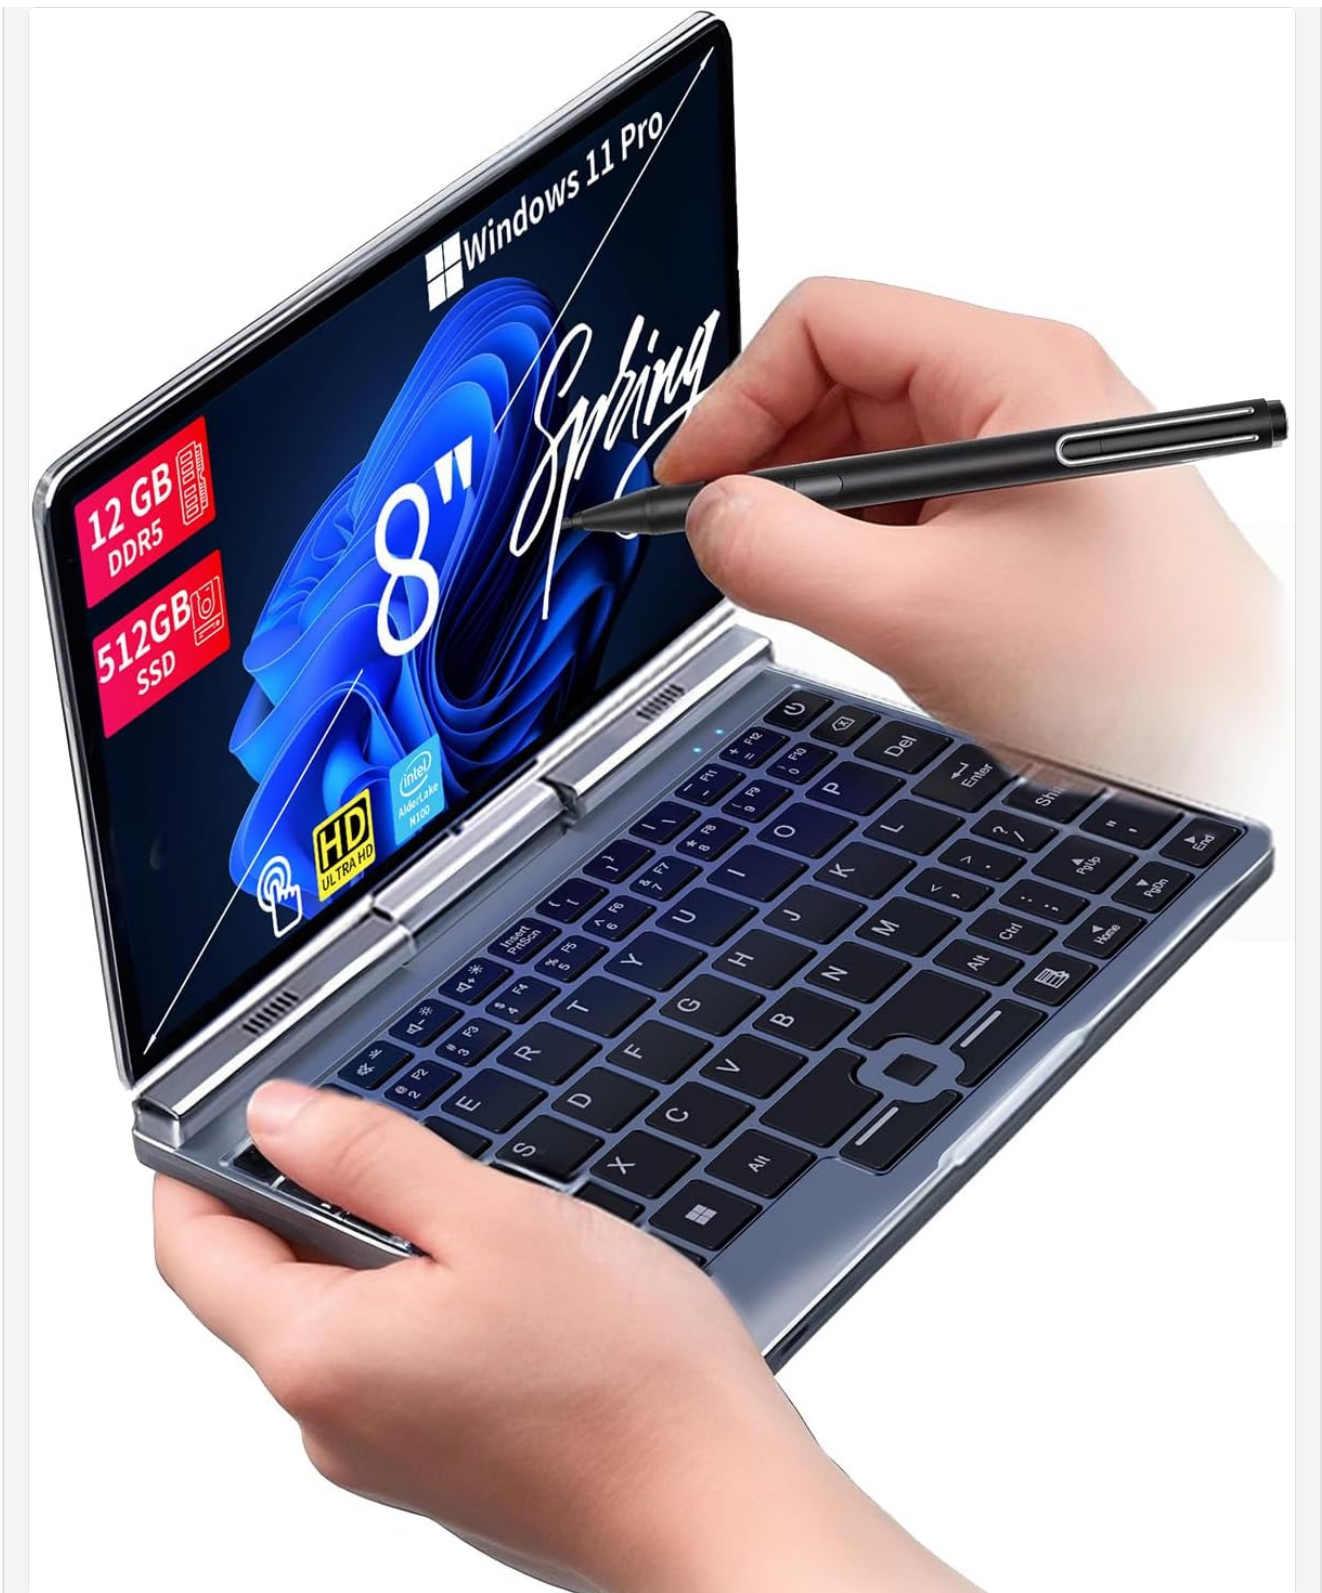


Image: The KOOFORWAY 8-inch 2-in-1 Mini Laptop in use with a stylus, showcasing its compact design and touch screen capabilities.

## 2. PRODUCT OVERVIEW AND FEATURES

The KOOFORWAY Mini Laptop is designed for versatility and performance in a compact form factor. Key features include:

- **Ultra-Compact and Portable Design:** Weighing only 0.78 kg, this 8-inch device is highly portable for on-the-go use.

- **Seamless 2-in-1 Functionality:** A 360° rotatable touchscreen allows instant transformation between laptop and tablet modes.
- **Powerful Performance:** Equipped with an N150 processor, 12 GB LPDDR5 RAM, 512GB SSD, and UHD graphics for smooth multitasking.
- **Enhanced Connectivity:** Features Wi-Fi 6, BT 5.2, USB-C, USB 3.0, HDMI, and RJ45 ports.
- **Durable Metal Body:** A premium metal body enhances durability and heat dissipation.

# HANDHELD COMPUTER

8-Inch Touch Screen/Tablet Laptop 2-in-1



intor@cpu  
Nseries



12G  
Lpddt5



0.78KG



2 Mogapixcl  
Camrea



8inch Sun  
Screen



FLIP

NORMAL



TABLET

Image: Demonstrates the KOOFORWAY Mini Laptop's flexible design, showing its normal laptop mode, a 'flip' mode for presentations, and a full tablet mode.



**HIGH-SPEED NETWORKS CONNECT THE WORLD**

Image: Illustrates the device's advanced wireless capabilities, including Wi-Fi 6 and Bluetooth 5.2 for high-speed network connections.

### 3. SETUP

Follow these steps to set up your KOOFORWAY Mini Laptop for the first time:

1. **Unboxing:** Carefully remove the laptop and all accessories from the packaging.
2. **Initial Charge:** Connect the power adapter to the laptop's power port (refer to the port diagram below)

and plug it into a power outlet. Allow the device to charge for at least 30 minutes before first use, or until the battery indicator shows sufficient charge.

3. **Power On:** Press and hold the power button (located on the side) until the screen illuminates.
4. **Windows 11 Pro Setup:** Follow the on-screen prompts to complete the initial Windows 11 Pro setup, including language selection, region, network connection, and user account creation.
5. **Connect to Wi-Fi:** During the Windows setup, you will be prompted to connect to a Wi-Fi network. Select your network and enter the password. If skipped, you can connect later via Windows Settings.



## Rich Interfaces to Meet Various Expansion Needs

Image: A detailed view of the laptop's various ports, including Type-C, HDMI, Headphone Jack, USB 3.0, Power input, Speaker, RJ45 Ethernet, and Microphone port, essential for connecting peripherals and power.

## 4. OPERATING INSTRUCTIONS

This section covers the basic operation of your KOOFORWAY Mini Laptop.

### 4.1 Power Management

- **Power On/Off:** Press and hold the power button for a few seconds to turn the device on or off.
- **Sleep Mode:** Briefly press the power button to put the device into sleep mode. Press it again to wake it up.
- **Restart:** From the Windows Start menu, select Power > Restart.

### 4.2 Using the 2-in-1 Functionality

The 360° rotatable screen allows for flexible usage modes:

- **Laptop Mode:** Standard configuration for typing and traditional computing.
- **Tent/Stand Mode:** Rotate the screen to an inverted 'V' shape or stand it up for media consumption or presentations.
- **Tablet Mode:** Fold the screen completely back against the keyboard for a full tablet experience. Windows 11 Pro will automatically adjust the interface for touch input.

### 4.3 Touch Screen and Handwriting Support

The HD touch screen supports multi-touch gestures and handwriting input. Use your finger or a compatible stylus for navigation, drawing, and note-taking.

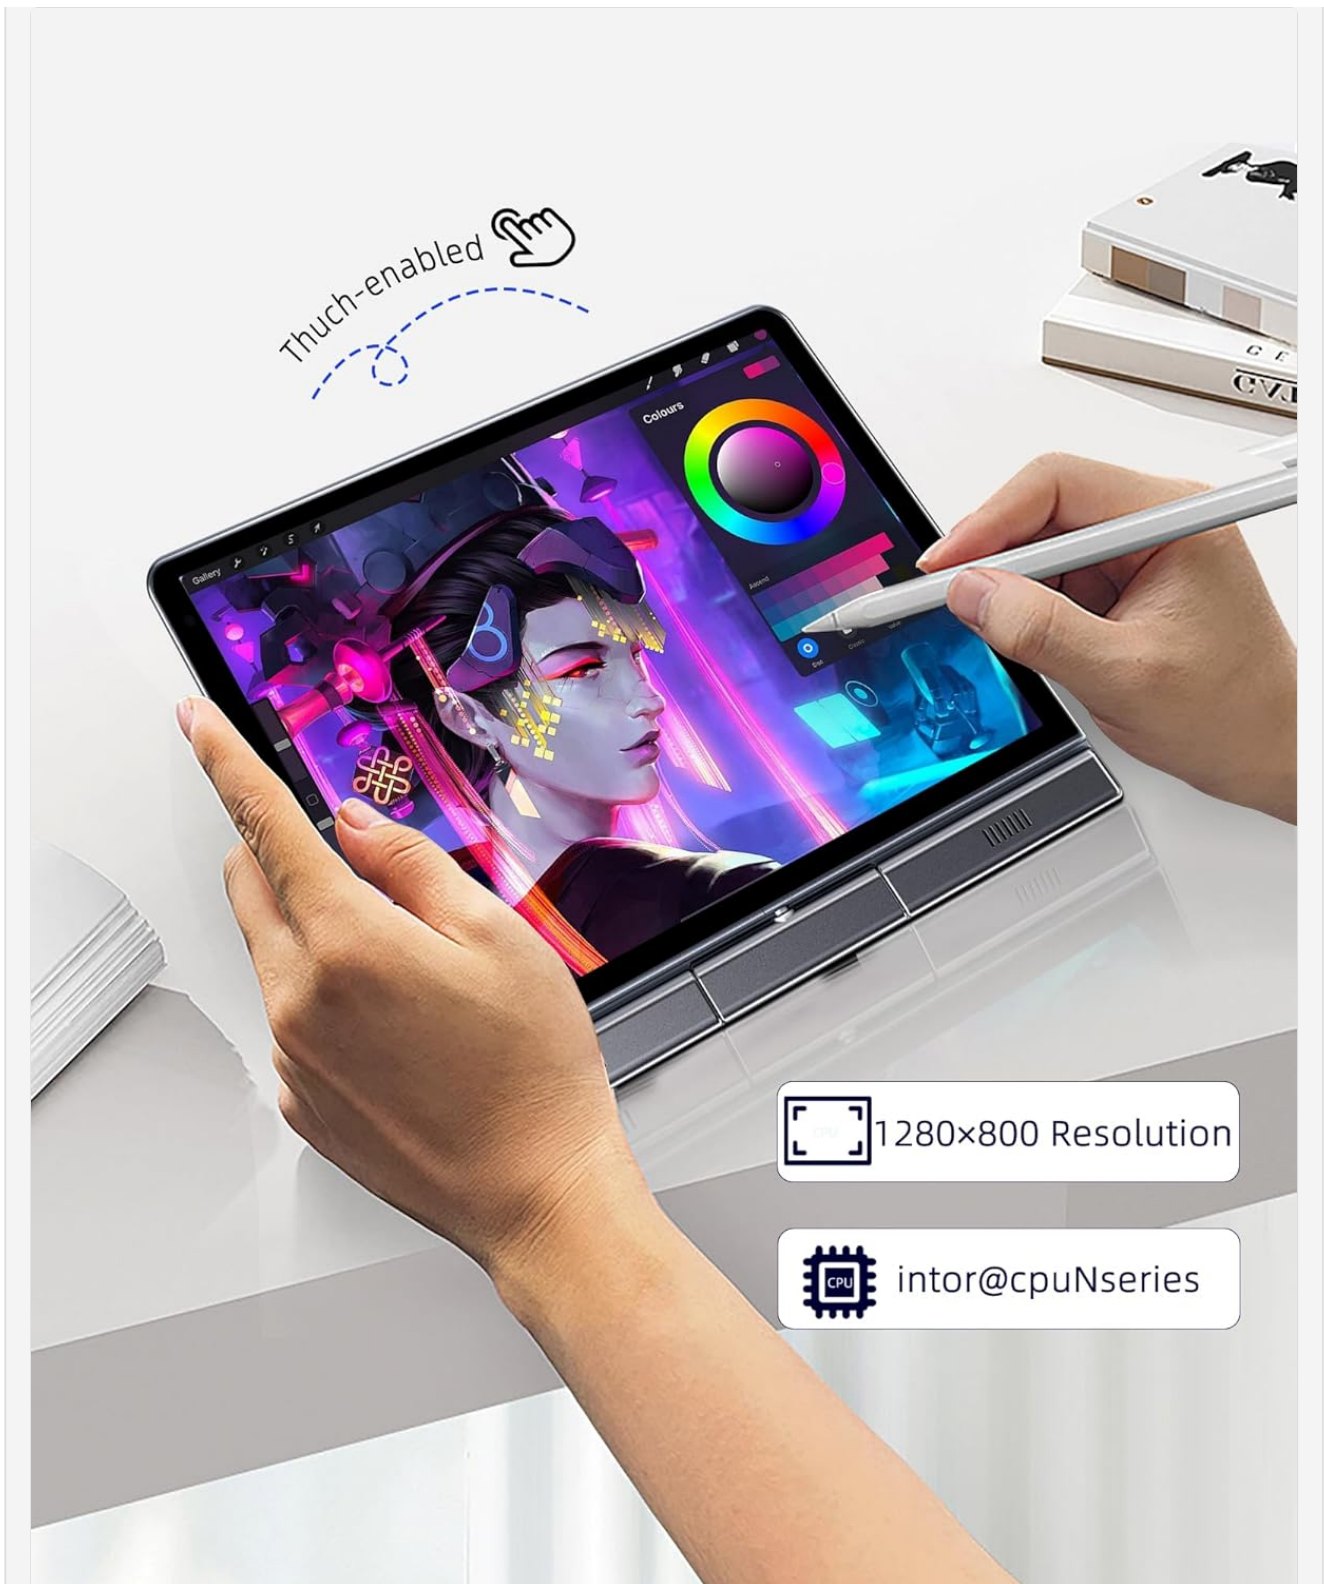


Image: A user demonstrating the handwriting and drawing capabilities of the touch screen using a stylus, ideal for creative tasks or note-taking.

#### 4.4 Connecting External Devices

Utilize the available ports to connect peripherals:

- **USB Devices:** Connect USB drives, mice, keyboards, or other peripherals to the USB 3.0 or USB-C ports.
- **External Display:** Use the HDMI port to connect to an external monitor or projector.
- **Audio:** Connect headphones or external speakers to the 3.5mm headphone jack.
- **Wired Network:** Use the RJ45 port for a stable wired internet connection.

# VERSATILE, MULTI-SCENE USE

Supports hand drawing, screen rotation



LEARNING



DRAWING



GAMING



PORTABLE



NOTE-TAKING

Image: A collage illustrating various versatile uses of the mini laptop, including drawing, learning, gaming, easy portability, and efficient note-taking.

## 5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your device.

- **Cleaning:** Use a soft, lint-free cloth slightly dampened with water or a screen cleaner to wipe the screen.

For the body, use a dry, soft cloth. Avoid harsh chemicals.

- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Store the device in a cool, dry place when not in use for extended periods.
- **Software Updates:** Regularly check for and install Windows updates to ensure security and performance improvements. Go to Settings > Windows Update.
- **Storage Management:** Periodically clear unnecessary files and applications to maintain optimal storage space and system speed.
- **Ventilation:** Ensure the ventilation openings are not blocked to prevent overheating.

## 6. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

Problem	Solution
Device does not power on	Ensure the device is charged. Connect the power adapter and try again. If unresponsive, perform a hard reset by holding the power button for 10-15 seconds.
Wi-Fi connection issues	Check if Wi-Fi is enabled in Windows settings. Restart your router and the laptop. Ensure you are within range of the Wi-Fi signal.
Touch screen unresponsive	Restart the device. Check for any physical obstructions or screen protectors that might interfere. Ensure Windows is updated.
Slow performance	Close unnecessary applications. Check for background processes. Ensure sufficient free storage space. Run a disk cleanup.
Battery not charging	Verify the power adapter is correctly connected to both the laptop and the power outlet. Try a different outlet.

## 7. SPECIFICATIONS

Detailed technical specifications for the KOOFORWAY 8-inch 2-in-1 Mini Laptop:

Feature	Detail
Brand	KOOFORWAY
Screen Size	8 Inches
Color	Silver
Hard Disk Size	512 GB
CPU Model	Intel N100
RAM Memory Installed Size	12 GB

Feature	Detail
Operating System	Windows 11 Pro
Special Feature	Support Stylus
Graphics Card Description	Integrated
Graphics Coprocessor	Intel UHD Graphics

# INTEL 12TH ALDER LAKE N100

TDP: 6W Cores/Threads: 4 cores / 4 threads

Max Turbo Frequency: 3.4GHz



Supports Handwriting



Optical Mouse



3200mAh Battery With  
4-6 Hours

Image: A visual representation of the Intel 12th Gen Alder Lake N100 processor, detailing its TDP, core/thread count, and Max Turbo Frequency, emphasizing the laptop's internal power.

## 8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official KOOFORWAY website. For further assistance or technical support, please contact KOOFORWAY customer service through their official channels.

You can find more information and support on the [KOOFORWAY Store on Amazon](#).