

[manuals.plus](#) /

› [Girmi](#) /

› [Girmi FG78 Air Fryer Instruction Manual](#)

Girmi FG7800

Girmi FG78 Ecofrit Black Air Fryer Instruction Manual

Model: FG7800

1. INTRODUCTION

Thank you for choosing the Girmi FG78 Ecofrit Black Air Fryer. This appliance utilizes rapid air circulation technology to cook your favorite foods with little to no oil, resulting in healthier and delicious meals. Please read this manual thoroughly before first use to ensure safe and optimal operation of your air fryer. Keep this manual for future reference.



Image 1.1: Front view of the Girmi FG78 Ecofrit Black Air Fryer.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, level, heat-resistant surface.
- Do not block any ventilation openings.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Girmi FG78 Air Fryer.



Image 3.1: Front view of the air fryer with the cooking basket inserted.

Components:

1. Main Unit with Digital Control Panel
2. Removable Cooking Basket (6 Liters capacity)
3. Non-stick Crisper Plate
4. Handle
5. Viewing Window with Interior Light



Image 3.2: Detailed view of the digital control panel with various cooking presets and settings.

Digital Control Panel:

The digital display shows temperature and time. Touch controls allow you to select preset programs, adjust temperature, and set cooking time.

- **Temperature Control:** Adjusts cooking temperature (60°C - 200°C).
- **Time Control:** Adjusts cooking time (up to 60 minutes).
- **Preset Programs:** 12 pre-programmed settings for common dishes like fries, chicken, fish, and more.
- **Power Button:** Turns the appliance on/off and starts/pauses cooking.
- **Shake Reminder:** An icon may illuminate to remind you to shake the basket for even cooking.



Image 3.3: Illustration of the rapid air circulation technology for even cooking.

4. SETUP AND FIRST USE

Before First Use:

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Clean the cooking basket and crisper plate thoroughly with hot water, dish soap, and a non-abrasive sponge.
3. Wipe the inside and outside of the appliance with a damp cloth.
4. Ensure the crisper plate is correctly placed at the bottom of the cooking basket.



Image 4.1: The cooking basket removed from the main unit.

Placement:

Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is at least 10 cm (4 inches) of free space on the back and sides of the appliance, and 10 cm (4 inches) above it, to allow for proper ventilation.

5. OPERATING INSTRUCTIONS

General Operation:

1. Plug the power cord into a grounded wall outlet. The power button will illuminate.
2. Carefully pull the cooking basket out of the air fryer.
3. Place the crisper plate inside the basket.
4. Place the ingredients into the cooking basket. Do not exceed the MAX fill line.
5. Slide the cooking basket back into the air fryer.
6. Press the power button to turn on the display.
7. **Manual Setting:** Use the temperature and time control buttons to set your desired cooking temperature (60°C - 200°C) and time (1-60 minutes).
8. **Preset Programs:** Select one of the 12 preset icons for common dishes. The air fryer will automatically set the

optimal time and temperature.

9. Press the power button again to start the cooking process.
10. During cooking, you can pull out the basket to shake or check food. The air fryer will pause automatically and resume when the basket is reinserted.
11. Once the set time has elapsed, the air fryer will beep, indicating cooking is complete.
12. Carefully pull out the basket and transfer the cooked food to a plate.



Image 5.1: Example of food, such as french fries, being cooked in the air fryer basket.

Tips for Best Results:

- For even cooking, shake the basket halfway through the cooking time, especially for smaller items like fries or nuggets.
- Lightly spray or brush a small amount of oil on fresh ingredients for a crispier result.
- Do not overcrowd the basket; cook in batches if necessary.
- The viewing window allows you to monitor cooking progress without opening the basket.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

Cleaning After Each Use:

1. Unplug the air fryer and allow it to cool down completely before cleaning.
2. Remove the cooking basket and crisper plate.
3. Wash the cooking basket and crisper plate with hot water, dish soap, and a non-abrasive sponge. The non-stick coating makes cleaning easy.
4. For stubborn food residue, soak the basket and plate in hot water with dish soap for about 10 minutes.
5. Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scourers.
6. Clean the interior of the appliance with a damp cloth.
7. Ensure all parts are completely dry before reassembling or storing the appliance.



Image 6.1: The non-stick crisper plate, designed for easy cleaning.

Storage:

Store the appliance in a cool, dry place, away from direct sunlight and out of reach of children.

7. TROUBLESHOOTING

If you encounter any issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in.	Ensure the power cord is securely plugged into a grounded outlet.
Food is not cooked evenly.	Basket is overcrowded; food not shaken.	Cook in smaller batches. Shake the basket halfway through cooking.
Food is not crispy.	Not enough oil (for fresh ingredients); temperature too low.	Lightly brush or spray food with oil. Increase cooking temperature.
White smoke coming from the appliance.	Grease residue from previous use; fatty ingredients.	Clean the basket and crisper plate thoroughly. For fatty foods, absorb excess oil with a paper towel.
Basket does not slide in properly.	Basket is not aligned correctly.	Push the basket in firmly until it clicks into place.

8. SPECIFICATIONS

Technical details for the Girmi FG78 Ecofrit Black Air Fryer.

- **Model:** FG7800
- **Power:** 1500 Watts
- **Capacity:** 6 Liters
- **Voltage:** 230 Volts (AC)
- **Temperature Range:** 60°C - 200°C
- **Timer:** Up to 60 minutes
- **Dimensions (L x W x H):** Approximately 28 x 37 x 29 cm
- **Weight:** 3.8 Kilograms
- **Material:** Plastic
- **Special Features:** Digital Display, Viewing Window, Interior Light, Non-stick Tray, BPA/PFOA Safe



Image 8.1: Dimensions of the Girmi FG78 Air Fryer.

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Girmi website. Do not attempt to repair the appliance yourself; contact qualified service personnel for assistance.

Related Documents - FG7800

 Girmi <small>UNIVERSAL</small>  Manuale d'uso User manual Mod. ST01 IT EN PT ES DE FR PL Technical model: CEA-13-07 Ferro da Stiro Steam Iron	<p><u>Girmi ST01 Steam Iron User Manual</u></p> <p>Comprehensive user manual for the Girmi ST01 steam iron (Model CEA-13-07), covering safety instructions, operation, maintenance, cleaning, technical specifications, and disposal information.</p>
 Girmi <small>UNIVERSAL</small>  Manuale d'uso User manual Mod. BL22 IT EN PT ES DE FR PL Technical model: FK-1505 Bollitore Kettle Herd Kettle Chafer Wasserkocher	<p><u>Girmi BL22 Electric Kettle - User Manual and Safety Guide</u></p> <p>Comprehensive user manual for the Girmi BL22 electric kettle (model FK-1505). Includes detailed safety instructions, operating procedures, cleaning and descaling guides, technical specifications, and WEEE disposal information. Available in multiple languages.</p>
 Girmi <small>UNIVERSAL</small>  Manuale d'uso User manual Mod. FRO6 IT EN PT ES DE FR PL Technical model: BL707B Frullatore Blender	<p><u>Girmi FRO6 Blender User Manual</u></p> <p>User manual for the Girmi FRO6 blender (Model BL707B), covering safety instructions, operation, cleaning, technical specifications, and WEEE disposal.</p>
 Girmi <small>UNIVERSAL</small>  Manuale d'uso User manual Mod. GH02 IT EN FR Technical model: BL400 Gelatiera Ice cream maker Máquina de helados Máquina de helado Gélatière Ghiaccino Géleé glacée Desertificadora	<p><u>Girmi GH02 Ice Cream Maker User Manual</u></p> <p>This user manual provides instructions for the Girmi GH02 ice cream maker, covering safety, operation, cleaning, and recipes. It includes information in Italian, English, and French.</p>
 Girmi <small>UNIVERSAL</small>  Manuale d'uso User manual Mod. TR05 IT EN PT ES DE FR PL SL Technical model: TR05 Tritatutto Chopper	<p><u>Girmi TR05 Chopper User Manual - Safety, Operation, and Technical Specifications</u></p> <p>Comprehensive user manual for the Girmi TR05 Tritatutto / Chopper. Includes safety instructions, operating guide, cleaning procedures, technical specifications, and disposal information.</p>



[pdf] Dimension Guide

Scheda tecnica Friggitrice ad aria FG78 Girmi fg78 scheda 24 25 girmi it data upload tecnicagirmi 25girmi tecnicaScheda tecnicaGIRMI FG7800 friggitrice Singolo 6 L Indipendente 1500 W calda Nero Friggitrici in Offerta su Staymmo 122078871 1723038199 5717 1303856girmi 25objects e stayon objects mmo ||| FG78 Friggitrice ad aria - Air fryer 1500 Ecofrit Black W Capacit 6 L Design compatto: grande capacit, piccolo ingombro contenitore antiaderente vassoio antiaderente 80C - 200C Display digitale funzione essiccatore Ricettario incluso Displa

FG78 Friggitrice ad aria - Air fryer 1500 Ecofrit Black W Capacit 6 L Design compatto: grande cap ... ini antiscivolo Dimensioni mm : 280 x 290 x 315 Alimentazione: AC 220-240V - 50-60Hz Item code: **FG7800** Peso Lordo Kg 4,9 Color: Peso Netto Kg 3.8 Power 1500W 6 liters capacity up to 1300g...

lang:it score:22 filesize: 234.07 K page_count: 1 document date: 2024-05-28

[pdf] User Manual

INDICE simone oliva Manuale d istruzioni Friggitrice ad aria FG78 Girmi fg78 ita eng por spa fra de girmi it data upload The following are important notes on the installation use and maintenance save this instruction manual for future reference equipment only as 91nsxfg kwLgirmi dem media amazon images ! 91nsxfg kwL ref dp product quick view as Nota aggiungere 3 minuti se quando si accende la friggitrice essa è fredda cuisine pour le nettoyage du récipient et panier Cela girmi viewgirmi degirmi utenteThe Cela GIRMI FG7800 Singolo 6 L Indipendente 1500 W calda Nero Friggitrici in Offerta su Staymmo 122078871 1723037330 064 1367640girmi deobjects e stayon objects mmo ||| ||| BY TREVIDEA Manuale d uso User manual IT EN PT ES DE FR Mod.: FG78 Technical model: YJ-521ADV Ecofrit Black Friggitrice ad aria Air fryer ITA: INDICE Simbologia p. 2 Avvertenze di sicurezza p. 3 Informazioni d uso p. 5 FG78 . p. 6 Cottura p ||| BY TREVIDEA Manuale d uso User manual IT EN PT ES DE FR Mod.: FG78 Technical model: YJ-521ADV Ecofrit Black Friggitrice ad aria Air fryer ITA: INDICE Simbologia p. 2 Avvertenze di sicurezza p. 3 Informazioni d uso p. 5 FG78 . p. 6 Cottura p

BY TREVIDEA Manuale d uso User manual IT EN PT ES DE FR Mod.: FG78 Technical model: YJ-521ADV Ecofrit Black Friggitrice ad aria Air fryer ITA: INDICE Simbologia.....

p. 2 Avver...

lang:it score:18 filesize: 992.04 K page_count: 44 document date: 2024-03-14

