



Manuals.plus /

› tectake /

› tectake Bathroom Cabinet Model 405366 Instruction Manual

tectake 405366

tectake Bathroom Cabinet Model 405366 Instruction Manual

Brand: tectake | Model: 405366

1. INTRODUCTION

Thank you for choosing the tectake Bathroom Cabinet Model 405366. This instruction manual provides important information for the safe assembly, proper use, and maintenance of your new cabinet. Please read this manual thoroughly before assembly and retain it for future reference.

This country house style cabinet is designed to offer practical storage solutions in your bathroom, featuring two spacious compartments, two doors with magnetic closure, and a dedicated siphon cutout with edge protection for under-sink installation.

2. SAFETY INSTRUCTIONS

- Always assemble the cabinet on a clean, soft surface to prevent scratches.
- Ensure all parts are present and undamaged before beginning assembly. Do not proceed with assembly if any parts are missing or damaged.
- Keep small parts and packaging materials away from children and pets to avoid choking hazards.
- Use appropriate tools as specified in the assembly instructions. Do not overtighten screws, as this may damage the material.
- For stability, ensure the cabinet is placed on a level surface.
- Do not overload the cabinet. The maximum load capacity is 35 kg.
- If wall mounting is required, ensure suitable wall fixings are used for your wall type.

3. PACKAGE CONTENTS

Please check that all components are included in your package. The typical package includes:

- Cabinet panels (top, bottom, sides, back)
- 2 Doors
- 1 Adjustable shelf

- Hinges and magnetic closures
- Door handles
- Siphon cutout edge protection
- Assembly hardware (screws, dowels, etc.)
- Instruction manual

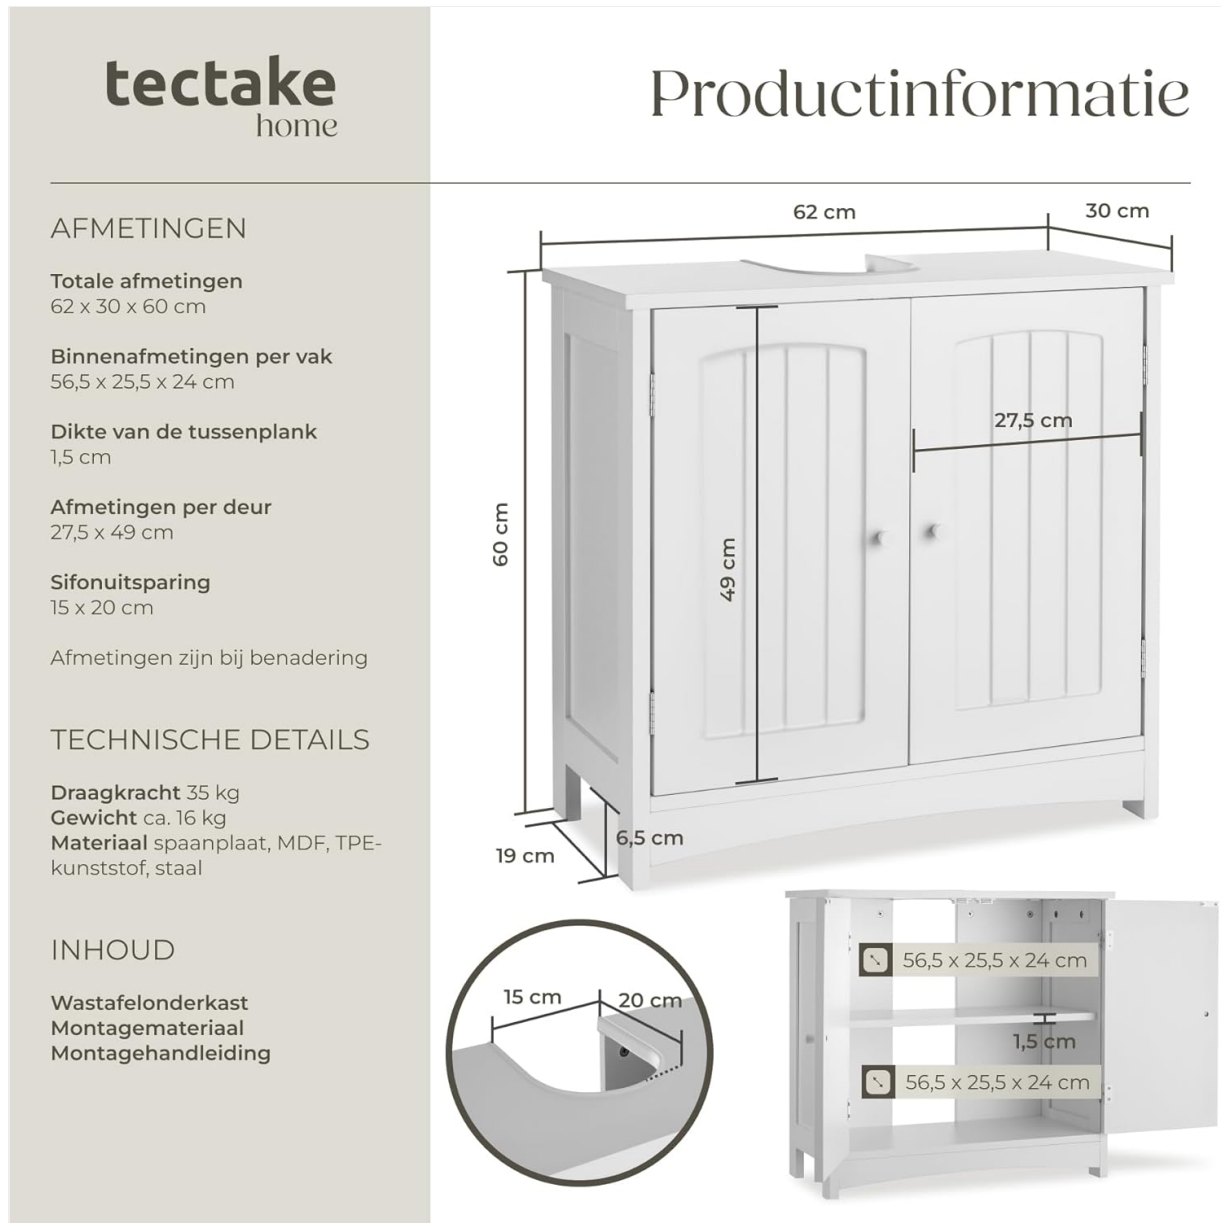


Figure 3.1: Product dimensions and internal layout. This diagram illustrates the overall dimensions of the cabinet (62 cm width, 30 cm depth, 60 cm height) and the internal compartment sizes (56.5 x 25.5 x 24 cm per section). It also shows the siphon cutout dimensions (15 x 20 cm) and the thickness of the shelf (1.5 cm).

4. ASSEMBLY INSTRUCTIONS

Follow these steps carefully for a smooth assembly process. It is recommended to have two people for assembly.

1. **Prepare the Workspace:** Lay out all components on a soft, clean surface to prevent damage. Identify each part using the provided diagrams (if any, otherwise refer to general component names).
2. **Assemble the Cabinet Frame:** Attach the side panels to the bottom panel using the provided screws and dowels. Ensure the pre-drilled holes align correctly.
3. **Install the Back Panel:** Slide or screw the back panel into place. This adds stability to the frame.

4. **Attach the Top Panel:** Secure the top panel to the assembled frame. Ensure the siphon cutout is positioned correctly for your sink.
5. **Insert the Shelf:** Place the adjustable shelf into the desired position using the shelf pins. The cabinet features a sturdy intermediate shelf that divides the interior space.



Figure 4.1: Interior view with shelf. This image shows the cabinet interior with the sturdy intermediate shelf installed, dividing the space into two compartments.

6. **Install Doors and Hinges:** Attach the hinges to the doors and then to the cabinet frame. The cabinet uses 4 robust hinges for smooth operation.

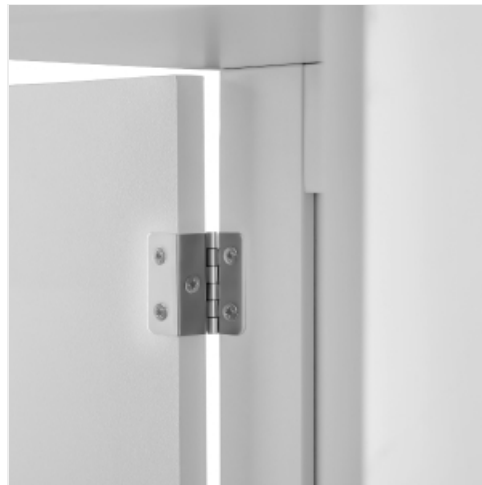


Figure 4.2: Detail of door hinge. This close-up shows one of the robust hinges, designed for smooth and frequent opening and closing of the cabinet doors.

7. **Attach Door Handles:** Secure the handles to the doors.
8. **Install Magnetic Closures:** Attach the magnetic closures to the cabinet frame and doors to ensure they remain securely shut.
9. **Apply Siphon Edge Protection:** Insert the plastic edge protection around the siphon cutout on the top panel. This protects the wood from moisture damage.



Figure 4.3: Siphon cutout protection. This image highlights the durable plastic edge protection around the siphon cutout, designed to prevent moisture damage to the cabinet.

10. **Final Check:** Ensure all screws are tightened and the cabinet is stable.



Figure 4.4: Fully assembled cabinet. This image shows the tectake bathroom cabinet fully assembled, ready for use under a sink.

5. OPERATING INSTRUCTIONS

The tectake Bathroom Cabinet is designed for convenient storage in your bathroom.

- **Storage:** Utilize the two spacious compartments for organizing toiletries, towels, cleaning supplies, and other bathroom essentials. The adjustable shelf allows for flexible storage configurations.

CHARMANTE Eyecatcher

De onderkast verrijkt je interieur niet alleen met een zeer functioneel badkamermeubel, maar vormt ook een stijlvol designstatement.



Figure 5.1: Organized interior. This image demonstrates the cabinet's storage capacity, showing towels and various bathroom items neatly stored within its two compartments.

- **Door Operation:** The two hinged doors open smoothly, providing easy access to the contents. The magnetic closures ensure the doors stay securely shut when not in use.
- **Under-Sink Placement:** The integrated siphon cutout allows the cabinet to fit neatly under most standard bathroom sinks, maximizing space utilization.

6. MAINTENANCE

To ensure the longevity and appearance of your tectake Bathroom Cabinet, follow these simple maintenance guidelines:

- **Cleaning:** Wipe surfaces regularly with a soft, damp cloth. For stubborn marks, a mild, non-abrasive cleaner can be used. Avoid harsh chemicals or abrasive cleaning tools, as these can damage the painted finish.
- **Moisture Protection:** Although the siphon cutout has edge protection, it is advisable to wipe away any standing water or spills immediately to prevent moisture damage to the wood material.
- **Hardware Check:** Periodically check all screws and fittings to ensure they remain tight. Retighten if necessary.

7. TROUBLESHOOTING

If you encounter any issues with your cabinet, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Doors do not close properly or are misaligned.	Loose hinges or magnetic closures. Uneven floor.	Tighten hinge screws. Adjust magnetic closures. Ensure the cabinet is on a level surface.
Cabinet feels wobbly or unstable.	Loose assembly screws. Uneven floor.	Check and tighten all assembly screws. Place the cabinet on a level surface.
Scratches or damage during assembly.	Assembly on a hard or rough surface.	Always assemble on a soft, protective surface (e.g., carpet or blanket).

8. SPECIFICATIONS

Model Number	405366
Brand	tectake
Overall Dimensions (L x W x H)	62 x 30 x 60 cm
Weight	13.1 kg
Material	Engineered Wood (Particle board)
Color	White
Number of Compartments	2
Number of Doors	2
Maximum Load Capacity	35 kg
Special Features	Siphon cutout with edge protection, Magnetic door closure

9. WARRANTY AND SUPPORT

tectake products are manufactured with quality and durability in mind. For information regarding warranty coverage, please refer to the purchase documentation or contact your retailer.

If you have any questions, require assistance with assembly, or need to report a missing/damaged part, please contact tectake customer support or your point of purchase. Have your model number (405366) and purchase date ready when contacting support.