

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Timex](#) /

› [Timex Legacy 41mm Watch Model TW2W57400VQ Instruction Manual](#)

Timex TW2W57400VQ

Timex Legacy 41mm Watch

Model: TW2W57400VQ

[Introduction](#) [Safety Information](#) [Setup](#) [Operating](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides instructions for the proper use and care of your Timex Legacy 41mm Watch, Model TW2W57400VQ. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.



Figure 1: Front view of the Timex Legacy 41mm watch. This image displays the watch face, including the black dial, hour markers, hands, and the date/day display. The stainless steel case and part of the black strap are also visible.

2. SAFETY INFORMATION

Observe the following safety guidelines to prevent damage to your watch and ensure safe operation:

- Avoid exposing the watch to extreme temperatures (hot or cold) or sudden temperature changes.
- Do not expose the watch to strong magnetic fields, as this may affect timekeeping accuracy.
- Avoid direct contact with solvents, detergents, perfumes, and cosmetics, as they may damage the case, strap, or gaskets.

- Ensure the crown is pushed in completely after setting to maintain water resistance.

3. SETUP

3.1 Setting Time and Date

1. **Pull the Crown:** Gently pull the crown (the small knob on the side of the watch) out to position 2.



Figure 2: Side view of the watch, illustrating the crown in its pulled-out position for time and date adjustment. The stainless steel case and black leather strap are visible.

2. **Set the Date:** Rotate the crown clockwise or counter-clockwise to adjust the date.
3. **Set the Day:** Continue rotating the crown to adjust the day. Note that the day changes after midnight.
4. **Set the Time:** Pull the crown out further to position 3. Rotate the crown to move the hour and minute hands to the correct time. Ensure you set the correct AM/PM by observing when the date changes.
5. **Push the Crown In:** Once the time and date are set, push the crown back into position 1 (flush with the case) to start the watch and ensure water resistance.

3.2 Adjusting the Strap

The watch features an 8-inch black two-piece quick-release strap. To adjust the fit:

- Locate the buckle and the series of holes on the strap.
- Insert the pin of the buckle into the hole that provides a comfortable and secure fit on your wrist.
- Ensure the strap is not too tight, which could restrict circulation, or too loose, which could cause the watch to move excessively.





Figure 3: Rear view of the watch, highlighting the stainless steel buckle and the black two-piece quick-release strap. The strap's holes for adjustment are visible.

4. OPERATING

4.1 Basic Timekeeping

Your Timex Legacy watch is a quartz movement timepiece designed for accurate timekeeping. Once the time and date are set, the watch will operate continuously until the battery requires replacement.

4.2 Water Resistance Guidelines

This watch is water resistant up to 50 meters (5 ATM). This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling. To maintain water resistance:

- Do not operate the crown or pushers while the watch is wet or submerged.
- Avoid exposing the watch to hot water, steam, or sudden temperature changes, as this can compromise the seals.
- After exposure to saltwater, rinse the watch with fresh water and dry it thoroughly.



Figure 4: Detailed view of the watch's stainless steel case back, showing engravings including 'WR 50M' (Water Resistant 50 Meters), 'Stainless Steel', and 'Timex'.

5. MAINTENANCE

5.1 Cleaning

- Wipe the watch case and crystal with a soft, dry cloth regularly to remove dust and smudges.
- For the stainless steel case, a slightly damp cloth can be used, followed by a dry cloth.
- For the leather strap, avoid excessive moisture. Clean with a dry or slightly damp cloth and allow it to air dry completely. Do

not use harsh chemicals.

5.2 Battery Replacement

When the watch stops running, the battery needs to be replaced. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance. Attempting to replace the battery yourself may void the warranty and compromise the watch's water resistance.

5.3 Storage

When not wearing your watch, store it in a cool, dry place away from direct sunlight and extreme temperatures. The original packaging or a watch box is ideal for protection.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch not running	Dead battery	Replace battery (professional service recommended)
Incorrect time/date	Crown not pushed in, time not set correctly	Refer to Section 3.1 to reset time and date; ensure crown is fully pushed in
Condensation under crystal	Exposure to extreme temperature changes or compromised water resistance	Contact customer support for inspection and repair

7. SPECIFICATIONS

- **Model:** TW2W57400VQ
- **Case Diameter:** 41mm
- **Case Material:** Stainless Steel
- **Strap Material:** Black two-piece quick release (8 inch)
- **Dial Color:** Black
- **Lens Material:** Mineral Glass
- **Water Resistance:** 50 meters (5 ATM)
- **Movement:** Quartz

8. WARRANTY & SUPPORT

8.1 Warranty Information

Your Timex watch is covered by a limited warranty against manufacturing defects. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration of coverage. Keep your proof of purchase for warranty claims.

8.2 Customer Support

For further assistance, service, or warranty inquiries, please visit the official Timex website or contact Timex customer service. Contact details can typically be found on the Timex website or in your watch's packaging.

