

Timex TW2W96500JR

Timex x Fortnite Unisex Watch Instruction Manual

Model: TW2W96500JR



1. PRODUCT OVERVIEW

The Timex x Fortnite Unisex Watch (Model TW2W96500JR) is a unique timepiece combining classic Timex reliability with the iconic Fortnite aesthetic. This watch features a dual-display, offering both analog and digital timekeeping on a single watch face. It is designed for durability and includes various functions to assist with daily activities and gaming routines.

- **Level Up Your Style:** Features the Fortnite Victory Crown and Supply Llama designs.
- **Digital Code Included:** Comes with a digital code for a Cold Snap Pickaxe.
- **Dual-Display:** Combines analog and digital time display.
- **Stay on Track:** Includes a countdown timer, chronograph, and customizable alarm.
- **Translucent Design:** Features a translucent black resin case and coordinating strap for modern style and lightweight comfort.





Figure 1: Front view of the Timex x Fortnite Unisex Watch. Note the dual analog and digital display, and the Fortnite branding.

2. SETUP AND INITIAL USE

2.1. Battery Information

Your Timex x Fortnite watch comes with one Lithium Metal battery pre-installed and ready for use. No initial battery

installation is required.

2.2. Setting Time and Date

To set the time and date on your watch, follow these general steps. Refer to the specific button labels on your watch for precise operation:

1. Press the **MODE-SET** button (typically on the left side) repeatedly until the time setting mode is activated. Digits will usually flash.
2. Use the **CH-S/S-AL-ON** or **ADV-AL-OFF LAP/RESET** buttons (typically on the right side) to adjust the flashing digits (hours, minutes, year, month, day).
3. Press **MODE-SET** again to confirm each setting and move to the next.
4. Once all settings are complete, press **MODE-SET** one last time to exit the setting mode.



Figure 2: Case back of the watch, indicating water resistance and battery type.

3. OPERATING INSTRUCTIONS

3.1. Basic Functions

- Time Display:** The watch displays time in both analog and digital formats. The digital display shows hours, minutes, and seconds, along with the day of the week and date.
- Light Function:** Press the **LIGHT** button (typically on the upper left side) to illuminate the watch face for a few seconds in low-light conditions. *Note: Some users have reported that the light may not fully illuminate the watch face for easy time reading in complete darkness.*

- **Alarm:** To set the alarm, navigate to the alarm mode using the **MODE-SET** button. Use the adjustment buttons to set the desired alarm time. Press **CH-S/S-AL-ON** to turn the alarm on or off.
- **Chronograph (Stopwatch):** Access the chronograph mode via the **MODE-SET** button. Use **CH-S/S-AL-ON** to start/stop the timer and **ADV-AL-OFF LAP/RESET** to reset or record lap times.
- **Countdown Timer:** The countdown timer can be set for specific durations. Navigate to the timer mode and set the desired countdown time.

4. MAINTENANCE AND CARE

4.1. Water Resistance

This watch is rated as "Water Resistant" (30M). This means it is suitable for everyday use and can withstand splashes or brief immersion in water. It is **not** suitable for swimming, showering, or diving. Avoid pressing buttons while the watch is wet.

4.2. Cleaning

To clean your watch, wipe it gently with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the case and strap.

4.3. Battery Replacement

When the battery needs replacement, it is recommended to take your watch to an authorized Timex service center or a reputable watch repair shop. The battery type is CR 2412 CELL.

5. TROUBLESHOOTING

5.1. Display Issues

- **Blank Display:** If the display is blank, the battery may be depleted. Refer to Section 4.3 for battery replacement.
- **Light Function Not Bright Enough:** As noted by some users, the light function is designed for subtle illumination. If you find it insufficient, ensure you are in a completely dark environment. This is a characteristic of the watch's design.

5.2. Incorrect Time/Date

If the time or date is incorrect, refer to Section 2.2 for instructions on how to reset them. Ensure you are following the steps precisely for each setting.

5.3. Buttons Not Responding

Ensure the watch is not wet when pressing buttons. If buttons are still unresponsive, a reset may be required (consult a professional if a hard reset option is not clearly indicated in the manual or on the watch itself).

6. SPECIFICATIONS

Feature	Detail
Brand	Timex
Model Number	TW2W96500JR

Feature	Detail
ASIN	B0DFQLSTV2
Department	Unisex
Batteries	1 Lithium Metal batteries required (included)
Closure Type	Buckle
Water Resistance Level	Water Resistant (30M)
Package Dimensions	4.37 x 4.21 x 3.15 inches
Item Weight	7.41 ounces
Manufacturer	Timex
Date First Available	August 30, 2024

7. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Timex website or contact Timex customer service directly. Keep your purchase receipt as proof of purchase.

You can visit the official Timex store on Amazon for more information:[Timex Amazon Store](#)

© 2024 Timex. All rights reserved. Fortnite © Epic Games, Inc.