

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Casio](#) /
- › [Casio G-Shock GM2110D-4A Watch User Manual](#)

Casio GM2110D-4A

Casio G-Shock GM2110D-4A Watch User Manual

Model: GM2110D-4A

INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your Casio G-Shock GM2110D-4A Octagonal Orange Stainless Steel Watch. Please read this manual carefully to ensure proper use and to fully utilize all features of your watch. Keep this manual for future reference.

PRODUCT OVERVIEW



Figure 1: Casio G-Shock GM2110D-4A Octagonal Orange Stainless Steel Watch. This image shows the watch with its octagonal silver-tone stainless steel case and band, featuring an orange analog-digital dial. The dial displays the time 6:30 and the date 36, with 'G-SHOCK CASIO' and 'WR 20BAR PROTECTION' clearly visible. The watch's functional buttons, labeled 'ADJUST', 'MODE', 'LIGHT', and 'START', are positioned around the case.

The Casio G-Shock GM2110D-4A is a robust analog-digital watch designed for durability and functionality. It features an orange dial with silver-tone hands, housed within a silver-tone stainless steel case and band. Key features include quartz movement, 200-meter water resistance, and a scratch-resistant mineral crystal. The watch also includes various functions such as alarm, light, shock resistance, and a timer.

SETUP

1. Initial Time Setting

1. In the Timekeeping Mode, press and hold the **ADJUST** button (top left) until the city code starts to flash in the digital display. This indicates the setting mode.
2. Use the **MODE** button (bottom left) to cycle through the settings: City Code → DST → 12/24-hour format → Seconds → Hour → Minute → Year → Month → Day.
3. Use the **START** button (bottom right) or **LIGHT** button (top right) to change the flashing value.

4. After configuring all settings, press the **ADJUST** button to exit the setting mode. The analog hands will automatically adjust to the digital time.

2. Home City Selection

Selecting your Home City is crucial for correct timekeeping and World Time functions. Follow the initial time setting steps to select your desired city code.

OPERATING INSTRUCTIONS

1. Mode Navigation

Press the **MODE** button (bottom left) to cycle through the watch's various modes:

- Timekeeping Mode (current time and date)
- World Time Mode (times in different cities)
- Stopwatch Mode
- Timer Mode
- Alarm Mode

2. Timekeeping Mode

This mode displays the current time and date. Use the **ADJUST** button to enter setting mode for time and date adjustments as described in the "Setup" section.

3. World Time Mode

In World Time Mode, use the **START** button (bottom right) to scroll through different city codes and view their current times.

4. Stopwatch Mode

- Press **START** to begin timing.
- Press **START** again to pause/resume.
- Press **ADJUST** to reset the stopwatch to zero while it is paused.

5. Timer Mode

- In Timer Mode, press and hold **ADJUST** to enter setting mode.
- Use **MODE** to select hours, minutes, or seconds.
- Use **START** or **LIGHT** to change the values.
- Press **ADJUST** to exit setting mode.
- Press **START** to begin the countdown.

6. Alarm Mode

- In Alarm Mode, press and hold **ADJUST** to enter setting mode.
- Use **MODE** to select hour or minute.
- Use **START** or **LIGHT** to change the values.
- Press **ADJUST** to exit setting mode.
- Press **START** to toggle the alarm ON/OFF. An indicator will show when the alarm is active.

7. Illumination (Light)

Press the **LIGHT** button (top right) to illuminate the watch face for easy viewing in low-light conditions.

MAINTENANCE

1. Cleaning

Wipe the watch regularly with a soft, dry cloth to remove dirt and moisture. For stainless steel parts, a slightly damp cloth can be used, followed by a dry cloth. Avoid using chemical cleaners or solvents.

2. Water Resistance

This watch is water resistant to 200 meters (20 BAR). This means it is suitable for recreational scuba diving. Do not operate buttons while the watch is submerged in water. After exposure to saltwater, rinse the watch with fresh water and wipe it dry.

3. Battery Replacement

The watch is powered by a battery. When the display becomes dim or functions become erratic, it may be time for a battery replacement. It is recommended to have the battery replaced by an authorized Casio service center to ensure proper sealing and water resistance.

TROUBLESHOOTING

- **Digital display is blank or dim:** The battery may be low. Consider battery replacement.
- **Time is incorrect:** Ensure your Home City setting is correct and adjust the time as described in the "Setup" section. Check for DST (Daylight Saving Time) settings.
- **Analog hands do not match digital time:** Perform a hand alignment correction. Refer to the full Casio module manual for detailed steps, typically involving holding specific buttons in Timekeeping Mode to enter hand adjustment.
- **Watch stops working after exposure to water:** Immediately take the watch to an authorized service center. Do not attempt to open the watch yourself.

SPECIFICATIONS

Feature	Detail
Model Number	GM2110D-4A
Movement	Quartz (Analog-Digital)
Case Material	Stainless Steel
Band Material	Stainless Steel
Crystal	Scratch Resistant Mineral
Water Resistance	200 Meters (20 BAR)
Case Diameter	44 mm
Case Thickness	11.8 mm
Band Width	25 mm
Dial Color	Orange
Additional Features	Alarm, Light, Shock Resistant, Timer, World Time

WARRANTY AND SUPPORT

This Casio G-Shock watch comes with a limited warranty. For specific warranty terms, conditions, and duration, please refer to the warranty card included with your purchase or visit the official Casio website. For technical support, service, or inquiries, please contact Casio customer service directly.

You can find more information and support resources on the official Casio website: www.casio.com