

Manuals.plus /

› COBIZI /

› COBIZI Pop-up Gazebo Tent Instruction Manual

COBIZI 44S6

COBIZI Pop-up Gazebo Tent

INSTRUCTION MANUAL

Model: 44S6 | Brand: COBIZI

INTRODUCTION

Thank you for choosing the COBIZI Pop-up Gazebo Tent. This manual provides essential information for the safe and efficient setup, operation, and maintenance of your new outdoor shelter. Designed for convenience and durability, this gazebo is perfect for camping, garden gatherings, picnics, and other outdoor events, offering protection from sun, rain, and insects.

IMPORTANT SAFETY INFORMATION

Please read all safety warnings and instructions carefully before assembly and use.

- Always assemble and disassemble the gazebo with caution.
- Keep away from heat sources and open flames.
- Do not use in windy conditions exceeding 20 mph.
- Always secure the gazebo to a stable foundation using the provided stakes and ropes.
- Upon first opening, the screen tent may appear inside out. This is intentional for compact storage. Do not attempt to reverse it, as it may cause damage to the gazebo.

WHAT'S INCLUDED


Verify all components are present before beginning assembly:

PACKING LIST

Accessories and Parts Are Available




Ropes 4 pcs

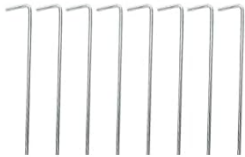

Stakes 8pcs



Tent Gazebo with Frame

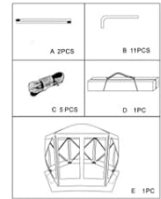

User Guide 1pc



Door Frame Poles 2pcs



Upgraded Carrying Bag

- 1 x Tent Gazebo with Frame
- 1 x Upgraded Carrying Bag
- 2 x Door Frame Poles
- 8 x Ground Stakes
- 4 x Ropes
- 1 x User Guide

If any accessories are missing or damaged, please contact customer service for prompt replacement.

SETUP GUIDE

The COBIZI Pop-up Gazebo Tent features an effortless setup design, allowing for quick assembly without the need for extra tools. Follow these steps for a smooth setup:

POP-UP STRUCTURE

Quick Setup in 60 Seconds without Extra Tools.

60  SECONDS



▶ STEP 1

UNZIP THE STORAGE BAG & REMOVE THE GAZEBO. THEN STAND IT ON THE CENTER ROOF HUB ASSEMBLY.



▶ STEP 2

OPEN WITH ROOF FACING UP WITH POLES ON THE INSIDE.



▶ STEP 3

WITH POLES ON THE INSIDE. REACH HANDLE AT PANEL CENTER AND PULL EACH WALL UNTIL SECTION POPS OUT.



▶ STEP 4

ENTER THROUGH DOOR AND PUSH ROOF CENTER HUB UP UNTIL ERECT.



▶ STEP 5

INSTALL THE SIDEWALLS.



▶ STEP 6


THEN IS ALL DONE

- Step 1: Unpack and Position.** Unzip the storage bag and remove the gazebo. Stand it on the ground with the center roof hub assembly facing upwards.
- Step 2: Initial Opening.** Open the gazebo with the roof facing up and poles on the inside.
- Step 3: Extend Walls.** With poles on the inside, reach for the handle at the center of each panel and pull each wall outwards until the section pops out and locks into place.
- Step 4: Erect Roof.** Enter through the door and push the roof center hub upwards until the entire structure is fully erect and stable.
- Step 5: Install Sidewalls (Optional).** If desired, install the included sidewalls for added privacy or weather protection.
- Step 6: Secure Gazebo.** Use the provided ground stakes and ropes to secure the gazebo firmly to the ground, especially in breezy conditions.

USAGE AND KEY FEATURES

Your COBIZI gazebo is designed for versatility and comfort in various outdoor settings.

Seasonal Use

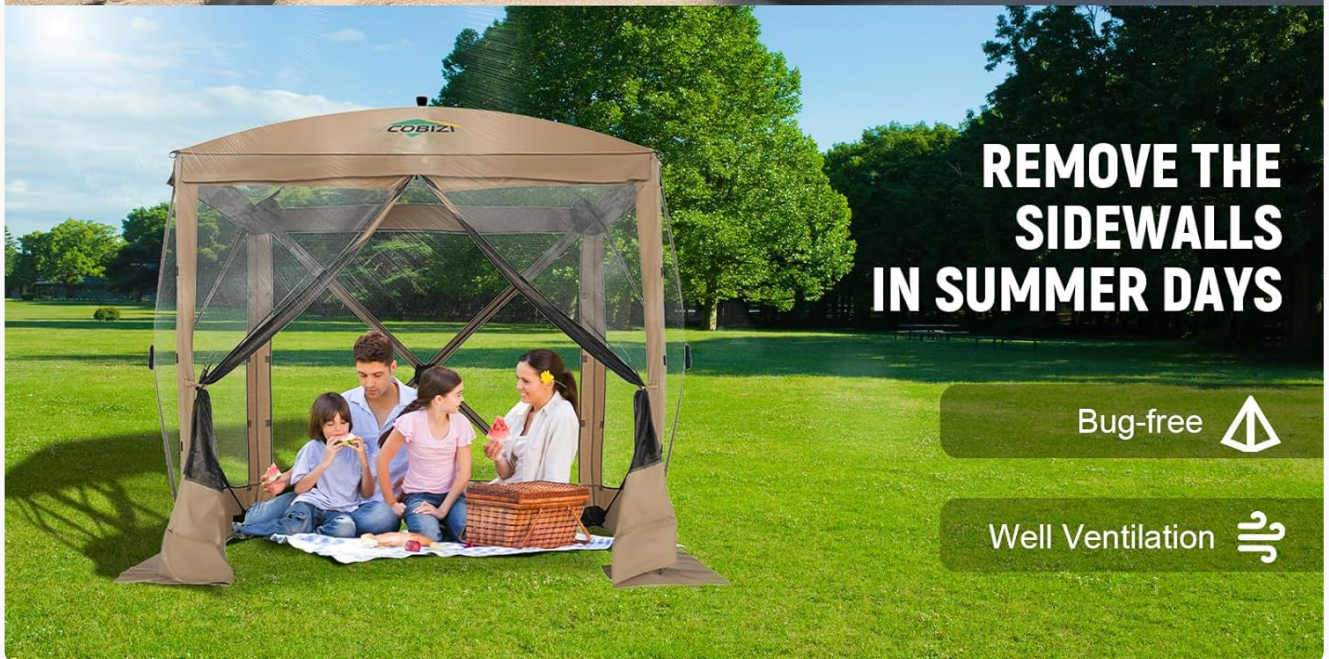

The gazebo can be adapted for different seasons:

- **Winter Days:** Attach the sidewalls for cold and privacy protection.
- **Summer Days:** Remove the sidewalls for a bug-free environment and excellent ventilation.

Premium Material & Protection



The gazebo features high-density 1800mm/300D Oxford cloth with a PU coating, providing:

- **UV Protection:** Shields occupants from harmful ultraviolet rays.
- **Waterproof:** Offers reliable protection against rain.

PREMIUM MATERIAL



Oxford Fabric



Waterproof



UV Protection

High-density Gauze Netting



Bite-Proof



Well Ventilated



The high-density gauze netting ensures a bite-proof environment while maintaining excellent ventilation.

Structural Components

4 SIDED POP-UP CANOPY

8X8 FT



Double-sided Zipper Door



Rainproof Reinforced Corners



Solid Ground Nail



Guy Ropes



Strong 4 Poles Support at Top



Durable Centre Support Hub

- **Double-sided Zipper Door:** Allows for smooth opening and closing from inside or outside.
- **Rainproof Reinforced Corners:** Enhance durability and water resistance.
- **Solid Ground Nails (Stakes):** Provide strong anchoring to the ground.
- **Guy Ropes:** Offer additional stability against wind.
- **Strong 4 Poles Support at Top:** Contributes to the overall structural integrity.
- **Durable Centre Support Hub:** Key to the quick pop-up mechanism and stability.

CARE AND MAINTENANCE

- **Cleaning:** Clean the fabric with mild soap and water. Do not use harsh chemicals or abrasive cleaners. Allow to air dry completely before storage.
- **Storage:** Ensure the gazebo is completely dry before folding and storing it in its carrying bag to prevent mold and mildew. Store in a cool, dry place away from direct sunlight.
- **Inspection:** Regularly inspect poles, fabric, zippers, and netting for any signs of wear or damage. Repair or replace damaged parts promptly to maintain product integrity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Gazebo difficult to set up or appears inverted.	Incorrect initial orientation or poles not fully extended.	Ensure the gazebo is opened with the roof hub facing up. Pull each wall panel firmly until it clicks into place. The initial 'inside-out' appearance is normal for compact storage.
Water leakage during rain.	Fabric not fully waterproofed or damaged.	Ensure all seams are properly sealed. Consider applying an additional waterproofing spray to the fabric if needed. Check for tears or punctures.
Gazebo unstable in wind.	Insufficient anchoring.	Always use all provided ground stakes and guy ropes. Ensure stakes are driven firmly into the ground. Do not use in high wind conditions (above 20 mph).

PRODUCT SPECIFICATIONS

PRODUCT SPECIFICATIONS

Product Weight: 24.6Lbs/11.2kg



Maximum for **4** people



1.8m/71"

1.8m/71"

2.2m/87"

Specification	Detail
Brand	COBIZI
Model Number	44S6
Material	Fiberglass (Frame), 1800mm/300D Oxford cloth with PU coating (Fabric)
Color	Khaki
Product Dimensions	72"L x 72"W x 86"H (1.8m x 1.8m x 2.2m)
Item Weight	24.6 Pounds (11.2 kg)
Floor Area	36 Square Feet
Water Resistance Level	Water Resistant
Ultraviolet Light Protection	Yes
Assembly Required	Yes
Maximum Capacity	4 People

WARRANTY AND CUSTOMER SUPPORT

Your COBIZI Pop-up Gazebo Tent comes with a **5-year warranty**, ensuring peace of mind regarding its quality and durability. This warranty covers manufacturing defects and significant material failures under normal use.

For any questions, assistance, or to report missing or damaged accessories, please contact our customer service team. We are committed to providing prompt and helpful support to ensure your satisfaction.

Contact Information: Please refer to the contact details provided on your purchase receipt or the COBIZI official website for the most current customer support options.