

40FHD-911

Generic Remote Control User Manual

FOR LISTO TV MODELS: 24HD766, 32HD844, 40FHD-911, 40FHD725, 40FHD036,
24HD-CAC843

Model: 40FHD-911

INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your Generic Infrared Remote Control. This remote is designed for seamless compatibility with various Listo TV models, including 24HD766, 32HD844, 40FHD-911, 40FHD725, 40FHD036, and 24HD-CAC843. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.

1. SETUP

Battery Installation

Your remote control requires two AAA alkaline batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align with the indicators inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Note: Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.

2. OPERATING

Basic Remote Control Functions

This infrared remote control operates your Listo TV directly without requiring any complex pairing. Ensure a clear line of sight between the remote control and your TV's infrared receiver.



Image: Front view of the Generic Infrared Remote Control. It features a standard layout with power, number, channel, volume, menu, and navigation buttons, all in black.

Key Button Functions:

- **Power ():** Turns the TV on or off.
- **Number Buttons (0-9):** Selects channels directly.
- **Volume Up/Down (VOL+/VOL-):** Adjusts the sound level.
- **Channel Up/Down (CH+/CH-):** Changes the TV channel sequentially.
- **Mute ():** Mutes or unmutes the TV sound.
- **Menu:** Accesses the TV's main menu.
- **Navigation Arrows (▲ ▼ ◀ ▶):** Navigates through menu options.
- **OK/Enter:** Confirms selections in menus.
- **Back/Exit:** Returns to the previous screen or exits the current menu.

For specific advanced functions, refer to your Listo TV's original user manual.

3. MAINTENANCE

Care and Maintenance

Cleaning:

To clean your remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use abrasive cleaners, alcohol, or chemical solvents, as these can damage the remote's surface or internal components.

Battery Replacement:

Replace batteries when the remote control becomes unresponsive or its range decreases significantly. Always replace both batteries with new AAA alkaline batteries.

Storage:

When not in use for extended periods, remove the batteries to prevent leakage, which can damage the remote control. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

4. TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote control is not working.	Dead or incorrectly inserted batteries.	Check battery orientation. Replace with new AAA alkaline batteries.
Buttons are unresponsive or delayed.	Low battery power; Obstruction between remote and TV.	Replace batteries. Ensure a clear line of sight to the TV's infrared receiver.
Short operating range.	Low battery power; Interference from other devices.	Replace batteries. Move closer to the TV. Remove any objects blocking the signal.
Remote works intermittently.	Loose batteries; Weak signal.	Ensure batteries are securely seated. Replace batteries.

If the problem persists after trying these solutions, please refer to the Support section for further assistance.

5. PRODUCT SPECIFICATIONS

Brand: Generic

Model Name: 40FHD-911

Compatible Devices: Listo Televisions (Models: 24HD766, 32HD844, 40FHD-911, 40FHD725, 40FHD036, 24HD-CAC843)

Connectivity Technology: Infrared

Number of Buttons: 10

Controller Type: Remote Control

Maximum Range: 10 Meters (approximately 33 feet)

Battery Description: AAA Alkaline (2 required)

Color: Black

Manufacturer: InfratexRC

Country of Origin: Poland

6. WARRANTY INFORMATION

This Generic Remote Control comes with a limited 1-year warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or battery leakage.

To claim warranty service, please retain your proof of purchase and contact the retailer or manufacturer's support as detailed in the Support section.

7. CUSTOMER SUPPORT

If you require further assistance or have questions not covered in this manual, please contact your retailer or the manufacturer, InfratexRC, directly. You may also visit the product page on the retailer's website for additional resources and FAQs.

For online support, please refer to the product listing where you purchased the item for contact details.