

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [FOWORE](#) /

› [FOWORE 3.2 Cuft Digital Home Safe Box Instruction Manual](#)

## FOWORE Fireproof Safe for Home 50CC

# FOWORE 3.2 Cuft Digital Home Safe Box Instruction Manual

Model: Fireproof Safe for Home 50CC

## 1. PRODUCT OVERVIEW

The FOWORE 3.2 Cuft Digital Home Safe Box is designed to secure your valuables with advanced features including a programmable digital keypad, emergency keys, and an anti-theft alarm system. Constructed from durable alloy steel, it offers robust protection for documents, electronics, and other important items.



Image: The FOWORE 3.2 Cuft Digital Home Safe Box with its door open, revealing various valuables such as cash, gold coins, jewelry, and documents neatly stored inside. The digital keypad and emergency keyhole are visible on the exterior.

### Key Features:

- **Spacious Interior:** 3.2 cubic feet of storage capacity, suitable for various items.
- **Durable Construction:** Made from cold-rolled alloy steel with a 50mm thick door and 20mm locking bolts for enhanced security.
- **Multiple Access Methods:** Digital keypad with programmable passcode, emergency backup keys, and an

external battery box for power failure.

- **Anti-Theft Alarm:** Activates after three incorrect passcode entries.
- **Mute Mode:** Option to silence keypad beeps and alarm for discreet operation.
- **Internal LED Light:** Provides visibility inside the safe.
- **Removable Shelf:** Allows for flexible organization of storage space.
- **Mounting Capability:** Pre-drilled holes for securing the safe to a wall or floor.

## 2. PACKAGE CONTENTS

Upon unpacking, please verify that all components are present:

- 1 x FOWORE 3.2 Cuft Digital Home Safe Box
- 2 x Emergency Backup Keys
- 1 x External Battery Box
- 4 x Expansion Screws (for mounting)
- 1 x Scratch-Resistant Felt Pad
- 1 x Fireproof Waterproof Bag
- 1 x User Manual (this document)

**Important:** Each safe keyhole has a unique code. Keep this code in a secure location separate from the safe for key replacement if needed.



Image: A visual representation of the items included in the package: the safe, two emergency keys, four expansion screws, a felt pad, an external battery box, and the user manual.

## 3. SETUP INSTRUCTIONS

### 3.1 Initial Opening

For the first-time operation, use the emergency backup key to open the safe.

1. Locate the emergency keyhole, usually hidden behind the keypad cover or a small panel.
2. Insert one of the provided emergency keys into the keyhole.
3. Turn the key clockwise while simultaneously turning the knob clockwise to open the safe door.

### 3.2 Battery Installation

The digital keypad requires 4 AA batteries (not included).

1. Open the safe door using the emergency key.
2. Locate the battery compartment on the inside of the safe door.
3. Insert 4 AA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover.

### 3.3 Setting Your Passcode

After installing batteries, you can set your personal passcode (3 to 8 digits).

1. With the safe door open, press the red reset button located on the inside of the door (usually near the hinge). The keypad will beep, and the indicator light will flash.
2. Enter your desired 3 to 8 digit passcode on the keypad.
3. Confirm the passcode by pressing the "#" or "\*" key. The safe will beep again, indicating successful programming.
4. Test the new passcode with the door open before closing it.

### 3.4 Mounting the Safe

To enhance security, the safe can be fixed to a wall or floor using the provided expansion screws.

1. Choose a suitable location for mounting.
2. Mark the drilling points through the pre-drilled holes on the back or bottom of the safe.
3. Drill holes in the wall or floor at the marked positions.
4. Align the safe with the drilled holes and insert the expansion screws.
5. Tighten the screws securely to fix the safe in place.



Image: A three-step diagram demonstrating how to mount the safe to a wall or floor. Step 1 shows marking the drill points, Step 2 shows drilling, and Step 3 shows securing the safe with expansion screws.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Opening the Safe

There are three primary methods to open your FOWORE safe:

#### Method 1: Using the Digital Passcode

1. Enter your 3 to 8 digit passcode on the keypad.
2. Press the "#" or "\*" key to confirm.
3. Within 5 seconds, turn the knob clockwise to open the door.

## Method 2: Using the Emergency Backup Key

This method is useful if you forget your passcode or if the batteries are depleted.

1. Insert the emergency key into the keyhole.
2. Turn the key clockwise while simultaneously turning the knob clockwise to open the door.

## Method 3: Using the External Battery Box

If the internal batteries are dead and you do not have the emergency key readily available, the external battery box can provide temporary power.

1. Connect the external battery box to the power port on the keypad.
2. Enter your passcode on the keypad.
3. Turn the knob clockwise to open the door.
4. Replace the internal batteries as soon as possible.



Image: A visual guide illustrating the three unlocking methods for the safe: using the digital keypad and knob, using the emergency key and knob, and using the external battery box with the keypad and knob.

## 4.2 Anti-Theft Alarm and Mute Mode

The safe is equipped with an intelligent alarm system and a mute function.

- **Alarm Activation:** If an incorrect passcode is entered three times consecutively, the alarm system will activate, emitting an audible alert.
- **Mute Mode:** To enable or disable mute mode (silencing keypad beeps and the alarm), press and hold the "\*" key, then press the "8" key. The safe will confirm the change with a short beep or by indicating the mode change.



Image: On the left, a depiction of a burglar attempting to open the safe, triggering a red alarm light. On the right, a person sleeping, illustrating the silent operation of the safe when mute mode is activated.

## 5. MAINTENANCE

### 5.1 Battery Replacement

Replace batteries promptly when the low battery indicator appears or if the keypad becomes unresponsive. Always use 4 new AA alkaline batteries.

### 5.2 Cleaning

Wipe the exterior of the safe with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish or keypad.

### 5.3 Key Storage

Always store emergency backup keys in a secure location **outside** the safe. This ensures access in case of battery failure or forgotten passcode.

### 5.4 Removable Shelf

The internal shelf can be removed to accommodate larger items. Simply lift and slide it out of its supports.

Reinsert by aligning it with the supports and lowering it into place.



Image: A split image showing the safe's interior. On the left, the safe is shown with the removable shelf installed, organizing various items. On the right, the shelf is removed, creating a single large storage compartment.

## 6. TROUBLESHOOTING

- **Safe will not open with passcode:**

- Ensure batteries are not depleted. Use the external battery box or emergency key.
- Verify the correct passcode is being entered.
- Ensure the knob is turned clockwise immediately after entering the correct passcode.

- **Keypad is unresponsive:**

- Replace the internal batteries.
- Use the external battery box for temporary power.

- **Alarm sounds unexpectedly:**

- The alarm activates after three incorrect passcode entries. Enter the correct passcode to disarm.
- If the alarm sounds without interaction, check for loose connections or contact support.

- **Lost emergency keys:**

- Refer to the unique code provided with your safe to order replacement keys from FOWORE customer support.

## 7. SPECIFICATIONS

<b>Brand</b>	FOWORE
<b>Model Number</b>	Fireproof Safe for Home 50CC
<b>Product Dimensions (D x W x H)</b>	12.2" x 13.8" x 19.7" (31cm x 35cm x 50cm)
<b>Capacity</b>	2.8 Cubic Feet
<b>Item Weight</b>	33.07 Pounds
<b>Material</b>	Alloy Steel
<b>Lock Type</b>	Electronic Digital Keypad, Spare Keys
<b>Special Features</b>	Alarm System, Anti-Theft, Combination Lock, Fire Resistant, Sensor Light

<b>Mounting Type</b>	Floor and Wall Mount
<b>Alarm</b>	Beeping & Silent Mode
<b>Water Resistance Level</b>	Not Water Resistant
<b>Batteries Required</b>	Yes (4 x AA, not included)



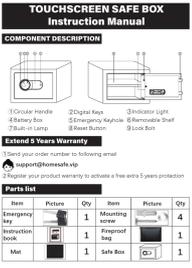
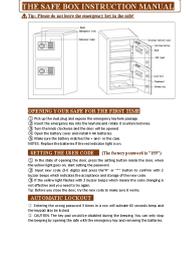
Image: A diagram illustrating the external dimensions of the safe: 12.2 inches (31cm) deep, 13.78 inches (35cm) wide, and 19.68 inches (50cm) high.

## 8. WARRANTY AND SUPPORT

FOWORE offers a 6-year return or exchange warranty and lifetime technical support for this product.

For technical assistance, warranty claims, or to order replacement keys using your unique key code, please contact FOWORE customer support. Refer to the contact information provided with your purchase documentation or visit the official FOWORE website.

## Related Documents - Fireproof Safe for Home 50CC

 <p><b>TOUCHSCREEN SAFE BOX</b> Instruction Manual</p> <p><b>COMPONENT DESCRIPTION</b></p> <p>1. Outer handle 2. Digital key 3. Indicator light 4. Battery box 5. Emergency keyhole 6. Removable shelf 7. Lock button 8. Emergency button 9. Lock button</p> <p><b>Extend 5 Years Warranty</b></p> <p>1. Send your order number to following email: <a href="mailto:report@homewatch.com">report@homewatch.com</a></p> <p>2. Complete your purchase information to receive a free 5-year protection.</p> <p><b>Parts list</b></p> <table border="1"> <thead> <tr> <th>Item</th> <th>Picture</th> <th>Qty</th> <th>Item</th> <th>Picture</th> <th>Qty</th> </tr> </thead> <tbody> <tr> <td>Emergency key</td> <td></td> <td>1</td> <td>Mounting screw</td> <td></td> <td>4</td> </tr> <tr> <td>Instruction book</td> <td></td> <td>1</td> <td>Emergency lock</td> <td></td> <td>1</td> </tr> <tr> <td>Mat</td> <td></td> <td>1</td> <td>Safe Box</td> <td></td> <td>1</td> </tr> </tbody> </table>	Item	Picture	Qty	Item	Picture	Qty	Emergency key		1	Mounting screw		4	Instruction book		1	Emergency lock		1	Mat		1	Safe Box		1	<p><a href="#">Touchscreen Safe Box Instruction Manual</a></p> <p>Comprehensive instruction manual for the Touchscreen Safe Box, covering component descriptions, parts list, initial use, battery insertion, opening and closing the door, dual alarm system, setting user and administrator codes, mute mode, factory reset, and mounting instructions.</p>
Item	Picture	Qty	Item	Picture	Qty																				
Emergency key		1	Mounting screw		4																				
Instruction book		1	Emergency lock		1																				
Mat		1	Safe Box		1																				
 <p><b>THE SAFE BOX INSTRUCTION MANUAL</b></p> <p>Tip: Please do not have the emergency key in the safe!</p> <p><b>PLEASE READ THE SAFETY PRECAUTIONS</b></p> <p>1. Do not use the safe for storing flammable, explosive, or toxic substances.</p> <p>2. Do not use the safe for storing highly corrosive or highly acidic substances.</p> <p>3. Do not use the safe for storing highly volatile or highly flammable substances.</p> <p>4. Do not use the safe for storing highly volatile or highly flammable substances.</p> <p>5. Do not use the safe for storing highly volatile or highly flammable substances.</p> <p>6. Do not use the safe for storing highly volatile or highly flammable substances.</p> <p>7. Do not use the safe for storing highly volatile or highly flammable substances.</p> <p>8. Do not use the safe for storing highly volatile or highly flammable substances.</p> <p>9. Do not use the safe for storing highly volatile or highly flammable substances.</p> <p>10. Do not use the safe for storing highly volatile or highly flammable substances.</p>	<p><a href="#">Safe Box Instruction Manual - Operating and Mounting Guide</a></p> <p>Comprehensive guide for the Safe Box, covering first-time opening, user code setting, automatic lockout features, technical specifications, and mounting instructions. Learn how to secure your valuables with this home safe.</p>																								
 <p><b>VEVOR®</b> TOUGH TOOLS. HALF PRICE</p> <p>Tip: Please do not have the emergency key in the safe!</p> <p><b>FIREPROOF BAG</b> USER MANUAL</p> <p>No liability is assumed by the manufacturer for any damage caused by the use of the product in a way not intended by the manufacturer.</p>	<p><a href="#">VEVOR YX20230216-002 Fireproof Bag User Manual   Safety and Specifications</a></p> <p>Official user manual for the VEVOR YX20230216-002 Fireproof Bag. Learn about assembly precautions, usage guidelines, technical specifications, and contact information for support.</p>																								
 <p><b>SAFE BOX INSTRUCTION MANUAL</b></p> <p>Tip: Please do not have the emergency key in the safe!</p> <p><b>Indicator light</b> ① Emergency keyhole ② Digital key ③ Emergency button ④ Lock button</p> <p><b>Dear valued customer!</b></p> <p>Thank you for choosing our products. We have been an important step in organizing and protecting your most valued possessions. Every aspect of our safety products is made and designed to provide safety. Please take time to read and familiarize yourself with the proper operating procedures of your new safe presented on the following pages.</p>	<p><a href="#">Safe Box Instruction Manual: Setup, Operation, and Mounting Guide</a></p> <p>Comprehensive instruction manual for operating and mounting your safe box. Covers first opening, setting user codes, alarm settings, and installation procedures. Includes troubleshooting tips and contact information.</p>																								
 <p><b>VEVOR®</b> TOUGH TOOLS. HALF PRICE</p> <p>Tip: Please do not have the emergency key in the safe!</p> <p><b>FIREPROOF BAG</b> USER MANUAL</p> <p>No liability is assumed by the manufacturer for any damage caused by the use of the product in a way not intended by the manufacturer.</p>	<p><a href="#">VEVOR Fireproof Bag User Manual - Model YX20230216-003</a></p> <p>Comprehensive user manual for the VEVOR Fireproof Bag (Model YX20230216-003). Includes safety warnings, assembly precautions, usage guidelines, technical specifications, and contact information for support.</p>																								
 <p><b>bonsai</b> Instruction Manual DIGITAL SAFES WITH ELECTRONIC LOCK (SF001/SF002/SF003)</p> <p><b>PLEASE READ THE SAFETY PRECAUTIONS CAREFULLY BEFORE USE. PLEASE READ AND KEEP FOR FUTURE REFERENCE.</b></p> <p>© 2023 Bonsai Safe Co. All rights reserved.</p>	<p><a href="#">Bonsai SF001/SF002/SF003 Digital Safe Instruction Manual</a></p> <p>Comprehensive instruction manual for Bonsai SF001, SF002, and SF003 digital safes with electronic locks. Learn about safety, battery replacement, code setting, unlocking, locking, securing, cleaning, maintenance, troubleshooting, and disposal.</p>																								

