

- Manuals.plus /
- > [Pomya](#) /
 - > Pomya MP3 Player User Manual

Pomya Pomya1ha2b5emgz-13

Pomya MP3 Player User Manual

Model: Pomya1ha2b5emgz-13

INTRODUCTION

Thank you for choosing the Pomya MP3 Player. This portable music player features a 1.8-inch touchscreen, built-in speaker, and Bluetooth 5.0 connectivity, designed for an immersive audio experience on the go. This manual provides essential information on how to set up, operate, and maintain your device, ensuring optimal performance and longevity.





Image: Front view of the Pomya MP3 Player, showcasing its 1.8-inch touchscreen interface with various application icons such as Music, Video, Record, FM, Ebook, Tools Folder, and Settings. Physical navigation buttons are visible below the screen.

SETUP

1. Charging the Device

Before first use, fully charge your MP3 player. Connect the included USB charging cable to the device's charging port and a compatible USB power source (e.g., computer USB port or a USB wall adapter). A full charge typically takes 2-3 hours.

2. Inserting a Memory Card (Optional)

The MP3 player supports memory cards (TF cards) up to 128GB for expanded storage. Locate the memory card slot on the side or bottom of the device. Gently insert the memory card until it clicks into place. Ensure the card is inserted in the correct orientation.





Image: Back view of the Pomya MP3 Player, highlighting the TF card slot for expandable storage, the 3.5mm headphone jack, and the USB charging port. Device information and regulatory marks are also visible.

3. Powering On/Off

To power on the device, press and hold the power button located on the side. To power off, press and hold the power button again until the shutdown prompt appears, then confirm.

OPERATING INSTRUCTIONS

1. Navigating the Touchscreen

The 1.8-inch touchscreen allows for intuitive navigation. Tap icons to select applications or options. Swipe to scroll through lists or pages. Use the physical buttons below the screen for additional control, such as volume adjustment, play/pause, and track skipping.

2. Music Playback

From the main menu, tap the 'Music' icon. You can browse music by artist, album, genre, or folder. The player supports MP3, WAV, WMA, APE, and FLAC formats. Use the on-screen controls or physical buttons to play, pause, skip tracks, and adjust volume. The built-in speaker provides clear audio, or you can connect headphones via the 3.5mm jack.

3. Video Playback

Tap the 'Video' icon to access video files. The player supports AMV and AVI formats. Ensure video files are in a compatible format for smooth playback.

4. Bluetooth Connectivity

The MP3 player features upgraded Bluetooth 5.0 for stable wireless connections. To pair with Bluetooth headphones or speakers:

1. Go to 'Settings' and select 'Bluetooth'.
2. Turn Bluetooth on.
3. The player will scan for available devices. Select your device from the list to pair.

5. FM Radio

Select the 'FM' icon to access the built-in FM radio. You may need to connect wired headphones to act as an antenna for better reception.

6. Voice Recording

Tap the 'Record' icon to use the voice recording function. Ensure sufficient storage space is available.

7. E-book Reader

The 'Ebook' function allows you to read text files. Transfer compatible text files to the device's storage.

MAINTENANCE

To ensure the longevity and optimal performance of your Pomya MP3 Player, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the screen and body of the device. Avoid using abrasive cleaners or solvents.
- **Storage:** Store the device in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Handling:** Avoid dropping the device or subjecting it to strong impacts. The touchscreen is sensitive and can be

damaged by excessive force.

- **Water Exposure:** This device is not waterproof. Avoid exposure to water or other liquids.
- **Battery Care:** For best battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.

TROUBLESHOOTING

If you encounter issues with your MP3 player, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not turn on	Low battery; System crash	Charge the device for at least 30 minutes. If unresponsive, perform a hard reset (refer to device manual for specific reset instructions, usually holding power button for 10+ seconds).
No sound from headphones/speaker	Volume too low; Faulty headphones; Corrupt audio file	Increase volume. Test with different headphones. Ensure audio file is not corrupted and is in a supported format.
Cannot connect to Bluetooth device	Bluetooth off; Device not in pairing mode; Interference	Ensure Bluetooth is enabled on both devices. Put the other device in pairing mode. Move closer to the device and away from other wireless interference.
Screen is unresponsive	Temporary software glitch	Restart the device. Ensure screen is clean and dry.
Files not recognized	Unsupported format; Corrupt file	Ensure files are in supported formats (MP3, WAV, WMA, APE, FLAC for audio; AMV, AVI for video). Try re-transferring the files.

SPECIFICATIONS



Image: The Pomya MP3 Player shown with its approximate dimensions: 96mm (3.8in) in length, 40mm (1.6in) in width, and 10mm (0.4in) in thickness.

Feature	Detail
Product Dimensions	Approx. 96x40x10mm / 3.8x1.6x0.4in
Item Weight	4.2 ounces
Display	1.8 Inch Touchscreen
Music Format Support	MP3, WAV, WMA, APE, FLAC
Video Format Support	AMV, AVI
Picture Function	JPEG, BMP
Headphone Output	3.5mm
Expansion Interface	Memory Card (Up to 128GB Support, not included)
Battery Type	300mAh Lithium Ion Battery (built-in)
Battery Life	Up to 15 hours (lossless music playback)
Charging Time	2-3 hours
Connectivity Technology	Bluetooth 5.0

PACKAGE CONTENTS

The following items are included in your product package:

- 1 x Music Player (Pomya MP3 Player)
- 1 x USB Charging Cable
- 1 x Earphone



Image: The Pomya MP3 Player displayed alongside its included accessories: a USB charging cable and a pair of wired earphones.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product packaging or visit the official Pomya website. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DFVQTQQL>

More documents and user manuals: <https://manuals.plus/>