



[Manuals.plus](#) /

> [AECOJOY](#) /

> AECOJOY Outdoor Patio Swing Chair (Model 16-6AVG-XL75) Instruction Manual

AECOJOY 16-6AVG-XL75

AECOJOY Outdoor Patio Swing Chair (Model 16-6AVG-XL75) Instruction Manual

INTRODUCTION

Thank you for choosing the AECOJOY Outdoor Patio Swing Chair. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your 3-seat porch swing with an adjustable canopy. Please read these instructions thoroughly before assembly and use to ensure proper function and longevity of your product.

PRODUCT DIMENSIONS

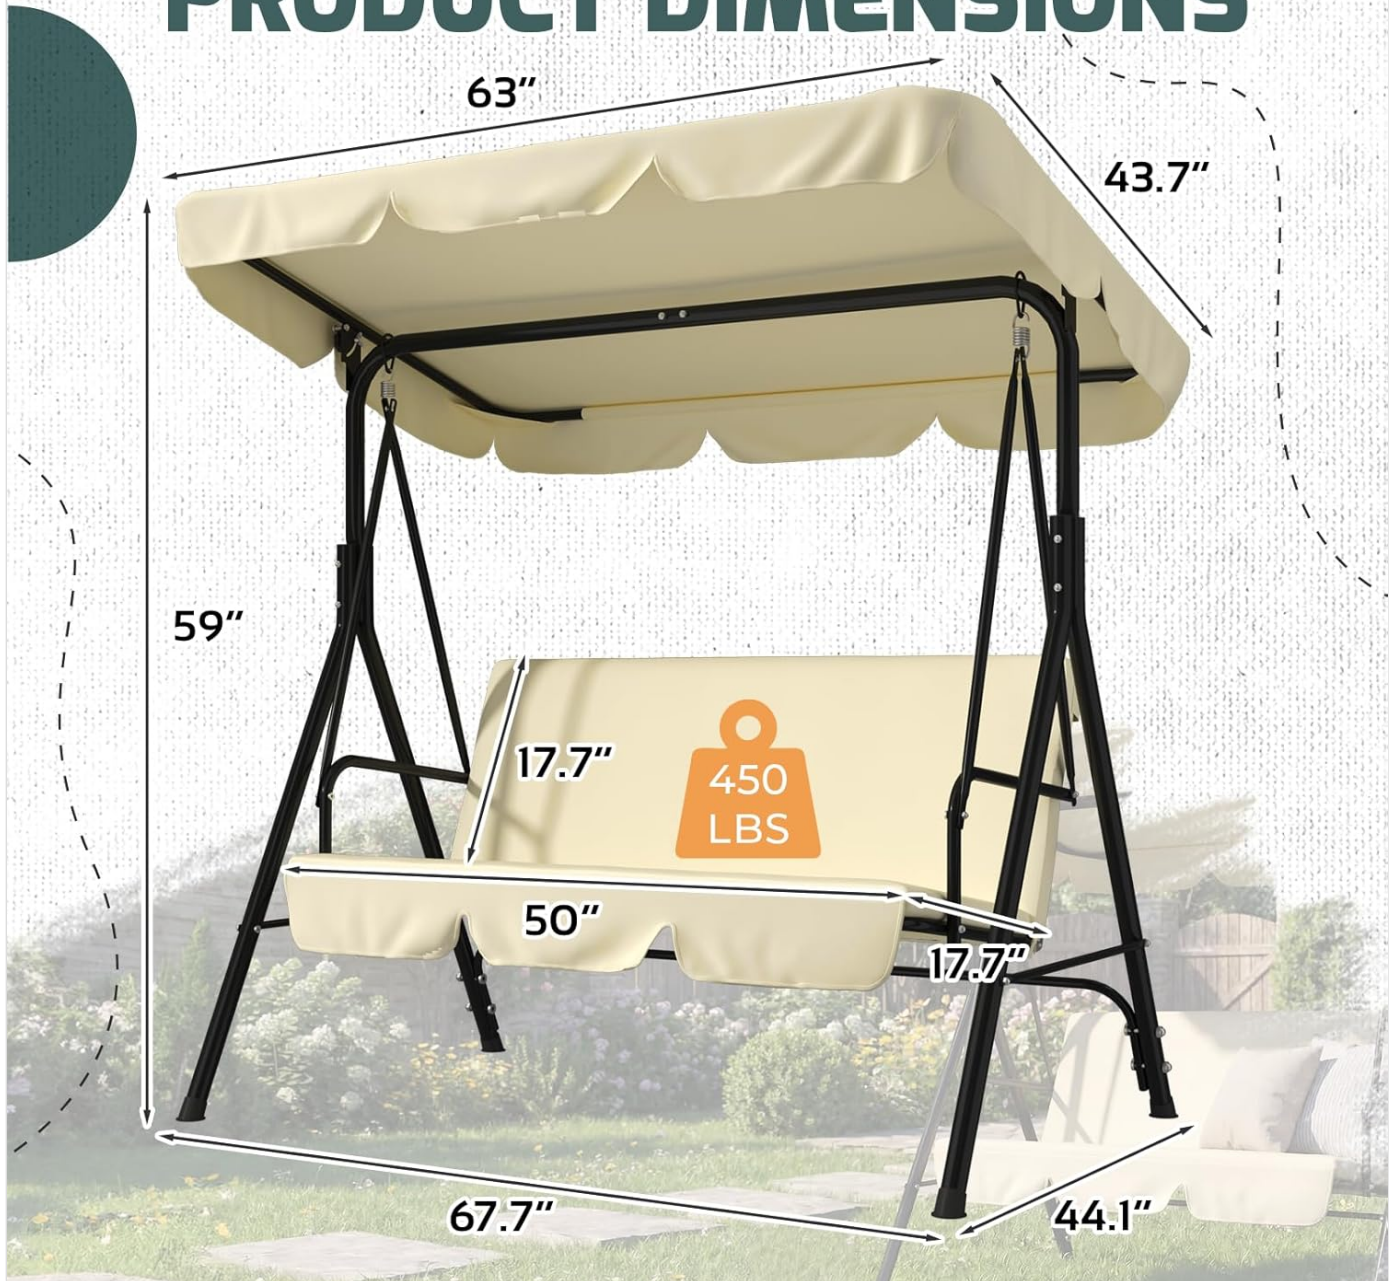


Image: The AECOJOY 3-Seat Outdoor Patio Swing Chair, showcasing its design and suitability for outdoor environments.

1. SETUP AND ASSEMBLY

The AECOJOY Outdoor Patio Swing Chair requires assembly. All necessary hardware and detailed instructions are included. We recommend two persons for assembly to ensure safety and ease of installation. A socket wrench may be helpful for tightening bolts securely.

1.1 Unpacking and Parts Verification

- Carefully unpack all components from the packaging.
- Refer to the included parts list to verify that all pieces are present and undamaged. If any parts are missing or damaged, please contact customer support.

1.2 Assembly Steps

Follow the step-by-step instructions provided in the assembly manual. Pay close attention to the orientation of parts and the correct hardware for each connection. Ensure all bolts are tightened firmly but do not overtighten.

Removable Cushion & Comfort Armrests

Skin-friendly Oxford fabric



Thick foam padding



Curved armrest

Image: Close-up view of the swing chair's stable and safe design features, such as non-slip foot pads, strong spring hooks for smooth motion, and the solid alloy steel frame.

1.3 Placement Considerations

Place the swing chair on a flat, stable surface. Ensure there is adequate clearance around the swing for safe operation. The non-slip feet pads help prevent scratching and provide stability.

2. OPERATING INSTRUCTIONS

2.1 Seating Capacity and Weight Limit

This swing chair is designed to comfortably seat three adults. The maximum weight recommendation is 204.12 kg (450 lbs). Do not exceed this weight limit to ensure safety and prevent damage to the product.

2.2 Adjustable Canopy

The canopy can be adjusted to various angles to provide optimal shade and protection from light rain. To adjust, locate the knobs on the side of the canopy frame, loosen them, position the canopy to your desired angle, and then tighten the knobs to secure it.

Stable and Safe Details



Non-Slip Foot Pads



Strong Spring Hooks



Solid Steel Frame

Image: Illustration demonstrating the adjustable canopy feature, highlighting the knob used to change the sunshade angle for sun protection, fade resistance, and drizzle proofing.

2.3 Smooth Swinging Motion

The swing seat is connected to the frame with a heavy spring structure, providing a smooth and gentle rocking motion. Ensure all connections are secure before use.

Your browser does not support the video tag.

Video: A demonstration of a porch swing, illustrating the general operation and smooth motion of such a product. This video is provided by the seller.

3. MAINTENANCE

Regular maintenance will extend the life and appearance of your swing chair.

3.1 Cleaning the Cushion and Canopy

The canopy and cushion are made of polyester fabric, which is easy to clean. The cushion is detachable and removable, allowing for easy washing. You can clean them using a garden hose with mild soap and water, then air dry completely.

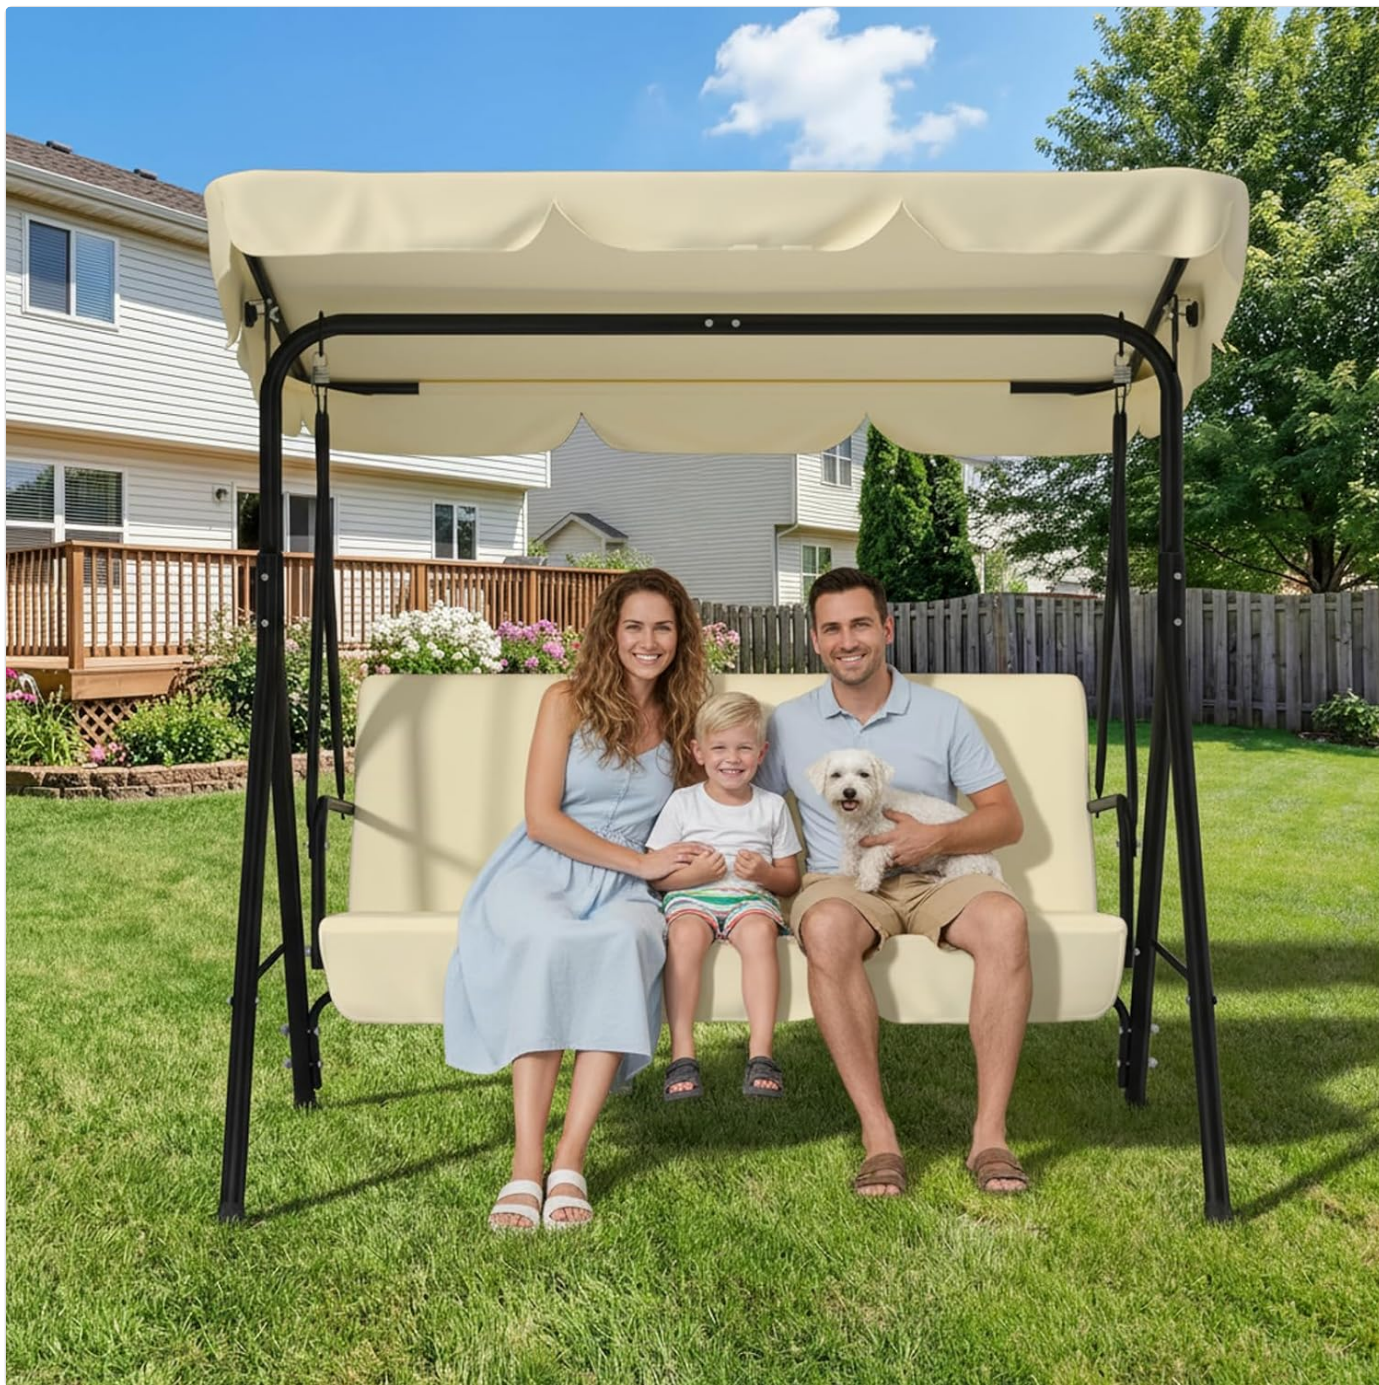


Image: Detail of the removable cushion, highlighting its thick foam padding and the skin-friendly Oxford fabric, along with the curved armrests for comfort.

3.2 Frame Care

The frame is constructed from weather-resistant powder-coated steel. Wipe the frame with a damp cloth to remove dirt and debris. Avoid using harsh chemicals or abrasive cleaners that could damage the finish. Periodically check all bolts and connections and tighten if necessary.



Image: The swing chair designed to withstand various weather conditions, including sunny and rainy environments, ensuring durability.

3.3 Seasonal Storage

During prolonged periods of non-use or severe weather, it is recommended to store the swing chair indoors or cover it with a protective outdoor furniture cover to prevent wear and tear.

4. TROUBLESHOOTING

This section addresses common issues you might encounter.

4.1 Missing or Damaged Parts

- If you discover missing or damaged parts upon unpacking, do not proceed with assembly.
- Contact AECOJOY customer support immediately for assistance and replacement parts.

4.2 Difficulty During Assembly

- Review the assembly instructions carefully, paying attention to diagrams and part numbers.
- Ensure all parts are oriented correctly before attempting to connect them.
- Do not force parts together. If a part does not fit, re-check the instructions and ensure you are using the correct components.
- Having a second person assist can significantly ease the assembly process.

4.3 Instability or Wobbling

- Ensure the swing chair is placed on a completely flat and level surface.
- Check all bolts and connections to ensure they are securely tightened. Loose connections can cause instability.

5. SPECIFICATIONS

Brand	AECOJOY
Model Number	16-6AVG-XL75
Colour	Beige
Material	Alloy Steel, Polyester
Frame Material	Alloy Steel

Item Weight	151 Pounds (approx. 68.5 kg)
Maximum Weight Recommendation	204.12 kg (450 lbs)
Assembly Required	Yes



Image: Detailed product dimensions, including overall height, width, depth, seat dimensions, and weight capacity.

6. WARRANTY INFORMATION

Specific warranty details are not provided in the product information. Please refer to your purchase documentation or contact the seller directly for information regarding warranty coverage and terms.

7. CUSTOMER SUPPORT

If you encounter any problems with your AECOJOY Outdoor Patio Swing Chair, require assistance with assembly, or have

questions regarding its use or maintenance, please do not hesitate to contact AECOJOY customer support. Refer to your purchase receipt or the seller's contact information for the most direct support channels.