

[Manuals.plus](#) /

› [VEVOR](#) /

› VEVOR Play Kitchen Model TLG81021 User Manual

VEVOR TLG81021

VEVOR Play Kitchen Model TLG81021 User Manual

Comprehensive instructions for assembly, operation, and maintenance.

1. INTRODUCTION AND OVERVIEW

This manual provides detailed instructions for the VEVOR Play Kitchen, Model TLG81021. This wooden toy kitchen set is designed for children aged 3-8 years, offering a realistic and interactive play experience. It features a stove with lights and sounds, an ice maker, an oven, a sink, a microwave, and a refrigerator, encouraging imaginative play and skill development.



Image 1.1: The VEVOR Play Kitchen, Model TLG81021, showcasing its various components including the microwave, stove, sink, and storage areas.

2. SAFETY INFORMATION

For the safety of your child, please observe the following guidelines:

- Adult supervision is recommended during play, especially for younger children.
- The small ice cubes included with the ice maker feature may pose a choking hazard for toddlers. Ensure children are old enough to play with these items safely or remove them if necessary.
- Ensure all parts are securely assembled before allowing children to play. Regularly check for loose components.
- This product is made from health-friendly wood (melamine board) and innocuous paint. Avoid exposing the product to excessive moisture or direct sunlight to prevent damage.



Image 2.1: Illustration of the health-friendly wood (melamine board) and innocuous paint used in the VEVOR Play Kitchen construction, emphasizing safety.

3. PACKAGE CONTENTS

The VEVOR Play Kitchen package includes the following items:

- 1 x VEVOR Play Kitchen Playset (Model TLG81021)
- 1 x User Manual
- **Accessories:**
 - 3 x Stainless Steel Spatulas
 - 1 x Stew Pot
 - 1 x Frying Pan
 - 1 x Cutting Board
 - 1 x Fruit Knife
 - 1 x Vegetable Basket
 - 1 x Bowl
 - 1 x Basin
 - 1 x Water Cup
 - 1 x Ice Maker Cup

- 1 x Spoon
- 1 x Fork
- 1 x Knife
- 9 x Lifelike Fruits and Vegetables

VEVOR
TOUGH TOOLS, HALF PRICE

RICH ACCESSORIES MULTIPLE COMBINATIONS



Innovative Design



Safe and Health-Friendly



Highly Interactive



Role Play



Image 3.1: A selection of the 24 rich accessories included with the VEVOR Play Kitchen, such as spatulas, pots, and various play food items.

4. SETUP AND ASSEMBLY

The VEVOR Play Kitchen requires assembly. Please follow the step-by-step picture instructions provided in the included user manual carefully. Assembly typically takes 2-3 hours. A power drill is recommended to expedite the process.

4.1. Pre-Assembly Checklist

- Unpack all components and verify against the package contents list.
- Ensure you have a clear, spacious area for assembly.
- Gather necessary tools, such as a screwdriver (manual or power drill) and possibly a hammer.

4.2. Assembly Steps

1. Refer to the detailed pictorial guide in the separate user manual for specific assembly sequences.
2. Identify each board and hardware piece using the labels provided.
3. Assemble the base structure first, ensuring all connections are tight.
4. Attach the various kitchen components (oven, microwave, sink, ice maker) as indicated.
5. Install any accessories or decorative elements last.



Image 4.1: Rear view of the VEVOR Play Kitchen, illustrating the structural components and assembly points.

INTEGRATED DESIGN AGAINST THE WALL SAVES SPACE



Image 4.2: Diagram showing the dimensions of the VEVOR Play Kitchen: 34.9 inches wide, 12.5 inches deep, and 35.6 inches high, with a counter height of approximately 19 inches.

5. OPERATING INSTRUCTIONS

The VEVOR Play Kitchen is designed for interactive play. Here's how to use its various features:

5.1. Battery Installation

The stove's lights and sounds require 6 x 1.5V button cell batteries. Locate the battery compartment, typically on the underside or rear of the stove unit, and insert batteries according to polarity markings. Secure the cover.

5.2. Stove with Lights and Sounds

- Turn the stove knobs to activate realistic cooking sounds and lights on the burners.

5.3. Ice Maker

- Press the button or lever on the ice maker to release play ice cubes into the cup.

5.4. Microwave

- Open the microwave door and place play food inside.
- Press the buttons on the control panel to simulate heating food.

5.5. Oven

- Open the oven door to place play food inside, simulating a baking process.

5.6. Sink and Faucet

- The faucet features realistic dual switches and a rotating design for pretend washing. Note that the faucet does not dispense real water.



Image 5.1: Close-up views of the interactive elements including the ice maker, microwave, oven, faucet, and stove, demonstrating their functions.

6. MAINTENANCE

Proper maintenance will ensure the longevity of your VEVOR Play Kitchen:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the wood or paint finish.
- **Storage:** Store the play kitchen in a dry environment, away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten if necessary to maintain structural integrity.
- **Battery Replacement:** Replace batteries in the stove unit when lights dim or sounds become faint. Dispose of used batteries responsibly.

7. TROUBLESHOOTING

If you encounter any issues with your VEVOR Play Kitchen, refer to the following common solutions:

Problem	Possible Cause	Solution
Stove lights/sounds not working.	Batteries are dead or incorrectly installed.	Check battery polarity and replace with new 6 x 1.5V button cell batteries.
Doors (oven, microwave, fridge) are difficult to open or close.	Hinges may be stiff or misaligned.	Apply gentle force. If persistent, check hinge screws for tightness. Avoid forcing doors to prevent damage.
Missing parts after assembly.	Packaging error or oversight during unpacking.	Carefully re-check all packaging materials. If still missing, contact VEVOR customer support.
Product instability.	Loose fasteners or uneven assembly.	Ensure all screws are tightened. Verify the play kitchen is on a flat, level surface.

8. SPECIFICATIONS

Detailed specifications for the VEVOR Play Kitchen, Model TLG81021:

- **Model Number:** TLG81021
- **Brand:** VEVOR
- **Product Dimensions:** 34.9 inches (Width) x 12.5 inches (Depth) x 35.6 inches (Height)
- **Counter Height:** Approximately 18.8 - 19 inches
- **Item Weight:** 32 pounds (14.4 kg)
- **Material:** Health-friendly wood (Melamine Board)
- **Paint:** Innocuous paint
- **Recommended Age:** 36 months - 17 years (3-8 years for optimal play experience)
- **Battery Specifications:** 6 x 1.5V Button cell (for stove lights and sounds)
- **Color:** White

Item Model Number: **TLG81021**

Style: **Wooden kitchen playset**

Material: **Wood (Melamine Board)**

Color: **white**

Product Size: **34.9 x 12.5 x 35.6in**

Battery Specifications:
6 x 1.5V Button cell

Product Weight: **14.4kg / 31.74lbs**

Accessories: **1 x User Manual**



Image 8.1: A summary of product specifications including model number, material, dimensions, weight, battery type, and a visual representation of included accessories.

9. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your VEVOR Play Kitchen, please contact VEVOR customer service. While specific warranty details are not provided in this manual, VEVOR is committed to customer satisfaction.

You can find more information and contact details by visiting the official VEVOR store: [VEVOR Store on Amazon](#).