

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [YOTON](#) /

› [YOTON Portable DVD Player YD075 User Manual](#)

## YOTON YD075

# YOTON Portable DVD Player YD075 User Manual

Model: YD075

[Introduction](#)

[Safety Information](#)

[Package](#)

[Contents](#)

[Product](#)

[Overview](#)

[Setup](#)

[Operation](#)

[Warranty &](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Support](#)

## 1. INTRODUCTION

This manual provides detailed instructions for the YOTON Portable DVD Player Model YD075. Please read this manual thoroughly before using the device to ensure proper operation and to maximize its lifespan. This portable DVD player features a 7.5-inch swivel HD screen, a built-in rechargeable battery, and supports various disc and media formats.



Image 1.1: The YOTON Portable DVD Player YD075 in white, with its screen open displaying a cartoon character.

## 2. SAFETY INFORMATION

---

- Do not expose the device to rain or moisture.
- Avoid direct sunlight and high temperatures.
- Do not disassemble the device; refer all servicing to qualified personnel.
- Keep out of reach of small children to prevent accidental damage or ingestion of small parts.
- Use only the provided AC power adapter and car charger.
- Do not block ventilation openings.

## 3. PACKAGE CONTENTS

---

Verify that all items listed below are included in your package:

- 1 x YOTON Portable DVD Player YD075 (White)
- 1 x Remote Control (battery not included)
- 1 x AC Power Adapter
- 1 x 1.8m Car Charger
- 1 x 3-in-1 AV Cable
- 1 x User Manual (this document)



Image 3.1: All included accessories for the YOTON Portable DVD Player YD075.

## 4. PRODUCT OVERVIEW

The YOTON Portable DVD Player YD075 features a compact design with a swivel screen for versatile viewing. Key components include the main unit with integrated speakers, a 7.5-inch LCD display, control buttons, disc tray, and various input/output ports.

### 4.1. Screen Features

The 7.5-inch screen offers 270° rotation and 180° flipping capabilities, allowing for multiple viewing angles and easy sharing. The screen resolution is 800x480 pixels.

# Flexible Rotation for Optimal View



Image 4.1: Illustration of the flexible screen rotation and flip functionality.

## 4.2. Control Panel and Ports

The device includes an intuitive control panel for playback, volume, and menu navigation. Side ports provide connectivity for USB drives, SD cards, headphones, AV output, and power input.

## 5. SETUP GUIDE

### 5.1. Charging the Battery

Before first use, fully charge the built-in lithium-ion battery. Connect the provided AC power adapter to the DC IN port on the player and plug it into a wall outlet. The charging indicator will illuminate. A full charge provides approximately 4-6 hours of playback.

For in-car use, connect the provided car charger to the DC IN port and your vehicle's cigarette lighter socket.

# Reliable Battery for Durable Enjoyment



Image 5.1: The portable DVD player highlighting its battery life and charging accessories.

## 5.2. Inserting a DVD Disc

1. Gently open the disc cover by pressing the EJECT button or sliding the latch.
2. Place the DVD disc onto the spindle with the label side facing up. Ensure the disc is securely seated.
3. Close the disc cover firmly until it clicks into place.
4. The player will automatically begin reading the disc.

## 5.3. Connecting to a TV or Projector

To view content on a larger screen, use the included 3-in-1 AV cable. Connect one end to the AV OUT port on the DVD player and the other end to the corresponding AV IN ports (Yellow for Video, White for Left Audio, Red for Right Audio) on your television or projector. Select the correct input source on your TV/projector.



## Sync TV/Projector for Bigger Screen

Image 5.2: Connecting the portable DVD player to a TV for synchronized screen display.

### 5.4. Using USB Drive or SD Card

Insert a USB drive into the USB port or an SD card into the SD card slot. The player supports various media files (JPEG, WMA, MPG, MP3, DIVX, VOB, AVI) with resolutions up to 720\*480 for video and 2650\*1440 for images. Select the USB or SD source from the player's menu to access your files.

# Unrestricted Disc Delight Across Regions



Image 5.3: The player's wide compatibility with different media types.

## 6. OPERATING INSTRUCTIONS

### 6.1. Power On/Off

Slide the POWER switch to the ON position to turn on the player. To turn off, slide the switch to the OFF position.

### 6.2. Basic Playback Controls

Use the control buttons on the player or the remote control for the following functions:

- **PLAY/PAUSE:** Press to start or pause playback.
- **STOP:** Press to stop playback.
- **PREV/NEXT:** Press to skip to the previous or next chapter/track.
- **FF/REW:** Press and hold to fast forward or rewind.
- **VOL+/VOL-:** Adjust the volume level.

### 6.3. Break-Point Memory Function

The player features a break-point memory function. If the device is turned off during playback, it will automatically resume from the last viewing position when powered on again.



Image 6.1: The player's intelligent memory function for seamless resume.

#### 6.4. How to Play a DVD (Video Demonstration)

Watch this video for a visual guide on how to insert a DVD and operate basic playback functions on your YOTON Portable DVD Player YD075.

Your browser does not support the video tag.

Video 6.1: A demonstration of inserting a DVD and using playback controls on the YOTON Portable DVD Player YD075.

### 7. MAINTENANCE

#### 7.1. Cleaning the Device

Wipe the exterior of the player with a soft, dry cloth. Do not use liquid cleaners or abrasive materials. For the screen, use a soft, lint-free cloth specifically designed for electronics displays.

#### 7.2. Disc Care

- Handle discs by their edges to avoid fingerprints.
- Store discs in their cases when not in use.
- Clean dirty discs with a soft, lint-free cloth, wiping from the center outwards.
- Do not use scratched or damaged discs, as they may harm the player's lens.

### 7.3. Battery Care

To prolong battery life, avoid fully discharging the battery frequently. If storing the player for an extended period, charge the battery to about 50% and recharge every few months.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery discharged; Power adapter not connected properly.	Charge the battery; Ensure power adapter is securely connected.
Disc not playing / "No Disc" error	Disc inserted incorrectly; Disc is dirty or damaged; Unsupported disc format.	Reinsert disc correctly; Clean or replace disc; Ensure disc is a supported format (DVD, SVCD, VCD, CD, CD-R/RW, DVD±R/±RW). Note: Does not support 1080P, 4K, or Blu-ray discs.
No sound	Volume too low; Mute function activated; Headphone connected.	Increase volume; Deactivate mute; Disconnect headphones if using speakers.
No picture on TV	AV cable not connected properly; Incorrect TV input selected.	Check AV cable connections; Select the correct AV input on your TV.
USB/SD card not recognized	Card/drive inserted incorrectly; Unsupported file format; Corrupted media.	Reinsert USB/SD card; Ensure files are supported (JPEG, WMA, MPG, MP3, DIVX, VOB, AVI); Try another USB/SD card.

## 9. SPECIFICATIONS

Feature	Detail
Model Number	YD075
Screen Size	7.5 Inches (diagonal)
Display Type	LCD
Screen Resolution	800 x 480
Disc Compatibility	DVD, SVCD, VCD, CD, CD-R/RW, DVD±R/±RW (Does not support Blu-Ray, 1080P, 4K)

Feature	Detail
Media Compatibility (USB/SD)	AVI, VOB, MP3, WMA, OGG, ACC, JPG (Video: 720*480 max, Image: 2650*1440 max)
Battery Life	Approx. 4-6 hours (on full charge)
Product Dimensions	8.15 x 6.3 x 1.65 inches
Item Weight	1.5 pounds
Manufacturer	YOTON

## 10. WARRANTY & SUPPORT

### 10.1. Warranty Information

All YOTON products are covered by a 1-year warranty from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use.

### 10.2. Customer Support

For any questions, concerns, or technical assistance, please contact YOTON customer support. Our professional team is available to provide support within 24 hours.

- **Email:** [support.vp@yoton.co](mailto:support.vp@yoton.co)
- **Website:** [www.yoton.co](http://www.yoton.co)
- **After-sales Service:** YOTON customers enjoy after-sales service, including free new parts for any broken or missing components. Please contact our after-sales team directly.