

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Asnish](#) /
- › [Asnish Portable DVD Projector Instruction Manual](#)

Asnish B0DFW9XTVY

Asnish Portable DVD Projector Instruction Manual

Model: B0DFW9XTVY

1. INTRODUCTION

Thank you for purchasing the Asnish Portable DVD Projector. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference. This projector features a built-in DVD player, supporting various disc formats, and offers multiple connectivity options for a versatile entertainment experience. It is designed for both indoor and outdoor use, providing a large screen display for movies, games, and presentations.



Image 1.1: Asnish DVD Projector in a home theater setup, showcasing its ability to create a large screen experience.

2. SAFETY INFORMATION

To ensure safe operation and prolong the lifespan of your projector, please observe the following safety

precautions:

- Do not look directly into the projector lens when the lamp is on. The intense light can cause eye damage.
- Ensure proper ventilation. Do not block ventilation openings. Overheating can damage the device.
- Keep the projector away from water, moisture, and flammable materials.
- Use only the power adapter supplied with the projector.
- Do not attempt to repair the projector yourself. Refer all servicing to qualified personnel.
- Place the projector on a stable, level surface to prevent it from falling.
- Unplug the projector during lightning storms or when unused for extended periods.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Asnish DVD Projector x 1
- HDMI Cable x 1
- Remote Control x 1
- Instruction Manual x 1
- AV Cable x 1
- Power Cable x 1
- Projector Lens Cover x 1
- Adapter x 1

Package List

- DVD Projector ×1
- HDMI Cable ×1
- Remote Control ×1
- Instruction Manual ×1
- AV Cable ×1
- Power Cable ×1



Quick USE



Remote



AV Cable



HDMI



Power Cable



Instruction Manual

Image 3.1: Contents of the Asnish DVD Projector package.

4. PRODUCT OVERVIEW

4.1. Projector Dimensions

The projector has compact dimensions for portability and ease of placement.

Product Dimensions: 15 x 6 x 11 inches

Item Weight: 4.38 pounds



Image 4.1: Front view of the Asnish DVD Projector.

4.2. Input/Output Ports

The projector is equipped with various ports for connecting external devices:

- **HDMI (x2):** For connecting devices like laptops, gaming consoles, TV sticks, and Blu-ray players.
- **USB:** For playing media files from USB drives.
- **AV:** For connecting older devices with composite video and stereo audio output.
- **TF Card Slot:** For playing media files from TF (Micro SD) cards.
- **VGA:** For connecting computers or laptops.
- **Audio Out:** For connecting external speakers or headphones.

Multi-Media Connection



Image 4.2: Multi-media connection options and port layout.

5. SETUP

5.1. Placement

Choose a suitable location for your projector. For optimal viewing, place the projector on a stable, flat surface or mount it on a tripod or ceiling. Ensure there is enough distance between the projector and the screen to achieve your desired screen size.

- **Projection Distance:** 4 to 19 feet (1.2 to 5.8 meters)
- **Projection Size:** 39 to 200 inches (diagonal)

Up to 200inch Screen Size

Big-screen visual cinema



Image 5.1: Recommended projection distances and screen sizes.

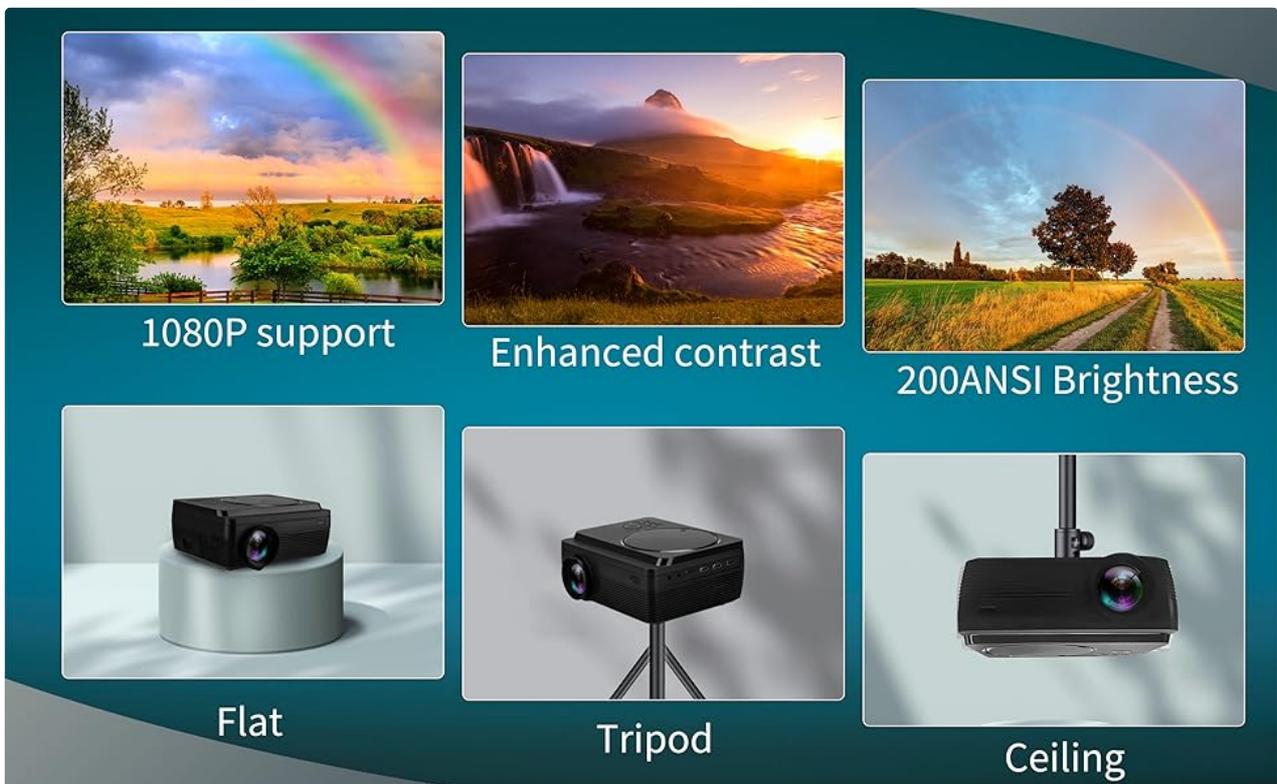


Image 5.2: Projector placement options: flat, tripod, and ceiling mount.

5.2. Power Connection

1. Connect the power cable to the projector's power input port.
2. Plug the other end of the power cable into a standard electrical outlet.
3. The power indicator light on the projector will illuminate.

5.3. Connecting Input Devices

Connect your desired input device to the corresponding port on the projector.

- **HDMI:** Use an HDMI cable to connect your laptop, game console, TV stick, or other HDMI-enabled device to one of the HDMI ports.
- **USB:** Insert a USB flash drive into the USB port to play media files.
- **AV:** Use the provided AV cable to connect devices with composite video output (e.g., older DVD players, VCRs).
- **TF Card:** Insert a TF (Micro SD) card into the TF card slot to play media files.
- **VGA:** Use a VGA cable to connect your computer or laptop to the VGA port.

6. OPERATING INSTRUCTIONS

6.1. Power On/Off

- To power on, press the power button on the projector or the remote control.
- To power off, press the power button again. The projector will enter standby mode.

6.2. Focus and Keystone Adjustment

Adjust the image clarity and shape using the focus and keystone correction features.

- **Focus:** Rotate the focus ring on the projector lens until the image appears sharp and clear.
- **Keystone Correction:** Use the keystone adjustment knob (usually on the side or back of the projector) to correct trapezoidal distortion, ensuring a rectangular image. The projector supports $\pm 15^\circ$ keystone correction.



Image 6.1: Focus and Keystone Correction adjustments.

6.3. Source Selection

After connecting your input device, select the corresponding input source:

1. Press the "Source" button on the remote control or the projector's control panel.
2. Navigate through the input options (HDMI1, HDMI2, AV, USB, TF, VGA, DVD) using the arrow keys.
3. Press "OK" or "Enter" to confirm your selection.

6.4. DVD Playback

The projector features a built-in DVD player for direct disc playback.

1. Gently open the disc cover on top of the projector.
2. Insert a DVD, VCD, or CD disc with the label side facing up.
3. Close the disc cover.
4. Select "DVD" as the input source from the projector's menu.
5. The disc will begin playing automatically or present a menu for selection.

Support CD, DVD, VCD, SVCD-R, CD-R from all regions except Blu-ray and compatible with multi-media files via USB and SD Card, such as VOB, AVI, MPEG1, MP3, WMA, JPEG



Built in

DVD Player

Compatibility Increase Your Entertainment



Image 6.2: Built-in DVD player compatibility.



Image 6.3: Steps for DVD playback.

6.5. Media Playback (USB/TF Card)

To play media files from a USB drive or TF card:

1. Insert your USB drive or TF card into the respective port.
2. Select "USB" or "TF" as the input source.
3. Navigate through the file browser to select your desired video, audio, or image file.
4. Press "OK" or "Enter" to play the file.

6.6. Connecting External Audio Devices

The projector has a built-in speaker. For enhanced audio, you can connect external speakers or headphones:

- Connect a 3.5mm audio cable from the projector's "Audio Out" port to your external audio system or headphones.
- Adjust the volume using the projector's controls or the remote control.

7. MAINTENANCE

7.1. Cleaning

- **Lens:** Use a soft, lint-free cloth specifically designed for optical lenses. Do not use abrasive cleaners or cloths.
- **Casing:** Wipe the projector's exterior with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth. Avoid harsh chemicals.
- **Ventilation Ports:** Periodically clean the ventilation ports with a soft brush or compressed air to prevent dust buildup, which can lead to overheating.

7.2. Storage

When not in use for extended periods, store the projector in a cool, dry, and dust-free environment. Use the lens cover to protect the lens from dust and scratches.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No image displayed	Power cable not connected; Incorrect input source; Lens cover on.	Ensure power is connected and unit is on; Select correct input source; Remove lens cover.
Image is blurry	Focus not adjusted; Projector too close/far from screen.	Adjust the focus ring; Adjust projection distance.
Image is trapezoidal	Keystone not adjusted; Projector not level.	Adjust keystone correction knob; Ensure projector is on a level surface.
No sound	Volume too low; Muted; External audio device not connected properly.	Increase volume; Unmute; Check external audio connections.
DVD not playing	Disc inserted incorrectly; Disc damaged; Incorrect source selected.	Re-insert disc correctly (label up); Try a different disc; Select "DVD" source.
Remote control not working	Batteries low/dead; Obstruction between remote and projector.	Replace batteries; Remove obstructions; Point remote directly at the projector's IR receiver.

9. SPECIFICATIONS

Feature	Detail
Brand	Asnish
Model	B0DFW9XTVY
Display Resolution (Native)	1280 x 720 pixels
Supported Resolution	Up to 1080P
Brightness	200 ANSI Lumens (9000 Lux LED)
Contrast Ratio	5000:1
Projection Size	39" - 200" (diagonal)
Projection Distance	4 - 19 feet
Keystone Correction	±15° Manual

Feature	Detail
Connectivity Technology	Wired/Wireless
Input Ports	HDMI (x2), USB, AV, TF Card, VGA
Output Ports	Audio Out (3.5mm)
Built-in Speaker	Yes
Built-in DVD Player	Yes (Supports DVD, VCD, DVR, CD, SVCD-R, CD-R)
Product Dimensions	15 x 6 x 11 inches
Item Weight	4.38 pounds

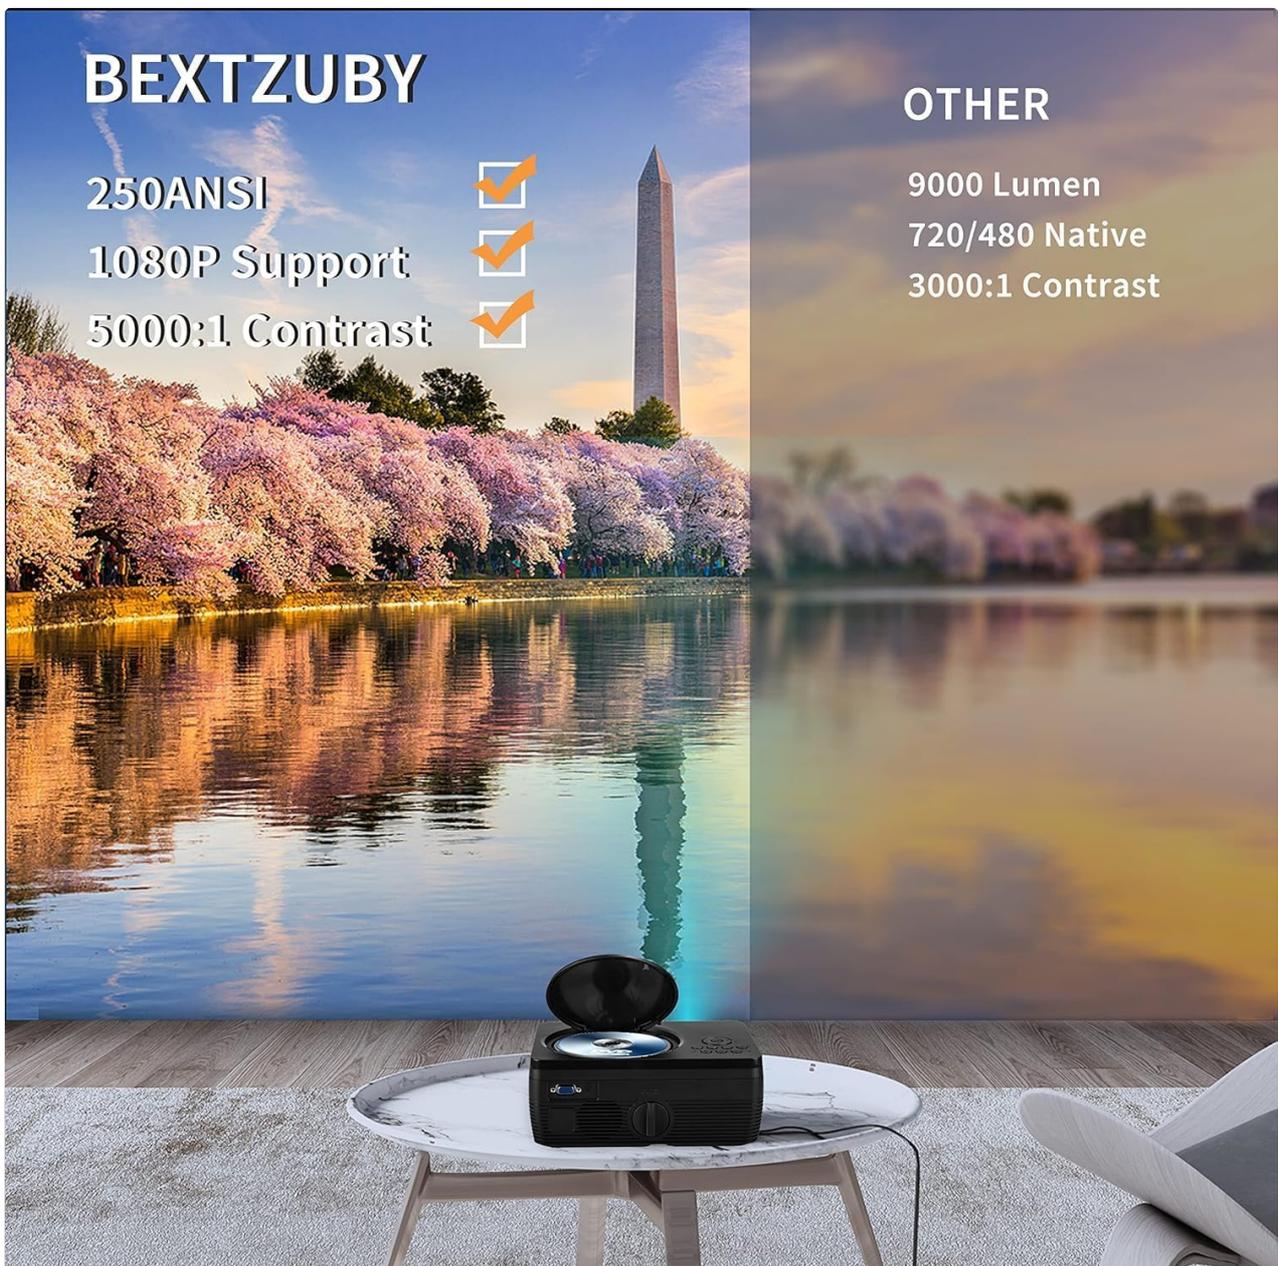


Image 9.1: Key specifications comparison.

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the contact details provided with your purchase documentation or visit the official Asnish website. Keep your purchase receipt as proof of purchase for warranty claims.

For common issues, please consult the troubleshooting section of this manual.