

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [EYTSE](#) /

› EYTSE VK40 Karaoke Machine User Manual

EYTSE VK40

EYTSE VK40 Karaoke Machine User Manual

Comprehensive instructions for setup, operation, and maintenance.

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your EYTSE VK40 Karaoke Machine. Please read this manual thoroughly before operating the device and retain it for future reference.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- EYTSE VK40 Karaoke Machine
- Wireless Microphones (x2)
- Remote Control (x1)
- Batteries (x4)
- Type-C Cable (x1)
- HDMI Cable (x1)
- Power Adapter (x1)
- Instruction Manual (x1)

Connect to TV/ projector via HDMI for big-screen fun

Precise navigation with mouse-mode remote



Image: EYTSE VK40 Karaoke Machine and its accessories.

3. PRODUCT OVERVIEW

3.1 Key Features

- 14.1" HD Touch Swivel Screen: Adjustable display for optimal viewing.
- 400W Hi-Fi Stereo Sound: 5-speaker system with 6.5" woofer, 2x3" midrange, and 2x2" tweeters.
- Dual UHF Wireless Microphones: Reliable, interference-free performance.
- Wi-Fi 6 Connectivity: Fast and stable streaming.
- Dynamic Lighting: 18 built-in LED lights with various effects.
- 6 Voice Effects: Original, Female, Male, Kid, Chipmunk, Robot.
- Built-in Recording: Save performances directly to the device or memory card.
- Android 13 OS: Intuitive interface with access to apps.
- 8000mAh Battery: Up to 10 hours of continuous use.
- Multiple Connectivity: HDMI, Auxiliary, USB, TF-card, 6.5mm Jack, Type-C.

3.2 Components and Controls

14.1" HD Touch Screen

Experience faster wake-up, vibrant always-clear lyrics, and adjustable brightness—all with 11 pre-loaded apps.



Android
13



WIFI
6



Bluetooth
5.3



4k Full HD



Screen
Saver



2+32GB



Image: Front view of the EYTSE VK40 Karaoke Machine.

The EYTSE VK40 features a 14.1-inch HD touch screen that can swivel 270° and fold 180° for optimal viewing angles. The front panel includes dynamic LED lights that react to music. The top panel houses the main control interface with various knobs and buttons for audio adjustments and mode selection.

Wireless UHF Microphones



Image: Control panel details.

The control panel provides access to microphone volume, bass, treble, echo, and music volume. It also includes input ports for HDMI, USB, TF card, AUX IN, Headset, AUX OUT, and OTG/LIVE connections.



Image: Dynamic LED lighting.

The 18-LED colorful lighting system offers various patterns to enhance the karaoke experience.

400W Powerful Sound

Command a powerful 5-speaker system soundstage with punchy bass, crystal-clear vocals and crisp highs, and full control over mic and music's bass, treble, and echo.



Image: Speaker components.

 
The internal speaker system consists of a 6.5-inch woofer, two 3-inch midrange drivers, and two 2-inch tweeters for balanced audio output.

Multiple Connection

More than just Karaoke, plug in your instrument via the 1/4" jack and turn your party into a personal stage.



Phone



Laptop



TV



Pads

Connect any electric instrument with 1/4" jack



Guitar



Drums



DJ Set



Piano



Bass



USB



HDMI OUT



TF Card



AUX IN



HEADSET



AUX OUT



OTG & LIVE

Image: Multiple connection ports.

The unit supports various connections including USB, HDMI OUT, TF Card, AUX IN, Headset, AUX OUT, OTG & LIVE, and a 1/4" jack for instruments.

Dual UHF Wireless Microphone

Rang
666.20MHZ/
630.20MHZ

Stable Connection
50ft

Type-C charge
Rechargeable Battery

3h charge = **8h** use

10m
20m
30m

Sound
Premium sound quality

UHF
Stable UHF signal

BATTERY DISPLAY

EYTSI

Image: Wireless UHF Microphones.

Two wireless UHF microphones are included, offering a stable connection up to 50 feet. They feature Type-C charging and provide up to 8 hours of use after a 3-hour charge.

Stable WIFI 6

Experience smoother streaming: Wi-Fi 6 cuts latency by 75% for sharper video and richer sound.



Image: Wi-Fi 6 connectivity.

The device supports Wi-Fi 6 for smoother streaming and reduced latency.

Big-Screen Fun

Connect via HDMI for a big-screen lyrics party!
And control everything from your couch with the
mouse-key remote.



Image: HDMI connection to TV.

Connect the VK40 to a larger TV via HDMI for an enhanced visual experience. The remote control features a mouse mode for easy navigation.

Never Run Out of Fun

Enjoy all-day music and entertainment on the go.

4h
Charge

8000mah

10h
Playtime

Image: Battery life and portability.

The built-in 8000mAh rechargeable battery provides up to 10 hours of continuous use, making it suitable for portable use. A full charge takes approximately 4 hours.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the karaoke machine using the provided power adapter and Type-C cable. The charging indicator will show the charging status.

4.2 Powering On/Off

Press and hold the power button on the unit or the remote control to turn the device on or off.

4.3 Wi-Fi Connection

1. On the touch screen, navigate to **Settings**.
2. Select **Wi-Fi**.
3. Choose your desired network from the list and enter the password if prompted.
4. Once connected, the Wi-Fi icon will appear stable.



Image: Touch screen interface with Wi-Fi option.

4.4 Microphone Setup

The wireless UHF microphones are pre-paired with the unit. Simply insert the provided batteries into each microphone. The microphone display will show the frequency and battery level.

4.5 HDMI Connection (Optional)

To display content on a larger screen:

1. Connect one end of the HDMI cable to the **HDMI OUT** port on the karaoke machine.
2. Connect the other end to an HDMI input port on your TV or projector.
3. Select the corresponding HDMI input on your TV/projector.

Your browser does not support the video tag.

Video: Demonstrates connecting the EYTSE VK40 Karaoke Machine to a TV via HDMI for a larger display.

5. OPERATION

5.1 Using the Touch Screen Interface

The 14.1-inch touch screen operates like a tablet. Tap icons to open applications such as YouTube, Spotify, or the Media Player. Swipe to navigate between screens.

5.2 Audio Adjustments

Use the knobs on the control panel to adjust:

- **MIC.VOL:** Microphone volume.

- **MIC.BASS:** Microphone bass level.
- **MIC.TREBLE:** Microphone treble level.
- **MIC.ECHO:** Microphone echo effect.
- **MUSIC.BASS:** Music bass level.
- **MUSIC.TREBLE:** Music treble level.
- **MUSIC.VOL:** Music volume.

5.3 Voice Effects

The device includes 6 voice effects: Original, Female, Male, Kid, Chipmunk, and Robot. These can typically be selected via the on-screen interface or the remote control.

5.4 Recording Your Performance

To record your singing:

1. Ensure a USB drive or TF card is inserted if you wish to save recordings externally.
2. Locate the recording function on the screen or remote control (often labeled **REC**).
3. Press to start recording and again to stop.
4. Recordings can be saved and played back through the Media Player.

5.5 Connecting External Instruments

Use the 1/4" guitar jack to connect instruments like guitars, keyboards, or electronic drums. Adjust the volume and effects using the control panel.

Your browser does not support the video tag.

Video: Demonstrates connecting instruments like guitars and keyboards to the EYTSE VK40 Karaoke Machine.

6. MAINTENANCE

6.1 Cleaning

Wipe the exterior of the unit with a soft, dry cloth. For the screen, use a screen-specific cleaning solution and a microfiber cloth. Do not use abrasive cleaners or solvents.

6.2 Storage

Store the karaoke machine in a cool, dry place away from direct sunlight and extreme temperatures. If storing for extended periods, ensure the battery is partially charged (around 50%) to prolong its lifespan.

6.3 Battery Care

To maintain battery health, avoid fully discharging the unit frequently. Recharge promptly when the battery is low.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery drained; Power adapter not connected or faulty.	Charge the unit; Check power connections.

Problem	Possible Cause	Solution
No sound from speakers	Volume too low; Mute activated; Incorrect input selected.	Increase volume; Check mute status; Select correct audio source.
Microphone not working	Microphone off; Batteries low/dead; Out of range.	Turn on microphone; Replace batteries; Move closer to the unit.
Wi-Fi connection unstable	Weak signal; Router issues.	Move closer to Wi-Fi router; Restart router; Check network settings.
Screen unresponsive	Temporary software glitch.	Restart the device.

8. SPECIFICATIONS

Feature	Detail
Brand	EYTSE
Model Number	VK40
Screen	14.1" HD Touch Display (270° swivel, 180° fold)
Sound Output	400W Hi-Fi Stereo Sound
Speakers	1x 6.5" Woofer, 2x 3" Midrange, 2x 2" Tweeters
Microphones	2 Wireless UHF Microphones
Connectivity	Wi-Fi 6, Bluetooth, HDMI, Auxiliary, USB, TF-card, 6.5mm Jack, Type-C
Operating System	Android 13
Battery	8000mAh (Up to 10 hours playtime)
Dimensions (L x W x H)	18 x 16 x 11 inches
Enclosure Material	Wood

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This product comes with a 30-day warranty. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects but does not cover damage caused by misuse, accidents, or unauthorized modifications.

9.2 Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please contact EYTSE customer support. Refer to the product packaging or the official EYTSE website for contact details.

For optimal performance, ensure the built-in software is used in a stable network environment.



