

Zopsc Zopscxwnkyu3im9-12

Zopsc 8MP 4K 30FPS Sport Action Camera User Manual

Model: Zopscxwnkyu3im9-12

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Zopsc 8MP 4K 30FPS Sport Action Camera. Please read this manual thoroughly before operating the device to ensure optimal performance and to prevent damage.





Image 1.1: Front view of the Zopsc Sport Action Camera, showcasing its compact design and lens.

2. PACKAGE CONTENTS

Verify that all items listed below are present in your package. If any items are missing or damaged, please contact customer support.

- 1 x Pet Collar Camera (Main Unit)
- 2 x Collar
- 1 x Clip
- 1 x Magnetic Hanging Rope
- 1 x Frame
- 1 x Data Cable
- 1 x Helmet Bracket
- 1 x Water Case

- 1 x Riding Hanging Rope
- 1 x Riding Bracket
- 1 x Side Bracket
- 1 x 360 Degree Adapter
- 1 x Curved and Flat Base
- 1 x User Manual (this document)



Image 2.1: Overview of the Zopsc Sport Action Camera and its comprehensive set of accessories.

3. SPECIFICATIONS

Feature	Specification
Video Resolution	4K, 30FPS
Video Encoding	H.265
Photo Resolution	8MP
Lens Angle	120° Wide Angle
Battery Type	Built-in Lithium Battery
Battery Capacity	800mAh
Memory Card Support	Maximum 256GB (Not Included)
Water Resistance	Up to 30M with Water Case
Connectivity	APP Control (Wireless)
Item Weight	11.5 ounces
Model Name	Zopscxwnkyu3im9-12

4. SETUP

4.1 Charging the Camera

Before first use, fully charge the camera's built-in lithium battery using the provided data cable. Connect the data cable to the camera's charging port and a standard USB power source (e.g., computer, USB wall adapter). The charging indicator light will provide status.

4.2 Inserting a Memory Card

The camera supports memory cards up to 256GB (not included).

1. Locate the memory card slot on the camera.
2. Insert a compatible memory card into the slot with the contacts facing the correct direction until it clicks into place.
3. To remove, gently press the card until it springs out.

4.3 Attaching Accessories

The Zopsc Sport Action Camera comes with various accessories for versatile mounting options.

- **Magnetic Lanyard:** For wearing the camera around your neck for easy access and first-person view recording.
- **Clip:** Attach the camera to clothing, belts, or other surfaces for hands-free operation.
- **Water Case:** Enclose the camera in the water case for protection during underwater activities up to 30 meters. Ensure the case is properly sealed before submersion.
- **Collar:** Use with the "Pet Collar Camera" for attaching to pet collars.
- **Brackets (Helmet, Riding, Side, Curved/Flat Base):** Utilize these mounts for securing the camera to helmets, bicycles, or other equipment for action shots.



Image 4.1: The camera secured within its waterproof case, ready for mounting.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

To power on the camera, press and hold the power button until the indicator light illuminates. To power off, press and hold the power button again until the indicator light turns off.

5.2 Recording Video

With the camera powered on, press the record button once to start video recording. The indicator light will change to indicate recording is in progress. Press the record button again to stop recording. Videos are saved to the inserted memory card.

5.3 Taking Photos

In photo mode (if applicable, refer to specific button functions), press the shutter button once to capture a still image. Photos are saved to the memory card.

5.4 Loop Recording

The camera supports loop recording, which automatically overwrites the oldest files when the memory card is full. This feature ensures continuous recording without manual intervention.



Image 5.1: The camera mounted for action, highlighting its loop recording capability for continuous capture.

5.5 APP Control and Wireless Connectivity

Wirelessly connect the camera to your smartphone via a dedicated application. This allows for remote control of camera functions, live view, and instant sharing of captured content. Refer to the app's instructions for pairing and usage.

5.6 120° Wide Angle Lens

The camera features a 120-degree wide-angle lens, capturing a broad field of view suitable for sports, landscapes, and immersive footage.

120 degree wide angle
Take in everything in a glance



Image 5.2: An example of the expansive view captured by the 120-degree wide-angle lens.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens

cleaning cloth and solution. Avoid abrasive materials.

- **Water Case Care:** After using the water case in saltwater, rinse it with fresh water and allow it to air dry. Inspect the seals regularly for any signs of wear or damage.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Store the camera in a cool, dry place when not in use for extended periods.
- **Storage:** Store the camera and accessories in a protective case to prevent scratches and impacts.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Low battery; faulty battery; power button issue.	Charge the camera fully. If problem persists, contact support.
Cannot record video/take photos.	No memory card; memory card full; memory card error.	Insert a memory card. Delete old files or replace card. Format the memory card (backup data first).
Poor video/photo quality.	Dirty lens; low light conditions; incorrect settings.	Clean the lens. Ensure adequate lighting. Check camera settings via APP.
APP connection issues.	Bluetooth/Wi-Fi off; camera not in pairing mode; app outdated.	Ensure camera and phone wireless functions are on. Restart both devices. Update the app.
Water leakage with water case.	Improperly sealed case; damaged seal.	Ensure case is securely closed. Inspect and replace damaged seals.

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact Zopsc customer service directly.

Manufacturer: Zopsc