

VEGA VHDH-32

VEGA U Style Hair Dryer VHDH-32 Instruction Manual

Model: VHDH-32

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- **Read all instructions before using this appliance.**
- Keep away from water. Do not use this appliance near bathtubs, showers, basins, or other vessels containing water.
- Always unplug the appliance immediately after use.
- Do not use while bathing or in a shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- If an appliance falls into water, unplug it immediately. Do not reach into the water.
- This appliance is equipped with a 16A heavy-duty plug. Ensure your socket is compatible.
- Always ensure the voltage indicated on the appliance corresponds to the mains voltage in your home.
- Do not operate any appliance with a damaged cord or plug, or if the appliance malfunctions or has been dropped or damaged in any manner.
- Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
- Never use while sleeping.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use an extension cord with this appliance.
- Do not direct hot air towards eyes or other heat-sensitive areas.
- The appliance will automatically switch off if it overheats. Unplug and allow it to cool down before

Exclusive 16-Amp Plug*

Compliant with **BIS Safety Standards**





6-Amp



16-Amp

- Built to withstand higher wattage requirement
- Prevents overheating in regular use
- More durable
- More safety

*Safety guidelines as per BIS

IS 302



Part 2 : Sec 23
CM/L-8800157816

Image: The VEGA U Style Hair Dryer features an exclusive 16-Amp plug, compliant with BIS Safety Standards, designed to withstand higher wattage requirements and prevent overheating during regular use, offering enhanced durability and safety compared to a standard 6-Amp plug.

2. PRODUCT OVERVIEW

The VEGA U Style Hair Dryer VHDH-32 is designed for efficient hair drying and styling. It features a powerful motor, multiple heat and speed settings, and a cool shot function to help you achieve your desired hairstyle.

VEGA U-Style 1600W Hair Dryer



Image: Labeled diagram of the VEGA U Style Hair Dryer, showing its key components including the detachable nozzle, cool shot button, foldable handle, speed and heat settings, and cord guard.

Key Features:

- **1400-1600W Power:** Provides efficient airflow for quick drying and styling.
- **2 Speed Settings:** Adjust airflow intensity for different styling needs.
- **3 Heat Settings (Hot, Warm, Off):** Offers versatile temperature control to suit all hair types.
- **Cool Shot Button:** Delivers a burst of cool air to set your hairstyle.
- **Detachable Nozzle:** For concentrated airflow, ideal for precise styling.
- **Foldable Handle:** Ensures compact storage and makes it travel-friendly.
- **Automatic Overheat Cut-Out:** Safety feature that switches off the dryer if it overheats.
- **Cord Guard with Hanging Loop:** For easy storage and protection of the power cord.



Image: The VEGA U Style Hair Dryer shown with its handle folded, illustrating its compact design for easy storage and travel.

3. SETUP

Before first use, ensure all packaging materials are removed. The hair dryer comes with a detachable nozzle. You may attach it for concentrated airflow or use the dryer without it for broader drying.

Attaching the Nozzle:

1. Ensure the hair dryer is unplugged and cool.
2. Align the nozzle with the front opening of the dryer.
3. Gently push the nozzle onto the dryer until it clicks securely into place.

Detaching the Nozzle:

1. Ensure the hair dryer is unplugged and cool.
2. Gently pull the nozzle away from the dryer.

4. OPERATING INSTRUCTIONS

Follow these steps for effective and safe use of your VEGA U Style Hair Dryer:

1. **Plug In:** Insert the 16A plug into a suitable electrical socket.
2. **Power On:** Turn the dryer ON using the main switch.
3. **Select Speed:** Choose your desired airflow speed using the speed switch. Position '1' for gentle airflow, '2' for strong airflow.
4. **Select Heat:** Choose your desired heat setting using the heat switch. Options include 'Hot', 'Warm', and 'Off' (cool air).
5. **Begin Drying:** Start blow-drying your hair, moving the dryer continuously to prevent concentrating heat in one area.
6. **Use Cool Shot (Optional):** Press and hold the Cool Shot button to deliver a burst of cool air. This helps to set your hairstyle and add shine. Release the button to return to the selected heat setting.
7. **Finish:** Continue the process until your hair is fully dry and styled.
8. **Power Off:** Turn the dryer OFF and unplug it from the socket after use.



Image: A detailed view of the hair dryer's controls, illustrating the 2 speed and 3 heat settings (Hot, Warm, Off) and the cool shot button for precise operation.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your hair dryer.

Cleaning:

- **Always unplug the appliance before cleaning.**
- Use a soft, damp cloth to wipe the exterior of the dryer. Do not use abrasive cleaners or solvents.
- Periodically clean the air inlet filter at the back of the dryer to prevent lint and hair buildup. This helps maintain airflow and prevents overheating.
- To clean the filter, ensure the dryer is off and unplugged. Gently twist or pull off the rear cover (if detachable) and brush away any accumulated dust or hair. Reattach the cover securely.

Storage:

- Allow the dryer to cool completely before storing.
- The foldable handle allows for compact storage. Fold the handle by pushing it towards the body of the dryer.
- Use the hanging loop on the cord guard for convenient storage.
- Store the appliance in a dry location, away from moisture and direct sunlight.

6. TROUBLESHOOTING

If you encounter any issues with your hair dryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Dryer does not turn on.	No power supply; Plug not fully inserted; Faulty socket.	Check if the plug is fully inserted. Try a different power socket. Ensure the main switch is in the 'ON' position.
Dryer stops working during use.	Overheating (automatic cut-out activated); Air inlet/outlet blocked.	Unplug the dryer and allow it to cool down for at least 10-15 minutes. Clean the air inlet filter. Ensure air vents are not blocked.
Weak airflow.	Blocked air inlet filter.	Clean the air inlet filter at the back of the dryer.
Unusual noise or smell.	Internal issue; Foreign object.	Immediately turn off and unplug the dryer. Do not attempt to repair. Contact customer support.

If the problem persists after attempting these solutions, please contact VEGA customer support.

7. SPECIFICATIONS

Feature	Detail
Model Number	VHDAH-32
Wattage	1400-1600 Watts
Power Source	Corded Electric

Feature	Detail
Number of Speed Settings	2
Number of Heat Settings	3 (Hot, Warm, Off)
Special Features	Automatic Shut-Off, Cool Shot Button, Detachable Nozzle, Foldable Handle, Hanging Loop
Product Dimensions	19.5 x 19 x 8 cm
Item Weight	380 Grams
Material	Plastic
Included Components	Concentrator
Country of Origin	India

8. WARRANTY & SUPPORT

Warranty Information:

This VEGA U Style Hair Dryer VHDH-32 comes with a **2-Year Manufacturer Warranty** from the date of purchase.

The warranty covers manufacturing defects under normal use conditions. It does not cover damage resulting from misuse, accident, unauthorized alteration, or failure to follow operating instructions.

Customer Support:

For any queries, concerns, or warranty claims, please contact VEGA customer care:

- **Email:** customercare@vega.co.in
- **Telephone:** 080-69496949
- **Timings:** 10:00 AM to 5:30 PM (IST), Monday - Saturday (excluding holidays)