



[Manuals.plus](#) /

› [PRITOM](#) /

› PRITOM TAB7 Pro 7-inch Android 15 Wi-Fi Tablet User Manual

PRITOM TAB7 Pro

PRITOM TAB7 Pro 7-inch Android 15 Wi-Fi Tablet User Manual

Model: TAB7 Pro

1. INTRODUCTION

Thank you for purchasing the PRITOM TAB7 Pro 7-inch Android 15 Wi-Fi Tablet. This manual provides essential information for setting up, operating, and maintaining your device. Please read it carefully to ensure proper use and to maximize your tablet's features.

The PRITOM TAB7 Pro is designed for portability and convenience, offering a balanced size that is larger than a smartphone but more compact than a 10-inch tablet. It features an eye-friendly IPS screen and runs on the Android 15 Go system, providing a smooth user experience for various tasks.

 
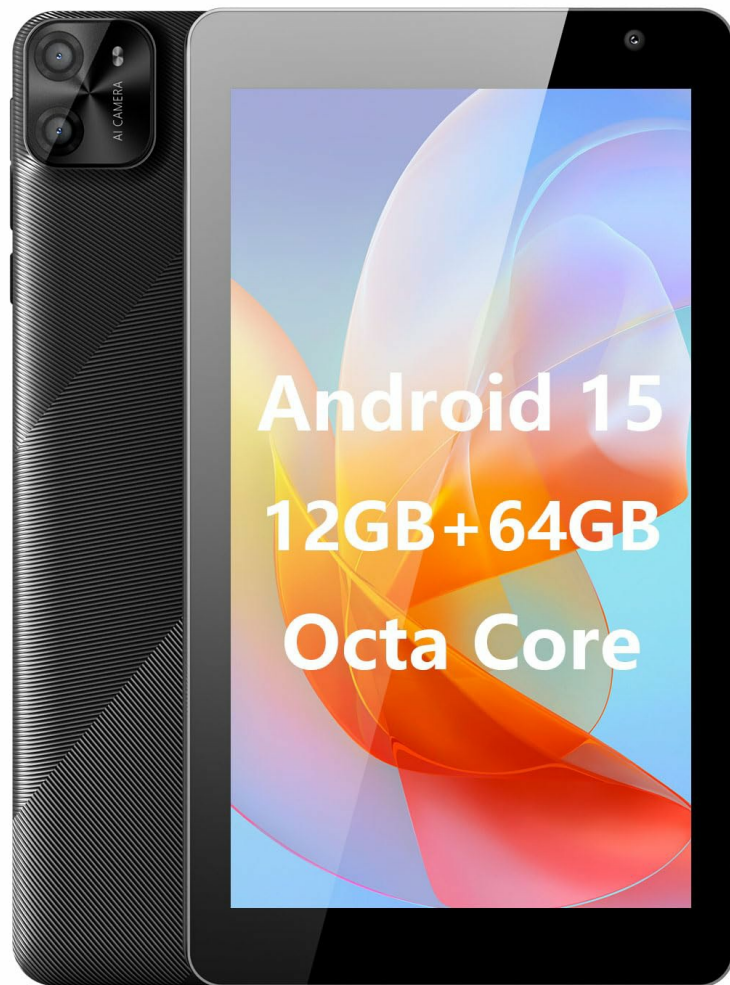 


Image: PRITOM TAB7 Pro 7-inch Android 15 Wi-Fi Tablet, front view.

2. PACKAGE CONTENTS

Upon opening the package, please verify that all the following items are included:

- PRITOM TAB7 Pro Tablet (Main Unit)
- Protective Case
- AC Power Adapter (5V2A)
- USB Type-C Cable
- Japanese Instruction Manual
- Screen Protector (Pre-applied)

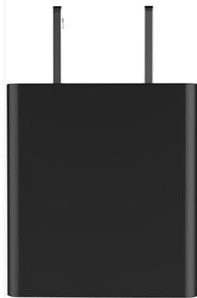

電源アダプター



USB-Cケーブル



タブレット
取扱説明書

取扱説明書



専用カバー

Image: All items included in the PRITOM TAB7 Pro package.

Unboxing Video

Your browser does not support the video tag.

Video: This video demonstrates the unboxing process of the tablet, showing all included accessories.

3. PRODUCT OVERVIEW

Familiarize yourself with the physical components and controls of your PRITOM TAB7 Pro tablet.



Image: Detailed diagram illustrating the location of ports, buttons, and cameras on the PRITOM TAB7 Pro tablet.

- **3.5mm Headphone Jack:** For connecting wired headphones.
- **TF Card Slot:** For inserting a Micro SD card to expand storage up to 512GB.
- **USB Type-C Port:** For charging the device and data transfer.
- **Front Camera:** For video calls and selfies.
- **Rear Camera:** For taking photos and videos.
- **Volume Buttons:** To adjust the audio volume.
- **Power Button:** To turn the device on/off or put it to sleep/wake it up.
- **Reset Hole:** For performing a hard reset if the device becomes unresponsive.
- **Speaker:** For audio output.

4. SETUP

Follow these steps for the initial setup of your tablet.

Initial Setup Video Guide

Your browser does not support the video tag.

Video: This video provides a step-by-step guide for the initial setup of your tablet, including language selection and Wi-Fi connection.

Setting System Language to Japanese

Your browser does not support the video tag.

Video: This video demonstrates how to change the system language to Japanese on your tablet.

1. **Power On:** Press and hold the Power button until the PRITOM logo appears.
2. **Language Selection:** On the welcome screen, select your preferred language.
3. **Wi-Fi Connection:** Connect to a Wi-Fi network to complete the setup and access online features.
4. **Google Account:** Sign in with your Google account or create a new one.
5. **Date & Time:** Set the correct date and time for your region.
6. **Security:** Set up a screen lock (PIN, pattern, or password) for security.

5. OPERATING INSTRUCTIONS

This section covers basic operations and key features of your tablet.

Basic Navigation

- **Touchscreen:** Navigate the interface by tapping, swiping, and pinching.
- **Home Screen:** Access your apps and widgets from the home screen.
- **Notifications:** Swipe down from the top of the screen to view notifications and quick settings.

PRITOM TAB 7アップグレード版

12GB(3GB+9GB拡張) RAM+64 ROM+512GB拡張可能

容量を気にせず、電子書籍、マンガなどを思う存分お楽しみいただけます。



12GB(3GB+9GB拡張) RAM



64GB ROM



512GB 拡張

Image: The tablet's home screen showing various pre-installed and downloaded applications.

Eye Protection Mode

To reduce eye strain, especially during prolonged use:

- Go to **Settings** > **Display**.
- Enable **Dark Theme** or adjust **Brightness** and **Night Light** settings.
- The tablet automatically adjusts backlight to suppress glare.

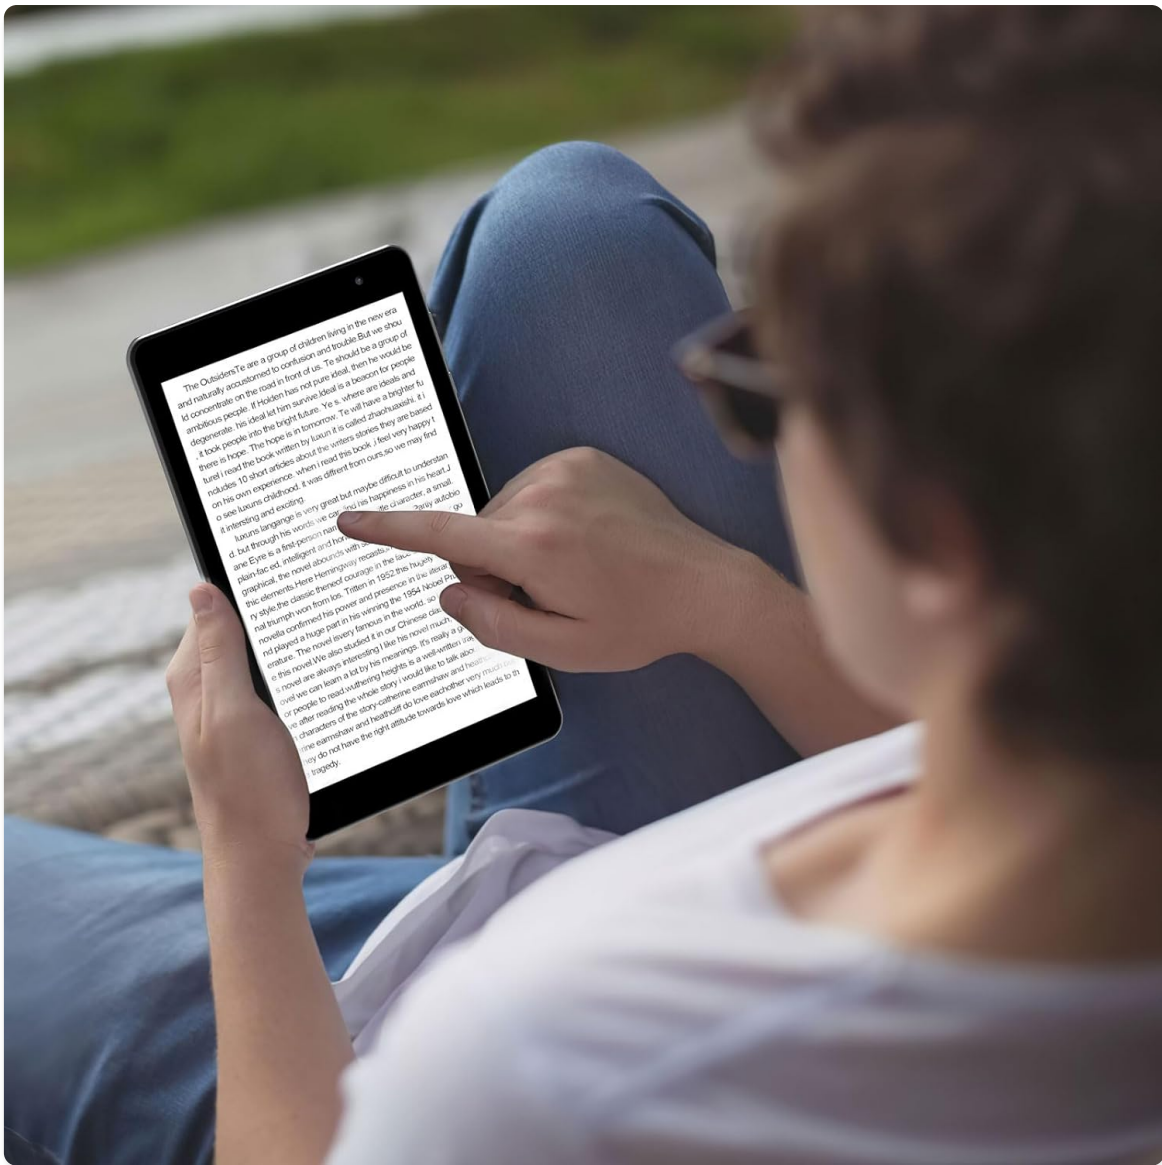 


Image: A user reading an e-book on the tablet, highlighting its eye-friendly display.

Storage Management

The tablet comes with 64GB of internal storage, expandable up to 512GB using a Micro SD card.

- To insert a Micro SD card, locate the TF card slot (refer to Product Overview).
- Gently push the card into the slot until it clicks into place.
- To remove, push the card in again until it springs out. Be cautious due to the high edge of the slot.

Connectivity

- **Wi-Fi:** Supports 2.4G/5GHz Wi-Fi 6 (802.11 ac/b/g/n/ax) for stable and high-speed internet access.
- **Bluetooth:** Equipped with Bluetooth 5.2 for connecting wireless accessories like headphones or speakers.
- **GPS:** Please note that this tablet is not GPS compatible and cannot be used for navigation.

6. MAINTENANCE

To ensure the longevity and optimal performance of your tablet, follow these maintenance guidelines:

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid abrasive materials or harsh chemicals.
- **Charging:** Always use the provided 5V2A power adapter and USB Type-C cable. Do not use damaged cables or chargers.
- **Battery Care:** Avoid extreme temperatures. Do not fully discharge the battery frequently. Monitor battery levels during use, especially given its 3500mAh capacity.
- **Software Updates:** Keep your Android 15 Go system updated to ensure security and performance improvements.
- **Storage:** Regularly clear unnecessary files and apps to maintain optimal performance.
- **Protection:** Use the included protective case to guard against drops and scratches.

7. TROUBLESHOOTING

If you encounter any issues with your tablet, refer to the following common troubleshooting steps:

| Problem | Solution |
|------------------------------|---|
| Tablet does not turn on | Ensure the battery is charged. Connect the tablet to the charger for at least 30 minutes before attempting to power it on. If it still doesn't turn on, try a hard reset using the reset hole. |
| Slow performance or app lag | Close unnecessary background applications. Clear cache and data for problematic apps. Ensure sufficient free storage space. Restart the tablet. Note that the tablet may not be suitable for the latest graphics-intensive games or large applications. |
| Wi-Fi connection issues | Restart your Wi-Fi router and the tablet. Forget the network and reconnect. Ensure you are within range of the Wi-Fi signal. |
| Battery drains quickly | Reduce screen brightness. Close unused apps. Turn off Wi-Fi or Bluetooth when not in use. Enable Dark Theme. Note that the 3500mAh battery capacity requires monitoring during heavy use. |
| Micro SD card not recognized | Ensure the card is inserted correctly. Try reinserting the card. Test with a different compatible Micro SD card. |

If these steps do not resolve your issue, please contact customer support.

8. SPECIFICATIONS

Detailed technical specifications for the PRITOM TAB7 Pro tablet.

PRITOM TAB 7Pro

タブレット7インチ 持ち歩く方に



Image: Visual representation of the tablet's core specifications.

| Feature | Detail |
|--------------------|--|
| Brand | PRITOM |
| Model Name | TAB7 Pro (P7) |
| Operating System | Android 15 Go |
| CPU | Allwinner A523 8-core, 1.8 GHz |
| RAM | 3GB (expandable to 12GB with virtual memory) |
| Internal Storage | 64GB |
| Expandable Storage | Micro SD card up to 512GB |
| Screen Size | 7 inches |
| Display Type | IPS LCD |
| Resolution | 1024x600 pixels |

| Feature | Detail |
|------------------|--|
| Aspect Ratio | 16:10 |
| Wi-Fi | 2.4G/5GHz Wi-Fi 6 (802.11 ac/b/g/n/ax) |
| Bluetooth | Bluetooth 5.2 |
| GPS | Not supported |
| Rear Camera | 8 MP |
| Front Camera | Not specified (implied from images) |
| Battery Capacity | 3500 mAh Lithium Ion |
| Ports | 1x USB Type-C, 1x 3.5mm Headphone Jack |
| Dimensions | 19 x 10.6 x 0.9 cm |
| Weight | 0.25 kg (250g) |
| Certifications | TELEC, GMS |

9. WARRANTY AND SUPPORT

Your PRITOM TAB7 Pro tablet comes with a manufacturer's warranty and dedicated customer support.

Warranty Information

- **Manufacturer's Warranty:** A 3-month manufacturer's warranty is provided.
- **Extended Warranty:** An additional 3-month extended warranty is available, totaling 6 months of coverage.
- **Coverage:** During the warranty period, if a defect occurs that can be reasonably explained (not physical damage), an exchange may be possible within 6 months.
- **Exclusions:** Repair services are not provided. The warranty does not cover accessories (case, charger, etc.) or products not sold by our store.

Customer Support

For any questions or support needs, please contact us through one of the following methods:

1. **Via Product Page:** On the product page, click on "VASOUN-Tech" (located below the "Add to Cart" button), then click "Ask a question" in the upper right corner to contact our store.
2. **Via Amazon Account:** Go to "Account Service" > "Order History" > "Relevant Order" > "Contact Seller."
3. **Via Email:** If contacting by email, please include your order number in advance for faster assistance.

Business Hours: Monday - Friday, 10:00 AM - 7:00 PM (JST). Inquiries received outside business

hours or on holidays will be responded to on the next business day.