



[Manuals.plus](#) /

> [Whirlpool](#) /

> Whirlpool 8 KG 5 Star Fully Automatic Top Load Washing Machine 360° BloomWash Pro User Manual

Whirlpool 360 BW PRO H 8 KG

Whirlpool 8 KG 5 Star Fully Automatic Top Load Washing Machine User Manual

Model: 360 BW PRO H 8 KG

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your new Whirlpool 8 KG 5 Star Fully Automatic Top Load Washing Machine. This appliance features an In-Built Heater, Soft Closing Lid, Hard Water Wash capability, and 360° BloomWash Pro technology for effective cleaning. Please read these instructions thoroughly before using the appliance and retain them for future reference.



Figure 1: Overall view of the Whirlpool 8 KG Fully Automatic Top Load Washing Machine.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Ensure the washing machine is properly grounded.
- Do not operate the machine if the power cord or plug is damaged.
- Keep children and pets away from the appliance during operation.
- Do not wash items that are soiled with flammable substances.
- Always unplug the machine before cleaning or performing maintenance.
- Do not reach into the machine while the tub is moving.
- Ensure the water supply hoses are securely connected to prevent leaks.

3. SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your washing machine.

3.1 Unpacking

Carefully remove all packaging materials. Inspect the machine for any damage incurred during transit. Keep packaging materials away from children.

3.2 Location Requirements

- Place the machine on a firm, level surface to minimize vibration and noise.
- Ensure adequate space around the machine for ventilation and maintenance.
- The location should have access to a water supply (hot and cold, if applicable), a drain, and a grounded electrical outlet.



Figure 2: Product dimensions for installation planning.

3.3 Connecting Water Hoses

1. Connect the provided Fill Hose to the water inlet valve(s) on the back of the machine and to your household water supply. Ensure connections are tight to prevent leaks.
2. Secure the Drain Hose to the machine and direct it into a standpipe or laundry tub. Ensure the drain hose is not kinked

or blocked.

3.4 Power Connection

Plug the Power Cord into a grounded 220 Volt electrical outlet. Do not use extension cords or adapters.

3.5 Leveling the Machine

Adjust the leveling feet at the bottom of the machine until it is stable and level. This prevents excessive vibration and noise during operation.

4. OPERATING INSTRUCTIONS

Follow these steps for effective and safe washing.

4.1 Control Panel Overview

Your washing machine features a touch control panel. Familiarize yourself with the buttons and indicators.



Figure 3: Touch control panel for program selection and settings.

4.2 Loading Laundry

1. Open the soft-closing lid.
2. Load clothes loosely into the drum, ensuring not to overload. The 8 KG capacity refers to dry laundry weight.
3. Close the lid gently.



Figure 4: Top view with lid open, ready for laundry loading.

4.3 Adding Detergent and Softener

Add the appropriate amount of detergent and fabric softener to their respective dispensers. Refer to detergent packaging for recommended quantities.

4.4 Selecting a Wash Program

Turn on the machine. Use the touch controls to select a suitable wash program based on your laundry type:

- **Delicates:** For fragile items.
- **Eco:** Energy-efficient wash cycle.
- **Heavy Duty:** For heavily soiled garments.

- **Wool:** Gentle cycle for woolens.
- **Hard Water Wash:** Optimized for areas with hard water.
- **Hot Wash:** Utilizes the In-Built Heater for higher wash temperatures.
- **Express Wash:** For quick washing of lightly soiled items.

4.5 Using Special Features

- **In-Built Heater:** Automatically heats water to the optimal temperature for stain removal and hygiene, especially effective for the Hot Wash program.
- **360° BloomWash Pro:** Ensures thorough cleaning by circulating water and detergent effectively throughout the drum.
- **Power Dry Technology:** Assists in faster drying of clothes by optimizing spin cycles.

4.6 Starting the Wash Cycle

Press the 'Start/Pause' button to begin the selected wash cycle. The machine will automatically fill with water, wash, rinse, and spin.

4.7 End of Cycle

Once the cycle is complete, the machine will signal. Open the lid and remove your laundry promptly.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your washing machine.

5.1 Cleaning the Detergent Dispenser

Remove the dispenser drawer and rinse it under warm water to remove any detergent or softener residue. Clean the dispenser housing with a damp cloth.

5.2 Cleaning the Drum

Run a 'Tub Clean' or 'Hot Wash' cycle with an empty drum and a washing machine cleaner or a cup of white vinegar to remove residue and odors.

5.3 Cleaning the Lint Filter

Locate and regularly clean the lint filter (if applicable to your model) to ensure efficient water drainage and prevent lint transfer to clothes.

5.4 Exterior Cleaning

Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents.

6. TROUBLESHOOTING

Refer to this section for solutions to common issues. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Lid not closed; Circuit breaker tripped.	Ensure power cord is plugged in; Close lid securely; Reset circuit breaker.

Problem	Possible Cause	Solution
Water not filling	Water supply turned off; Inlet hoses kinked or blocked.	Turn on water supply; Straighten hoses; Clean inlet filters.
Machine vibrates excessively	Machine not level; Load unbalanced.	Adjust leveling feet; Redistribute laundry in the drum.
Water not draining	Drain hose kinked or blocked; Drain pump filter clogged.	Check and clear drain hose; Clean drain pump filter (refer to service manual if unsure).

7. SPECIFICATIONS

Brand	Whirlpool
Model Name	360 BW PRO H 8 KG
Capacity	8 Kilograms
Product Dimensions (D x W x H)	54D x 58W x 102.5H Centimeters
Item Weight	32 Kilograms
Max Rotational Speed	740 RPM
Voltage	220 Volts
Operation Mode	Fully Automatic
Controls Type	Touch
Drum Material	Stainless Steel
Special Features	In-Built Heater, 360 Bloomwash Technology, Power Dry Technology, Hard Water Wash
Included Components	Drain Hose, Fill Hose, Power Cord

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Your Whirlpool washing machine comes with a **3 Years Comprehensive Warranty** on the product and a **10 Years Warranty** on the Prime Mover & Motor. Please retain your purchase receipt for warranty claims.

8.2 Customer Support

For service, technical assistance, or to inquire about spare parts, please contact Whirlpool customer support. Refer to the official Whirlpool website or your purchase documentation for the most current contact details.

