

[Manuals.plus](#) /

› [BVXZIOP](#) /

› BVXZIOP R40S Pro Retro Game Console User Manual

## BVXZIOP R40S Pro

# BVXZIOP R40S Pro Retro Game Console User Manual

Model: R40S Pro

## 1. INTRODUCTION

This manual provides essential information for the safe and effective use of your BVXZIOP R40S Pro Retro Game Console. Please read this manual thoroughly before operating the device and retain it for future reference.

## 2. SAFETY INFORMATION

To ensure safe operation and prevent damage to the device, please observe the following:

- Do not place the console in a humid environment.
- Avoid exposing the device to extreme temperatures, direct sunlight, or open flames.
- Do not attempt to disassemble or modify the console. This may void your warranty and cause damage.
- Keep the device away from small children to prevent accidental ingestion of small parts.
- Use only the specified charging adapter (5V/1.5A) to charge the device.

## 3. PACKAGE CONTENTS


Please check that all items are present in your package:

- 1 x BVXZIOP R40S Pro Retro Game Console
- 1 x User Manual
- 1 x 256GB TF/microSD Card (pre-installed with games)
- 1 x USB Type-C Charging Cable

## 4. PRODUCT OVERVIEW

Familiarize yourself with the console's layout and controls.

# Button introduction

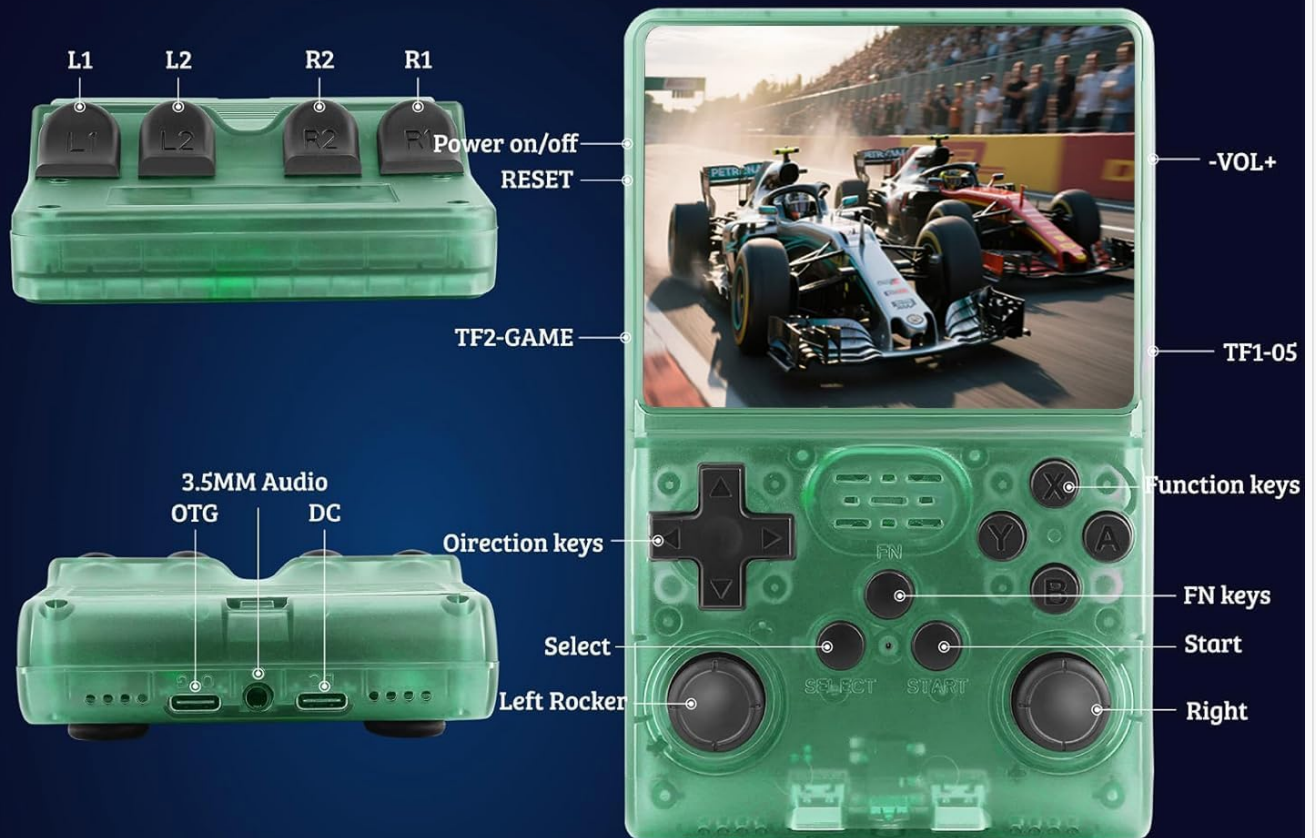

**Tip** There is a printing error in the key operation in the manual. Please use FN key to replace SELECT. Most games can be exited by pressing FN and START keys twice at the same time.

**Image 4.1: Console Button Layout.** This image illustrates the various buttons and ports on the BVXZIOP R40S Pro console, including the L1, L2, R1, R2 shoulder buttons, power on/off, reset, TF2-GAME, TF1-OS, 3.5mm audio jack, OTG port, DC charging port, direction keys, function keys (A, B, X, Y), FN keys, Select, Start, Left Rocker, and Right Rocker. Volume controls (VOL+) are also indicated.

## 4.1. Key Components

- **3.5-inch IPS Screen:** High-definition display for clear visuals.
- **Directional Pad (D-Pad):** For directional input in games and menu navigation.
- **Analog Joysticks:** Dual 3D joysticks for precise control.
- **Action Buttons (A, B, X, Y):** Primary game input buttons.
- **Shoulder Buttons (L1, L2, R1, R2):** Additional input buttons, typically used for triggers or special actions.
- **Start/Select Buttons:** For game functions and menu navigation.
- **FN Key:** Function key, used in combination with other keys for system operations. *Note: In some instances, the FN key replaces the SELECT key for certain operations, such as exiting games.*
- **Power Button:** To turn the console on or off.
- **Reset Button:** To restart the console.

- **TF Card Slots (TF1-OS, TF2-GAME):** For the operating system and game storage.
- **3.5mm Audio Jack:** For connecting headphones.
- **OTG Port:** For connecting external devices or HDMI adapter.
- **DC Charging Port:** For charging the console.



**Image 4.2: HD Color Screen.** This image highlights the 3.5-inch IPS screen of the R40S Pro console, featuring a resolution of 640x480 pixels for a clear and vibrant display.



**Image 4.3: Rear View and Card Slot.** This image displays the back of the R40S Pro console, showing the ergonomic placement of the L1, L2, R1, and R2 shoulder buttons, as well as the accessible TF card slot.

## 5. SETUP

### 5.1. Initial Charging

Before first use, fully charge the console. Connect the USB Type-C charging cable to the DC charging port on the console and the other end to a 5V/1.5A power adapter (not included) or a compatible USB port. The charging indicator will show the charging status.

### 5.2. Inserting the TF Card

The console comes with a 256GB TF card pre-installed in the TF2-GAME slot, containing the operating system and games. If you wish to use a different TF card for additional storage (up to 512GB), insert it into the designated TF card slot. Ensure the card is inserted correctly until it clicks into place.

### 5.3. Powering On

Press and hold the **Power** button located on the console until the screen illuminates and the system starts up.

## 6. OPERATING INSTRUCTIONS

## 6.1. Basic Navigation

- Use the **Directional Pad** or **Analog Joysticks** to navigate through menus and game lists.
- Press the **A button** to confirm selections.
- Press the **B button** to go back or cancel.

## 6.2. Playing Games

1. From the main menu, select the desired emulator or game category.
2. Browse the list of available games.
3. Select a game and press the **A button** to launch it.

## 6.3. Exiting Games

To exit a game, press the **FN key** and the **START key** simultaneously twice. This action will return you to the game selection menu or the main system interface.

## 6.4. Connecting to a TV (HDMI Output)

The R40S Pro supports connecting to a larger screen, such as a TV or projector, via an OTG HD interface adapter (not included). Connect the console to the adapter, and then connect the adapter to your TV's HDMI input. Switch your TV's input source to the corresponding HDMI port.

## 6.5. Wi-Fi Connectivity and Online Play

The console supports Wi-Fi connection for online multiplayer battles. To use this feature, you may need to connect a compatible Type-C Wi-Fi receiver (not included) to the OTG port. Once connected, navigate to the system settings to configure your Wi-Fi network.



**Supports wifi connection and online battle**  
(need to bring your own type-c wifi receiver)

**Image 6.1: Wi-Fi Connection and Online Battle.** This image demonstrates the R40S Pro console's capability to support Wi-Fi connectivity for online multiplayer gaming, with the option to display gameplay on a larger screen like a television.

## 6.6. Downloading Games

The console supports downloading games in related formats. Connect the console to a computer or use the Wi-Fi feature to transfer game files to the TF card. Ensure the game files are placed in the correct directories for the emulators to recognize them.

## 7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the console's exterior. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use for extended periods, store the console in a cool, dry place, away from direct sunlight and humidity.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the console regularly, even if not in use.

## 8. TROUBLESHOOTING

### 8.1. Console Does Not Power On

- Ensure the battery is charged. Connect the console to a charger and wait a few minutes before attempting to power on again.
- Press and hold the Power button for at least 5 seconds.
- If the issue persists, try pressing the Reset button with a thin object (e.g., a paperclip) and then attempt to power on.

### 8.2. Games Do Not Load or Crash

- Ensure the TF card is properly inserted into the TF2-GAME slot.
- Verify that the game files are not corrupted and are in the correct format for the emulator.
- Restart the console and try launching the game again.

### 8.3. Screen Issues (No Display, Flickering)

- Check if the console is powered on.
- If connected to a TV, ensure the HDMI cable is securely connected and the TV input is correct.
- Restart the console.

### 8.4. Controls Are Unresponsive

- Restart the console.
- Ensure no debris is obstructing the buttons or joysticks.

## 9. SPECIFICATIONS

| Feature          | Specification                                        |
|------------------|------------------------------------------------------|
| Model Name       | R40S Pro                                             |
| Brand            | BVXZIOP                                              |
| Screen           | 3.5-inch IPS Full Viewing Angle, OCA Fully Laminated |
| Resolution       | 640x480 pixels                                       |
| CPU              | ARM-Cortex A-A7 (RK3326CPU, 1.5GHz 64-bit)           |
| GPU              | Quad-core ARM Cortex-A7 (Mali-G31MP Dual-core GPU)   |
| RAM              | DDR3L 4GB*2                                          |
| Operating System | Linux                                                |
| Storage          | 256GB TF/microSD (Expandable up to 512GB)            |
| Battery          | 3800mAh Polymer Lithium Battery                      |
| Battery Life     | Approximately 6-8 hours                              |
| Charging         | 5V/1.5A, supports C2C charger                        |
| Connectivity     | Wi-Fi, HDMI (via OTG adapter), Type-C                |

|               |                                                                      |
|---------------|----------------------------------------------------------------------|
| Audio         | High-fidelity speaker, 3.5mm headphone jack                          |
| Input Device  | Gamepad (D-Pad, Dual 3D Joysticks, Action Buttons, Shoulder Buttons) |
| Weight        | 300g                                                                 |
| Color Options | White, Transparent Green, Purple, Transparent Gray                   |

## 10. WARRANTY AND SUPPORT

### 10.1. Product Warranty

This product comes with a **6-month warranty** from the date of purchase. The warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or improper maintenance.

### 10.2. Customer Support

For technical assistance, troubleshooting, or warranty claims, please contact your retailer or the manufacturer's customer support. Refer to your purchase documentation for contact details.

© 2026 BVXZIOP. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B0DFWRJZFP>

More documents and user manuals: <https://manuals.plus/>