

Tefal TW4835EG

Tefal Extent Power Bagless Vacuum Cleaner TW4835EG User Manual

Model: TW4835EG

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your Tefal Extent Power Bagless Vacuum Cleaner, model TW4835EG. Please read this manual thoroughly before operating the appliance and retain it for future reference. Proper use and maintenance will ensure optimal performance and extend the lifespan of your vacuum cleaner.

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not use the vacuum cleaner to pick up water or any other liquids, flammable or combustible materials, or hot ashes.
- Never operate the vacuum cleaner without the dust container and filters properly installed.
- Unplug the appliance from the power outlet before performing any maintenance, cleaning, or when not in use.
- Do not pull the power cord to unplug; grasp the plug itself.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not use the appliance if the power cord or plug is damaged. Contact an authorized service center for repair.
- This appliance is for household use only.

3. PRODUCT COMPONENTS

Familiarize yourself with the various parts of your Tefal Extent Power Bagless Vacuum Cleaner.



Image: The Tefal Extent Power vacuum cleaner shown with its main unit, flexible hose, telescopic tube, floor brush, and additional cleaning tools including a sofa brush and crevice nozzle.

1. Main Unit (Motor, Dust Container)
2. Flexible Hose
3. Telescopic Tube
4. Floor Brush (for carpet and hard floors)
5. Sofa Brush
6. Crevice Nozzle
7. Power Cord with Plug
8. Dust Container (2.5L capacity)
9. Foam Filter
10. High-Efficiency Filter

4. SETUP AND ASSEMBLY

Follow these steps to assemble your vacuum cleaner before first use.



Image: The fully assembled Tefal Extent Power vacuum cleaner, showcasing the main unit, hose, telescopic tube, and floor brush ready for use.

1. **Unpack:** Carefully remove all components from the packaging.
2. **Attach the Hose:** Insert the flexible hose into the air inlet opening on the main unit until it clicks securely into place.
3. **Connect the Telescopic Tube:** Attach the telescopic tube to the handle end of the flexible hose. Extend the tube to your desired length by pressing the release button and pulling.
4. **Attach the Floor Brush:** Connect the floor brush to the end of the telescopic tube. Ensure it is firmly attached.
5. **Power Connection:** Unwind the power cord and plug it into a suitable electrical outlet (220V).

5. OPERATING INSTRUCTIONS

Learn how to effectively use your vacuum cleaner for various cleaning tasks.



Image: The Tefal Extent Power vacuum cleaner's floor brush actively cleaning a hard floor surface, demonstrating its effective suction.

1. **Power On/Off:** Press the power button located on the main unit to switch the vacuum cleaner on or off.
2. **Adjusting Suction:** The vacuum cleaner features advanced mono-cyclonic filtration for consistent suction. For specific tasks, you may adjust the air flow using the slider on the hose handle (if present).
3. **Using the Floor Brush:** The floor brush is designed for both hard floors and carpets. Adjust the brush setting (if applicable) for optimal performance on different surfaces.
4. **Using Accessories:**
 - **Sofa Brush:** Ideal for cleaning upholstery, curtains, and delicate surfaces. Attach it directly to the hose handle or the telescopic tube.
 - **Crevice Nozzle:** Perfect for reaching narrow gaps, corners, and edges. Attach it directly to the hose handle or the telescopic tube.
5. **Retracting the Cord:** After use, press the cord rewind button (if available) to automatically retract the power cord.

6. MAINTENANCE AND CLEANING

Regular maintenance ensures your vacuum cleaner operates efficiently and prolongs its lifespan. Always unplug the appliance before cleaning or maintenance.



Image: A hand demonstrating the removal of the 2.5-liter dust container from the Tefal Extent Power vacuum cleaner, highlighting its easy-to-clean design.

6.1 Emptying the Dust Container

1. Press the dust container release button and carefully remove the container from the main unit.
2. Position the container over a waste bin. Open the bottom lid of the dust container and empty the collected dust and debris.
3. Close the lid securely and reattach the dust container to the vacuum cleaner until it clicks into place.

6.2 Cleaning the Filters

Your vacuum cleaner has two levels of filtration: a foam filter and a high-efficiency filter. Regular cleaning is crucial for maintaining suction power.



Image: A detailed view of the Tefal Extent Power vacuum cleaner's dust container, illustrating the 'advanced cyclonic system' for efficient dust separation.

1. **Accessing Filters:** After removing the dust container, you will find the foam filter. The high-efficiency filter is typically located behind the motor, often requiring removal of a cover. Refer to the diagrams in your specific product packaging for exact locations.
2. **Cleaning Foam Filter:** Rinse the foam filter under lukewarm running water. Squeeze gently to remove dirt. Allow it to air dry completely for at least 24 hours before reinserting. Do not use a dryer or direct heat.
3. **Cleaning High-Efficiency Filter:** Tap the high-efficiency filter gently over a waste bin to dislodge dust. Do not wash this filter unless explicitly stated in your product's specific instructions, as washing can damage some HEPA-type filters.
4. **Reassembly:** Ensure all filters are completely dry before reassembling them into the vacuum cleaner.

6.3 Cleaning Accessories

Wipe down the floor brush, sofa brush, and crevice nozzle with a damp cloth. Remove any tangled hair or debris from the brush rolls.

6.4 Storage

Store the vacuum cleaner in a dry place, away from direct sunlight and extreme temperatures. Its compact design allows for easy storage in cupboards or closets.

7. TROUBLESHOOTING

Before contacting customer service, refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	No power supply. Power cord not properly plugged in.	Check the power outlet. Ensure the power cord is fully inserted into the outlet.
Reduced suction power.	Dust container is full. Filters are clogged. Hose or attachments are blocked.	Empty the dust container. Clean or replace the foam and high-efficiency filters. Check the hose and attachments for obstructions and remove them.
Unusual noise during operation.	Obstruction in the brush or hose. Motor issue.	Turn off and unplug the vacuum. Check for and remove any obstructions. If the noise persists, contact customer support.
Dust escaping from the vacuum.	Dust container not properly closed. Filters not correctly installed or damaged.	Ensure the dust container is securely closed and correctly fitted. Check that filters are properly installed and undamaged. Clean or replace if necessary.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Tefal
Model	TW4835EG
Power Consumption	890W (Equivalent to 2100W cleaning performance)
Dust Container Capacity	2.5 Liters
Voltage	220 Volts
Noise Level	80 Decibels
Filter Type	Foam Filter, High-Efficiency Filter
Special Features	Bagless, Advanced Motor Technology, Mono-cyclonic filtration
Surface Recommendation	Carpet, Hard Floor
Item Weight	1 Kilogram
Package Dimensions	10 x 8 x 8 cm

9. WARRANTY INFORMATION

Your Tefal Extent Power Bagless Vacuum Cleaner is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase or visit the official Tefal website for detailed terms and conditions,


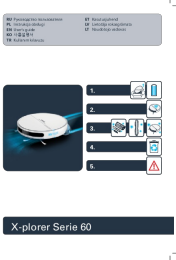


including warranty period and coverage. Keep your proof of purchase for any warranty claims.

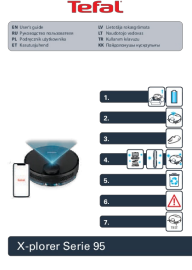

10. CUSTOMER SUPPORT

For further assistance, spare parts, or service, please contact Tefal customer support. You can find contact information on the official Tefal website or through your local authorized service center. When contacting support, please have your model number (TW4835EG) and serial number ready.

© 2024 Tefal. All rights reserved.

Related Documents - TW4835EG

	<p>Tefal Fast & Delicious Multicooker User Manual</p> <p>User manual for the Tefal Fast & Delicious Multicooker, providing comprehensive guidance on its operation, featuring a range of cooking functions including pressure cooking, steaming, baking, and more. Discover how to prepare delicious meals efficiently with this innovative multicooker from Tefal.</p>
	<p>Tefal X-plorer Serie 60 Robot Vacuum Cleaner User Manual</p> <p>User manual for the Tefal X-plorer Serie 60 robot vacuum cleaner. Provides setup, operation, maintenance, and troubleshooting guides in multiple languages for efficient home cleaning.</p>
	<p>Tefal X-Plorer Serie 220 Robot Vacuum User Manual</p> <p>User manual for the Tefal X-Plorer Serie 220 robot vacuum cleaner, covering setup, operation, maintenance, troubleshooting, and features like vacuuming and mopping.</p>
	<p>Tefal X-plorer Serie 120 AI Robot Vacuum Cleaner User Guide</p> <p>Comprehensive user guide for the Tefal X-plorer Serie 120 AI robot vacuum cleaner, covering setup, operation, maintenance, troubleshooting, and specifications. Learn how to use and care for your device.</p>

 <p>The image shows the cover of the Tefal X-plorer Serie 95 Robot Vacuum Cleaner User Manual. It features the Tefal logo at the top left. Below it, there is a list of contents in two columns, numbered 1 through 10. The list includes: 1. Introduction, 2. Safety instructions, 3. Assembly, 4. Operation, 5. Maintenance, 6. Troubleshooting, 7. Accessories, 8. Cleaning, 9. Storage, and 10. Index. In the center, there is a small image of the robot vacuum cleaner. At the bottom, the text 'X-plorer Serie 95' is visible.</p>	<p>Tefal X-plorer Serie 95 Robot Vacuum Cleaner User Manual</p> <p>Comprehensive user manual for the Tefal X-plorer Serie 95 robot vacuum cleaner, covering setup, operation, maintenance, and troubleshooting.</p>
 <p>The image shows the cover of the Tefal Easy Fry Grill & Steam: Versatile 3-in-1 Air Fryer, Grill, and Steamer Guide. It features the title 'EASY FRY GRILL & STEAM' at the top. Below the title, there is a list of contents in two columns, numbered 1 through 10. The list includes: 1. Introduction, 2. Safety instructions, 3. Assembly, 4. Operation, 5. Maintenance, 6. Troubleshooting, 7. Accessories, 8. Cleaning, 9. Storage, and 10. Index. In the center, there is a small image of the air fryer. At the bottom, the text 'Easy Fry Grill & Steam' is visible.</p>	<p>Tefal Easy Fry Grill & Steam: Versatile 3-in-1 Air Fryer, Grill, and Steamer Guide</p> <p>Discover the Tefal Easy Fry Grill & Steam, a 3-in-1 kitchen appliance that combines air frying, grilling, and steaming. This guide covers product features, accessories, digital touchscreen functions, cooking programs, and usage tips for healthy and delicious meals.</p>