

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [SKMEI](#) /
- › [SKMEI Digital Watch Model 2325 Instruction Manual](#)

SKMEI 2325

SKMEI Digital Watch Model 2325 Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your SKMEI Digital Watch Model 2325. Designed for an active lifestyle, this watch combines modern aesthetics with practical features. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your timepiece.

KEY FEATURES

Key Features

Display

Digital

Dial Shape

Rectangle

Features

**Date, Week, EL Light,
Count Down Timer**

Strap Material

Silica Gel

Water Resistance

50 m



Image: Overview of the SKMEI Digital Watch Model 2325 highlighting its main features.

- **Digital Display:** Clear and easy-to-read time and information.
- **Rectangular Dial:** Modern and sleek design.
- **Functions:** Displays Date, Day of the Week, and features an Electroluminescent (EL) Light and Countdown Timer.
- **Strap Material:** Durable and comfortable Silica Gel.
- **Water Resistance:** 50 meters, suitable for swimming and shallow snorkeling.

WATCH COMPONENTS



Image: Front view of the watch, displaying the digital time and the 'SET/EL' and 'MODE' buttons on the right side.



Image: Rear view of the watch, showing the stainless steel case back and water resistance details.

Your SKMEI Digital Watch Model 2325 features a clear digital display, two control buttons on the side (typically labeled 'MODE' and 'SET/EL'), and a durable silica gel strap with a stainless steel buckle. The watch is powered by a pre-installed C battery.

SETUP

Initial Activation

Your watch comes with a pre-installed battery. If the display is not active, check for a small plastic tab under the crown or button, which may need to be removed to activate the battery. Ensure any protective films on the watch face or case back are removed before use.

OPERATING INSTRUCTIONS

Button Functions

- **MODE Button:** Cycles through different display modes (Time, Date, Alarm, Stopwatch, Countdown Timer).
- **SET/EL Button:** Used to adjust settings within a mode and activate the Electroluminescent (EL) backlight.

Setting Time and Date

1. From the normal time display, press the **MODE** button repeatedly until the time setting mode is indicated (often by flashing digits).
2. Press the **SET/EL** button to adjust the flashing digit (e.g., hours, minutes).
3. Press the **MODE** button again to move to the next setting (e.g., minutes, then year, month, day).
4. Repeat steps 2 and 3 until all desired settings (time, year, month, day) are correctly adjusted.
5. Once finished, press the **MODE** button to exit the setting mode and return to the normal time display.

Using the EL Light

To illuminate the display in low-light conditions, press the **SET/EL** button. The backlight will activate for a few seconds.

Using the Countdown Timer

1. Press the **MODE** button repeatedly until the Countdown Timer mode is displayed.
2. To set the countdown time, press and hold the **SET/EL** button until the digits begin to flash.
3. Use the **MODE** button to select the digit to adjust (hours, minutes, seconds) and the **SET/EL** button to change its value.
4. Once the desired countdown time is set, press the **MODE** button to confirm and exit the setting.
5. Press the **SET/EL** button to start or pause the countdown.
6. When the countdown reaches zero, an alarm will sound.

MAINTENANCE

- **Cleaning:** Wipe the watch regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by drying. Avoid harsh chemicals or abrasive materials.
- **Water Resistance:** The watch is 50M water-resistant, suitable for swimming and shallow snorkeling. *Do not press buttons underwater.* Avoid exposure to hot water, steam, or extreme temperature changes, as this can compromise the water seals.
- **Battery:** The watch uses a C battery. When the display dims or functions become erratic, it may be time for a battery replacement. It is recommended to have battery replacement performed by a qualified watch technician to ensure water resistance is maintained.
- **Storage:** Store your watch in a cool, dry place away from direct sunlight and strong magnetic fields when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Battery is low or depleted.	Replace the battery.
Time is incorrect.	Time was not set correctly or reset.	Refer to "Setting Time and Date" section to reset the time.
Buttons are unresponsive.	Watch may be in a locked mode or internal issue.	Try pressing all buttons to see if it unlocks. If issue persists, contact support.

Problem	Possible Cause	Solution
Water inside the watch.	Water resistance compromised (e.g., buttons pressed underwater, exposure to hot water).	Immediately take the watch to a service center. Do not attempt to dry it yourself.

SPECIFICATIONS

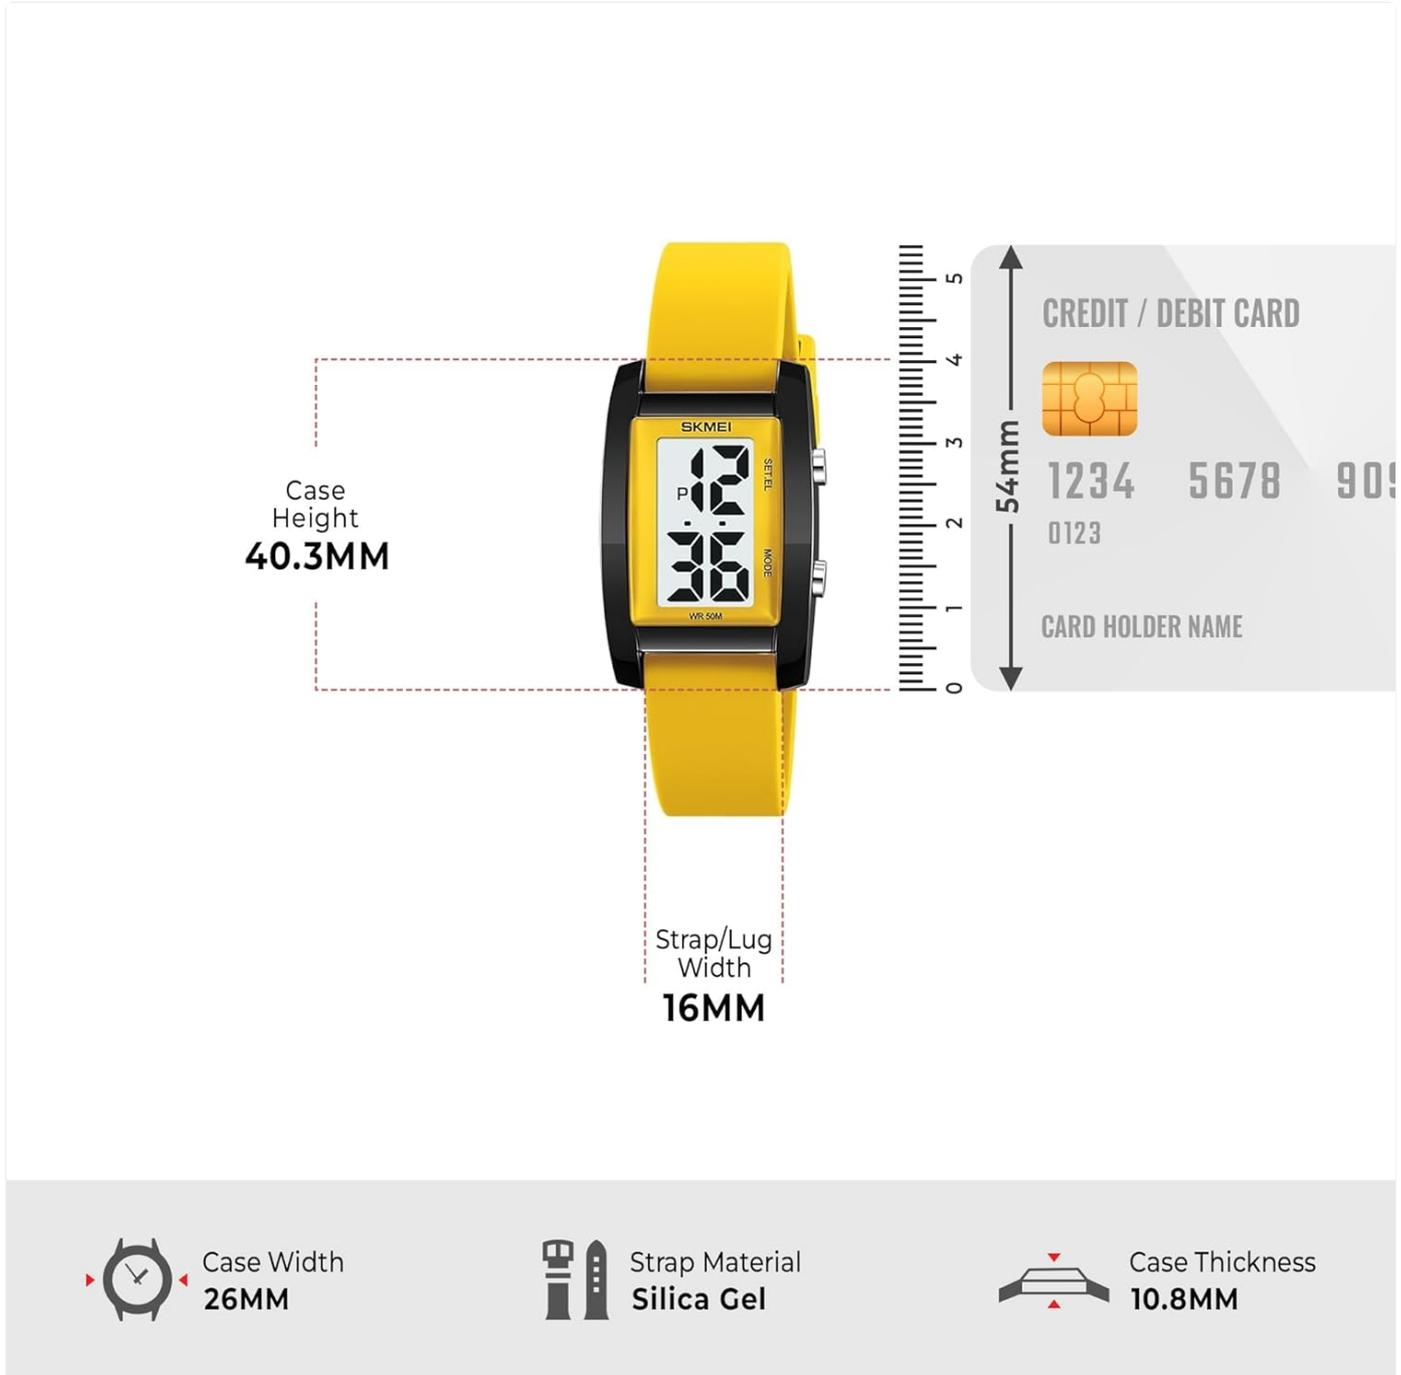


Image: Detailed dimensions of the watch for reference.

Feature	Detail
Model Name	2325BKYL
Display Type	Digital
Movement Type	Quartz

Feature	Detail
Power Source	Battery Powered (1 C battery included)
Water Resistance Depth	50 Metres
Strap Material	Silica Gel
Case Material	PC (Polycarbonate)
Crystal Material	Resin
Case Diameter	2.6 Centimetres
Case Thickness	1.08 Centimetres
Band Width	1.6 Centimetres
Band Length	23.5 Centimetres
Item Weight	27.4 Grams
Country of Origin	China

WARRANTY AND SUPPORT

Manufacturer Warranty

Your SKMEI Digital Watch Model 2325 comes with a **9-month Manufacturer Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use.

Customer Support

For any service-related inquiries, feedback, or warranty claims, please contact the SKMEI India Helpline:

Helpline Number: [1800-889-6251](tel:1800-889-6251)

Operating Hours: Monday to Saturday, 9:00 AM to 6:00 PM (IST)

Please have your purchase details and watch model number ready when contacting support.

