

[Manuals.plus](#) /

> [Leopold](#) /

> Leopold FC730MBT V2 Bluetooth Mechanical Keyboard User Manual

Leopold FC730MBT V2

Leopold FC730MBT V2 Bluetooth Mechanical Keyboard User Manual

Model: FC730MBT V2 (Cherry MX2A Black)



Image: Leopold FC730MBT V2 Bluetooth Mechanical Keyboard. This image displays the keyboard's layout and color scheme, highlighting its compact design and keycap aesthetics.

1. INTRODUCTION

Thank you for choosing the Leopold FC730MBT V2 Bluetooth Mechanical Keyboard. This manual provides detailed instructions for setting up, operating, and maintaining your new keyboard. Please read this manual thoroughly to ensure proper usage and to maximize your typing experience. This keyboard offers both wired USB-C and wireless Bluetooth 5.1 connectivity, featuring Cherry MX2A switches and durable Double Shot PBT keycaps.

2. PACKAGE CONTENTS

Please verify that all items are present in your package:

- Leopold FC730MBT V2 Mechanical Keyboard
- 3x AAA Batteries (pre-installed or included separately)

- USB-C to USB-A Cable
- User Manual (this document)

3. SETUP

3.1. Battery Installation

The FC730MBT V2 keyboard operates wirelessly using three (3) AAA batteries. If the batteries are not pre-installed, locate the battery compartment on the underside of the keyboard. Open the cover, insert the AAA batteries according to the polarity indicators (+/-), and close the compartment securely.

3.2. Wired Connection

To use the keyboard in wired mode:

1. Connect the USB-C end of the provided cable to the USB-C port on the keyboard.
2. Connect the USB-A end of the cable to an available USB port on your computer.
3. The keyboard will be automatically recognized by your operating system and is ready for use.

3.3. Bluetooth Pairing

The FC730MBT V2 supports Bluetooth 5.1 and can be paired with up to four devices. Follow these steps to pair your keyboard:

1. Ensure the keyboard is powered on (if using batteries) and not connected via USB-C.
2. On the keyboard, press and hold the **Fn** key and one of the **Bluetooth profile keys (Q, W, E, R)** for 3-5 seconds until the corresponding key's LED indicator starts blinking rapidly. This indicates pairing mode.
3. On your device (PC, Laptop, Smartphone, Tablet), navigate to the Bluetooth settings.
4. Search for available devices. You should see "Leopold FC730MBT V2" or a similar name appear in the list.
5. Select the keyboard to initiate pairing. If prompted, enter the displayed code on the keyboard and press **Enter**.
6. Once paired, the LED indicator on the chosen Bluetooth profile key will stop blinking and remain steadily lit for a few seconds, then turn off. The keyboard is now connected.
7. Repeat these steps for other devices using different Bluetooth profile keys (Q, W, E, R).

4. OPERATING INSTRUCTIONS

4.1. Switching Between Wired and Bluetooth Modes

The keyboard automatically prioritizes a wired connection. If the USB-C cable is connected, the keyboard will operate in wired mode. To switch to Bluetooth mode, disconnect the USB-C cable. To switch back to wired mode, simply connect the USB-C cable.

4.2. Switching Between Paired Bluetooth Devices

To switch between previously paired Bluetooth devices:

- Press the **Fn** key along with the corresponding Bluetooth profile key (**Q, W, E, or R**) that your desired device is paired to.
- The keyboard will attempt to connect to the selected device. The LED indicator will briefly light up to confirm the selection.

4.3. Special Key Functions

The FC730MBT V2 features a compact layout with various functions accessible via the **Fn** key. Refer to the keycap legends for specific secondary functions. Common functions include:

- **Fn + F1-F12:** Multimedia controls (e.g., volume, play/pause).
- **Fn + Arrow Keys:** Page Up/Down, Home/End (depending on specific model layout).
- **Fn + Q/W/E/R:** Bluetooth device switching.

Note: Specific key combinations may vary slightly. Consult the printed keycap legends for precise functions.

5. MAINTENANCE

5.1. Cleaning the Keyboard

To maintain the keyboard's appearance and functionality:

- Disconnect the keyboard from your computer or turn off Bluetooth before cleaning.
- Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to wipe the keycaps and case. Avoid excessive moisture.
- For dust and debris between keycaps, use compressed air.
- Do not use harsh chemicals, abrasive cleaners, or solvents, as these can damage the keycaps and finish.

5.2. Keycap Removal (Optional)

If you need to clean under the keycaps or replace them, use a keycap puller. Gently hook the puller onto the keycap and pull straight up. When reattaching, align the keycap with the switch stem and press down firmly until it clicks into place. Exercise caution to avoid damaging the switch stems.

6. TROUBLESHOOTING

If you encounter issues with your Leopold FC730MBT V2 keyboard, refer to the following common solutions:

- **Keyboard not responding (Wired Mode):** Ensure the USB-C cable is securely connected to both the keyboard and the computer. Try a different USB port or cable.
- **Keyboard not responding (Bluetooth Mode):**
 - Check if the batteries are properly installed and have sufficient charge. Replace if necessary.
 - Ensure Bluetooth is enabled on your device.
 - Verify that the correct Bluetooth profile (Fn+Q/W/E/R) is selected.
 - Try re-pairing the keyboard with your device. Remove the keyboard from your device's Bluetooth list and repeat the pairing process.
 - Ensure the keyboard is within the effective range of your Bluetooth device.
- **Keys not registering or double-typing:** This could indicate a software issue or a dirty switch. Try cleaning the affected key. If the issue persists, contact support.
- **Intermittent connection:** Ensure there are no strong sources of interference (e.g., Wi-Fi routers, other Bluetooth devices) too close to the keyboard or your device.

7. SPECIFICATIONS

| | |
|---------------------------|---|
| Model | FC730MBT V2 |
| Connectivity | USB-C (Wired), Bluetooth 5.1 (Wireless) |
| Switches | Cherry MX2A Black |
| Keycaps | Double Shot PBT |
| Power Source | 3x AAA Batteries (Bluetooth), USB-C (Wired) |
| Compatible Devices | Laptop, PC, Smartphone, Tablet |
| Dimensions | 15.16 x 4.92 x 2.76 inches (Package) |
| Item Weight | 2.2 pounds |
| Special Features | Sound absorbing pad and foam, FR4 dual-layer PCB, 7u spacebar |

8. WARRANTY AND SUPPORT

Leopold products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official Leopold website. If you require technical assistance or have questions not covered in this manual, please contact Leopold customer support through their official channels.

For further assistance, you may visit the [Leopold Store on Amazon](#).