

Lacoste LC33 Quartz Basic Round Dial Men's Watch User Manual

Model: 2011364

INTRODUCTION

Thank you for choosing the Lacoste LC33 Quartz Basic Round Dial Men's Watch. This manual provides essential information for the proper setup, operation, and maintenance of your new timepiece. Please read these instructions carefully to ensure optimal performance and longevity of your watch.

PRODUCT OVERVIEW

The Lacoste LC33 watch combines a classic analog display with modern digital functionalities, housed in a durable TR90 case with a comfortable silicone strap. It features a precise quartz movement and is designed for daily wear.



Front view of the Lacoste LC33 watch, showcasing its white strap, white dial, green accents, and dual analog-digital display.



Side view of the Lacoste LC33 watch, showing the watch's profile and the green control buttons on the side.



Back view of the Lacoste LC33 watch, featuring the stainless steel case back engraved with the Lacoste crocodile logo and model details.



LACOSTE 

The Lacoste LC33 watch displayed on a wrist, illustrating its comfortable fit and contemporary style.



Close-up of the watch dial, emphasizing the integrated analog and digital time displays.



The watch dial illuminated by its LED backlight, ensuring visibility in low-light conditions.




The watch dial showcasing its calendar function, displaying the day of the week and date.



The watch dial illustrating the chronograph feature with split functions for precise time measurement.



The watch dial displaying the alarm clock function, indicating the set alarm time.

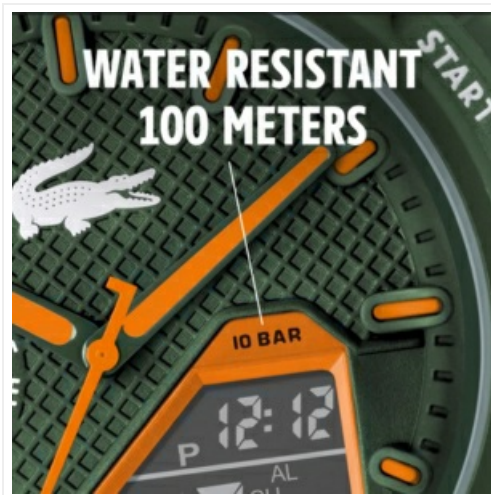

The watch dial clearly marked with '10 BAR', signifying its 100-meter water resistance.

SETUP

Your Lacoste LC33 watch comes with a pre-installed battery and is ready for initial setup. Before wearing, ensure the time and date are correctly set.

Initial Time and Date Setting

- Analog Time Adjustment:** Pull the crown (the knob on the side of the watch) out to the first or second click position (refer to specific watch model for exact clicks). Rotate the crown to set the hour and minute hands. Push the crown back in to start the watch.
- Digital Time and Date Adjustment:** Use the 'MODE' button to cycle through the digital display modes (Time, Date, Alarm, Chronograph). When in the desired setting mode (e.g., Time setting), use the 'RESET' or 'START' buttons to adjust the values. The 'LIGHT' button may be used to confirm selections or advance to the next setting parameter.

For detailed digital setting instructions, refer to the specific functions described in the 'Operating Instructions' section.

OPERATING INSTRUCTIONS

The Lacoste LC33 features a combination of analog and digital displays, offering various functions controlled by the crown and side buttons.

Button Functions

- **LIGHT Button:** Activates the LED backlight for the digital display. May also be used to confirm settings in certain modes.
- **MODE Button:** Cycles through the digital display modes: Time, Date, Alarm, Chronograph. Press and hold to enter setting mode for the current display.
- **START Button:** Used to start/stop the chronograph, adjust values in setting modes, or toggle features.
- **RESET Button:** Used to reset the chronograph, adjust values in setting modes, or exit setting modes.

Setting Digital Time and Date

1. Press the 'MODE' button until the digital time display is shown.
2. Press and hold the 'MODE' button until the digits begin to flash, indicating setting mode.
3. Use the 'START' or 'RESET' buttons to adjust the flashing digit (hours, minutes, seconds).
4. Press the 'MODE' button again to move to the next setting parameter (e.g., minutes, then date, month, year).
5. Once all settings are complete, press the 'MODE' button or wait for a few seconds for the watch to automatically exit setting mode.

Using the Chronograph (Stopwatch)

1. Press the 'MODE' button until the chronograph display appears (usually indicated by 'CH' or 'STW').
2. Press the 'START' button to begin timing.
3. Press the 'START' button again to pause timing.
4. Press the 'RESET' button to clear the timed value and return to zero.

Setting the Alarm

1. Press the 'MODE' button until the alarm display appears (usually indicated by 'AL').
2. Press and hold the 'MODE' button until the alarm time digits begin to flash.
3. Use the 'START' or 'RESET' buttons to adjust the flashing digits for the desired alarm hour and minute.
4. Press the 'MODE' button to move between hour and minute settings.
5. To activate/deactivate the alarm, press the 'START' button while in the alarm display mode (not setting mode). An alarm icon will typically appear when activated.

Water Resistance

Your watch is water resistant up to 100 meters (10 BAR). This means it is suitable for swimming, snorkeling, and showering. However, it is **not** suitable for scuba diving. Do not operate the crown or buttons while the watch is wet or submerged, as this can compromise the water resistance.

MAINTENANCE

Proper care will extend the life and appearance of your Lacoste LC33 watch.

Cleaning

- Wipe the watch case and strap regularly with a soft, dry cloth.
- For silicone straps, a mild soap and water solution can be used, followed by thorough rinsing and drying.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish and materials.

Battery Replacement

The watch is powered by 1 A battery. When the digital display becomes dim or the watch stops functioning, it is time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

Storage

When not wearing your watch, store it in a cool, dry place away from direct sunlight and extreme temperatures. Keep it away from strong magnetic fields, which can affect the accuracy of quartz movements.

TROUBLESHOOTING

If you encounter issues with your watch, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Watch not running / Digital display blank	Battery depleted	Replace battery (professional service recommended).
Incorrect time / Date	Time/date not set correctly or accidentally changed.	Refer to 'Initial Time and Date Setting' and 'Operating Instructions' to reset.
Water inside the watch	Crown/buttons operated underwater or seals compromised.	Immediately take the watch to a service center. Do not attempt to dry it yourself.
Buttons not responding	Watch may be in a locked mode or battery low.	Try pressing the 'MODE' button to exit any special modes. If issue persists, consider battery replacement.

If the problem persists after attempting these solutions, please contact customer support or a certified service center.

SPECIFICATIONS

Feature	Detail
Model Name	LC33
Model Number	2011364
Movement Type	Quartz
Display Type	Analog-Digital

Feature	Detail
Case Diameter	43.75 Millimetres
Case Material	TR90 (Shatter-proof) / Stainless Steel (Case back)
Band Material Type	Silicone
Band Colour	White
Dial Colour	White
Crystal Material	Mineral Glass
Water Resistance Depth	100 Metres (10 BAR)
Power Source Type	Battery Powered (1 A battery included)
Item Weight	61 Grams
Product Dimensions	1.5 x 4.5 x 2.6 cm

WARRANTY AND SUPPORT

Warranty Information

Your Lacoste LC33 watch comes with a **Limited Warranty**. Please retain your proof of purchase for any warranty claims. The warranty covers manufacturing defects under normal use. It does not cover damage resulting from improper handling, accidents, unauthorized repairs, or normal wear and tear.

Customer Support

For technical assistance, service, or warranty inquiries, please contact the manufacturer or authorized service center.

- **Manufacturer:** Movado Watch Company AG Bettlachstrasse 8, 2540 Grenchen Suisse, Swissam Products Limited, 29th Floor, Citicorp Centre, 18 Whitefield Road, North Point, HONG KONG
- **Importer/Packer (India):** IndiQube Epsilon, Amar Jyothi House Building, Domlur, 100 Feet Road, Bangalore, 560071.

You can also visit the official Lacoste store on Amazon for more product information: [Lacoste Store](#)