

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Lacoste](#) /
- › [Lacoste LAC2011367 LC33 Men's Analog-Digital Wristwatch Instruction Manual](#)

Lacoste 2011367

Lacoste LAC2011367 LC33 Men's Analog-Digital Wristwatch

INSTRUCTION MANUAL

Introduction

Thank you for choosing the Lacoste LAC2011367 LC33 Analog-Digital Wristwatch. This manual provides essential information for the proper setup, operation, and maintenance of your watch. Please read it carefully to ensure optimal performance and longevity of your timepiece.





Front view of the Lacoste LAC2011367 LC33 watch, showcasing its green case, silicone strap, analog hands, and digital display.

Watch Components

Familiarize yourself with the various parts and controls of your Lacoste LC33 watch:



Diagram illustrating the buttons and display elements of the Lacoste LAC2011367 LC33 watch.

- **A: LIGHT Button** - Activates the backlight for the digital display.

- **B: MODE Button** - Cycles through different digital display modes (Time, Alarm, Stopwatch, Timer).
- **C: RESET Button** - Used for resetting stopwatch, timer, or adjusting settings.
- **D: START Button** - Used for starting stopwatch, timer, or adjusting settings.
- **1, 2: Crown Positions** - Used for setting analog time.
- **H: Hour Hand** - Displays the current hour.
- **M: Minute Hand** - Displays the current minute.
- **S: Second Hand** - Displays the current second.
- **V: Digital Day Display** - Shows the current day of the week.
- **W: Digital Multifunction Display** - Shows digital time, date, alarm, stopwatch, or timer depending on the selected mode.

Setup

Setting the Analog Time

1. Pull the crown (between buttons D and C) out to position 2.
2. Turn the crown to adjust the hour and minute hands to the desired time.
3. Push the crown back into position 1 to start the watch.

Setting the Digital Time and Date

1. Press the **MODE** button (B) repeatedly until the digital time display starts flashing, indicating it's in setting mode.
2. Use the **RESET** button (C) to select the digit or setting you wish to change (e.g., hours, minutes, year, month, day).
3. Use the **START** button (D) to increase the selected value. Hold to rapidly advance.
4. Once all settings are correct, press the **MODE** button (B) again to exit setting mode.

Setting the Alarm

1. Press the **MODE** button (B) until the alarm time is displayed and flashing.
2. Use the **RESET** button (C) to select hours or minutes.
3. Use the **START** button (D) to adjust the alarm time.
4. Press the **MODE** button (B) to confirm and exit.
5. To activate/deactivate the alarm, press the **START** button (D) while in alarm mode. An alarm icon will appear/disappear.

Battery Information

Your watch requires 1 A battery, which is included. When the battery runs low, the digital display may dim or the watch may stop. Please consult a professional for battery replacement.

Operating Instructions

Using the Backlight

Press the **LIGHT** button (A) to illuminate the digital display for a few seconds, improving visibility in low-light conditions.

Using the Stopwatch

1. Press the **MODE** button (B) until the stopwatch mode is displayed (usually indicated by '00:00:00').
2. Press the **START** button (D) to begin timing.

3. Press the **START** button (D) again to pause/resume timing.
4. Press the **RESET** button (C) to reset the stopwatch to zero.

Water Resistance

This watch is water-resistant up to 100 meters (10 ATM), making it suitable for swimming and snorkeling. It is not recommended for diving. Do not operate buttons or the crown while the watch is wet or submerged, as this can compromise the water resistance.



Side view of the Lacoste LAC2011367 LC33 watch, showing the robust case and button design.

Maintenance

Cleaning Your Watch

Wipe the watch case and strap regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch's finish and seals.

Water Resistance Precautions

- Ensure the crown is fully pushed in before exposing the watch to water.
- Avoid operating buttons while the watch is submerged or wet.
- Do not expose the watch to hot water, steam, or extreme temperature changes, as this can affect the water-resistant seals.
- Have the water resistance checked periodically by a qualified watch technician, especially after any impact or battery change.

Battery Replacement

When the battery needs replacement, it is recommended to take your watch to an authorized Lacoste service center or a reputable watch repair shop. This ensures that the correct battery type is used and the water resistance is maintained.

Troubleshooting

If you encounter any issues with your watch, please refer to the following common solutions:

Problem	Possible Cause	Solution
Analog hands not moving	Battery depleted; Crown not pushed in; Watch needs service.	Push crown in fully. Replace battery. Contact service center.
Digital display is blank or dim	Battery depleted.	Replace battery.
Incorrect time/date displayed	Time/date not set correctly; Watch has been reset.	Refer to "Setting the Time and Date" section to reset.
Water inside the watch	Crown/buttons operated underwater; Seals compromised.	Immediately take to a service center to prevent further damage.

If the problem persists after attempting these solutions, please contact an authorized service center.

Specifications

- **Brand:** Lacoste
- **Model Name:** LC33
- **Model Number:** 2011367
- **Product Dimensions:** 4.5 x 2.6 x 1.5 cm; 61 grams
- **Display Type:** Analog-Digital
- **Movement:** Quartz
- **Power Source:** Battery Powered (1 A battery included)
- **Water Resistance Depth:** 100 Meters (10 ATM)
- **Strap Material:** Silicone

- **Case Material:** Stainless Steel and TR90
- **Dial Window Material Type:** Mineral Glass
- **Case Diameter:** 43.75 Millimeters
- **Strap Width:** 25.92 Millimeters
- **Case Thickness:** 14.9 Millimeters
- **Clasp Type:** Buckle (Tang Buckle)
- **Included Components:** Watch, user manual



Back view of the Lacoste LAC2011367 LC33 watch, showing the stainless steel case back with engravings.

Warranty

This Lacoste watch comes with a limited warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration of coverage. Keep your proof of purchase for warranty claims.

Support

For further assistance, technical support, or service inquiries, please contact your authorized Lacoste retailer or visit the official Lacoste website for customer service contact information. When contacting support, please have your watch model number (LAC2011367) and purchase details ready.



LACOSTE 

The Lacoste LAC2011367 LC33 watch comfortably worn on a wrist.

© 2024 Lacoste. All rights reserved.