



[Manuals.plus](#) /

› [Chefman](#) /

› Chefman Compact 5.7L Hi-Fry Air Fryer with Easy View Window Instruction Manual

## Chefman RJ38-6TW-BLK-DS-EU

# Chefman Compact 5.7L Hi-Fry Air Fryer with Easy View Window Instruction Manual

Model: RJ38-6TW-BLK-DS-EU

## INTRODUCTION

Thank you for choosing the Chefman Compact 5.7L Hi-Fry Air Fryer. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read all instructions thoroughly before first use and retain this manual for future reference.



Image: The Chefman Compact 5.7L Hi-Fry Air Fryer, showcasing its sleek black design, digital display, and prominent handle.

## IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons. This appliance is for household use only.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface, away from walls or other appliances to allow adequate air circulation.

## SETUP AND FIRST USE

---

### Unpacking

1. Carefully remove all packaging materials, stickers, and labels from the air fryer.
2. Remove the air fryer basket and crisper tray from the main unit.

### Initial Cleaning

- Wash the air fryer basket and crisper tray with hot, soapy water. Rinse thoroughly and dry completely.
- Wipe the interior and exterior of the main unit with a damp cloth. Do not immerse the main unit in water.

### Placement

- Place the air fryer on a stable, level, heat-resistant surface.
- Ensure there is at least 15 cm (6 inches) of space around the back and sides of the appliance for proper air circulation.
- Plug the power cord into a grounded electrical outlet.

## OPERATING INSTRUCTIONS

---

The Chefman Compact 5.7L Hi-Fry Air Fryer features intuitive digital touch controls for easy operation.

# Facile da usare

Comandi touch intuitivi per cucinare con facilità



Image: The digital touch control panel of the air fryer, showing various preset icons and temperature/time adjustments.

## Basic Operation

1. Place food in the air fryer basket. Do not overfill.
2. Slide the basket firmly into the main unit until it clicks into place. The appliance will not operate if the basket is not properly closed.
3. Press the **Power** button to turn on the display.
4. Select a preset cooking function (Fish, Fries, Chicken, Meat) or manually adjust the temperature and time using the **TIME/TEMP** button and the + / - buttons. The temperature range is 100°C to 235°C.
5. Press the **START** button to begin cooking.
6. The **Easy-View Window** allows you to monitor cooking progress without opening the basket. You can also press the **LIGHT** button to illuminate the interior.
7. To pause cooking, press the **STOP/CANCEL** button once. Press again to resume or hold to cancel the program.

# Finestra per una facile ispezione

Controlla la cottura del cibo fino alla croccantezza ideale senza aprire il cestello



Image: The air fryer's Easy-View window, demonstrating how food can be monitored during cooking without opening the basket.

## Hi-Fry Technology

For extra crispy results, utilize the Hi-Fry Technology. This feature allows the air fryer to reach a maximum temperature of 235°C, ideal for achieving a golden, crunchy finish on items like chicken wings or fries during the last few minutes of cooking.

# Pulsante Hi-Fry

Aumenta la temperatura fino a 235 °C per una consistenza extra croccante



Image: Interior view of the air fryer with heating elements and hot air circulating around food, illustrating the Hi-Fry technology for extra crispiness.

## Cooking Capacity

With a generous 5.7-liter capacity, this air fryer is suitable for preparing meals for 3-5 people, accommodating items like chicken and fries efficiently.

# Capacità di 5,7 litri

Contiene pollo e patatine  
sufficienti a soddisfare  
tutta la famiglia



Image: The 5.7-liter capacity air fryer shown with a full basket of fries, surrounded by other cooked dishes, demonstrating its suitability for family meals.

## Healthy Cooking

Enjoy delicious meals with significantly less oil. The air frying process uses hot air circulation to cook food, reducing fat content compared to traditional deep frying.

# Friggi In Meno Tempo e Mangia Più Sano



Temperatura  
massima di

**235 °C**

**85 %**

di olio in  
meno

Capacità  
totale di

**5,7 L**

Image: A display of healthy meals prepared with the air fryer, such as salmon with asparagus and crispy chicken, highlighting the benefit of 85% less oil.

## CARE AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your Chefman Air Fryer.

### Cleaning

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. The air fryer basket and crisper tray are non-stick and dishwasher safe (top rack recommended).
3. For stubborn food residue, soak the basket and tray in warm, soapy water for 10-15 minutes before cleaning.
4. Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads.
5. Clean the interior of the appliance with a damp cloth and mild detergent if necessary. Ensure it is completely dry before storage.

# Facile da pulire

Il cestello è antiaderente e lavabile in lavastoviglie nel ripiano superiore



Image: The non-stick air fryer basket and crisper tray placed in the top rack of a dishwasher, illustrating their dishwasher-safe feature.

## Storage

Store the cooled and cleaned air fryer in a dry place. Ensure the power cord is neatly wrapped and secured.

## TROUBLESHOOTING

If you encounter any issues with your air fryer, please refer to the following common problems and solutions:

| Problem                     | Possible Cause                                  | Solution                                                                                                         |
|-----------------------------|-------------------------------------------------|------------------------------------------------------------------------------------------------------------------|
| Appliance does not turn on. | Not plugged in; Basket not fully inserted.      | Ensure power cord is securely plugged into a grounded outlet. Push the basket firmly until it clicks into place. |
| Food is not cooked evenly.  | Basket is overcrowded; Food not shaken/flipped. | Cook food in smaller batches. Shake or flip food halfway through cooking for even results.                       |

| Problem                            | Possible Cause                                        | Solution                                                                                                                                                   |
|------------------------------------|-------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| White smoke coming from appliance. | Grease residue from previous use; Fatty food cooking. | Clean the basket and crisper tray thoroughly after each use. For fatty foods, add a small amount of water to the bottom of the outer pan to prevent smoke. |
| Food is not crispy.                | Too much moisture; Not enough oil (if desired).       | Pat food dry before air frying. For extra crispiness, lightly spray or brush food with oil. Utilize the Hi-Fry function.                                   |

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Detailed technical specifications for your Chefman Compact 5.7L Hi-Fry Air Fryer.



Image: A diagram illustrating the physical dimensions of the Chefman Air Fryer, including height, width, and depth.

- **Model Name:** Chefman TurboFry Touch Easy-View
- **Model Number:** RJ38-6TW-BLK-DS-EU
- **UPC:** 810087849870
- **Capacity:** 5.7 Liters
- **Color:** Black
- **Material:** Plastic
- **Dimensions (D x W x H):** 28 cm x 39 cm x 28 cm (approximately 27.99 cm x 38.99 cm x 27.99 cm)
- **Weight:** 3.93 Kilograms
- **Power Output:** 1700 Watts
- **Voltage:** 220 Volt
- **Control Method:** Touch
- **Minimum Temperature Setting:** 100°C
- **Maximum Temperature Setting:** 235°C
- **Air Frying Technology:** Hi-Fry Technology
- **Special Features:** Automatic Shut-off, Easy-View Window
- **Non-stick Coating:** Yes
- **Dishwasher Safe Parts:** Yes (Basket and Crisper Tray)
- **Smart Home Compatibility:** Not compatible
- **Recommended Uses:** Baking, Frying, Roasting, Reheating

## WARRANTY INFORMATION

---

Chefman products are backed by a limited warranty. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Chefman website. Keep your proof of purchase for warranty claims.

## CUSTOMER SUPPORT

---

For any questions, assistance, or to register your product, please visit the Chefman website or contact their customer service department. Contact details can typically be found on the product packaging or the official Chefman support page.