

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Yoobure](#) /

> [Yoobure C03-TABCL5-A01 Narrow Dresser with LED and Charging Station User Manual](#)

Yoobure C03-TABCL5-A01

Yoobure C03-TABCL5-A01 Narrow Dresser with LED and Charging Station User Manual

Model: C03-TABCL5-A01

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Yoobure C03-TABCL5-A01 Narrow Dresser. Please read this manual thoroughly before assembly and use to ensure proper function and safety. Keep this manual for future reference.





Image: The Yoobure C03-TABCL5-A01 Narrow Dresser, featuring its slim design, LED lighting, and integrated charging station.

SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- **Read all instructions:** Ensure you understand all assembly steps and safety warnings before proceeding.
- **Adult assembly required:** This product should be assembled by adults.
- **Keep children away:** During assembly, keep small children and pets away from the work area. Small parts can be a choking hazard.
- **Use on a level surface:** Assemble the dresser on a clean, flat, and stable surface to prevent scratching or damage.
- **Do not overtighten screws:** Overtightening can damage threads or crack components.
- **Anti-tip device:** Always install the included anti-tip device to secure the dresser to a wall. This prevents accidental tipping and potential injury.

- **Weight capacity:** Do not exceed the maximum weight capacity for the top surface (100 lbs) or individual drawers.
- **Electrical safety:** Ensure the charging station is connected to a properly grounded outlet. Do not overload the outlets. Keep liquids away from electrical components.



Image: Diagram illustrating the proper installation of the anti-tip kit to secure the dresser to a wall, preventing accidental tipping.

PACKAGE CONTENTS

Before beginning assembly, please verify that all components listed below are present and undamaged. If any parts are missing or damaged, contact customer support immediately.



Image: An illustration showing all individual parts and hardware included in the package, typically labeled for easy identification.

Components List:

- Top Panel (1)
- Bottom Panel (1)
- Side Frames (2)
- Back Panel (1)
- Fabric Drawers (4)
- Drawer Knobs (4)
- Charging Station Unit (1)
- LED Light Strip (1)
- Adjustable Feet (4)
- Anti-Tip Kit (1)
- Assembly Hardware (screws, bolts, Allen wrench, etc.)

ASSEMBLY INSTRUCTIONS

Assembly is designed to be straightforward and typically takes less than 30 minutes. All parts are labeled, and illustrated instructions are provided. A video guide may also be available via QR code on the packaging or product page.

1. **Prepare the Area:** Clear a spacious, flat, and clean area for assembly. Lay out all components and hardware, ensuring they match the package contents list.
2. **Assemble the Frame:** Attach the side frames to the bottom panel using the provided screws. Ensure all connections are secure but do not overtighten.
3. **Install the Back Panel:** Secure the back panel to the assembled frame.
4. **Attach the Top Panel:** Place the top panel onto the frame and secure it with screws.
5. **Install Adjustable Feet:** Screw the adjustable feet into the bottom of the dresser frame. Adjust them to ensure the dresser is level and stable on your floor.
6. **Integrate Charging Station:** Carefully place the charging station unit into its designated slot on the top panel. Ensure it is flush and secure.
7. **Install LED Light Strip:** Adhere the LED light strip to the underside of the top shelf or within the open compartment as indicated in the detailed instructions. Connect it to the charging station unit.
8. **Assemble Drawers:** Unfold the fabric drawers and insert the bottom support panels. Attach the drawer knobs to the front of each drawer.
9. **Insert Drawers:** Slide the assembled fabric drawers into their respective slots in the dresser frame.
10. **Install Anti-Tip Kit:** Following the instructions provided with the anti-tip kit, secure the dresser to a wall. This is a critical safety step.



Image: A visual guide demonstrating key assembly steps for the dresser frame and component integration.



Image: Close-up of the adjustable feet, which can be rotated to level the dresser on uneven surfaces and protect floors from scratches.

OPERATING INSTRUCTIONS

LED Lighting System

The integrated LED lighting system offers extensive customization for ambiance. It can be controlled via a remote control or a dedicated smartphone application.

- **Power On/Off:** Use the designated button on the remote or app to turn the LED lights on or off.
- **Color Selection:** Choose from over 60,000 colors using the color wheel in the app or preset color buttons on the remote.
- **Lighting Modes:** Select from 29 different lighting modes, including static colors, dynamic effects, music synchronization, and timing functions.
- **Brightness Adjustment:** Adjust the brightness level to your preference using the remote or app controls.
- **Music Mode:** Activate music mode for the lights to react to sound.
- **Timing Mode:** Set a timer for the lights to automatically turn off.



Image: The LED lighting system showing the remote control and a smartphone app interface for color and mode selection.

Charging Station

The dresser includes a convenient charging station with multiple ports to power your electronic devices.

- **AC Outlets:** Two 120V/12A AC outlets are provided for standard electrical devices.
- **USB Ports:** Two 5V/2A USB ports are available for charging smartphones, tablets, and other USB-powered devices.
- **Power Cord:** The charging station is equipped with a 6.5-foot power cord. Plug this cord into a wall outlet to activate the charging features and LED lights.
- **Usage:** Simply plug your devices into the appropriate outlets or ports. Ensure devices are compatible with the provided voltage and current.



Image: Close-up view of the integrated charging station, highlighting the two AC outlets and two USB ports, with devices connected for charging.

STORAGE FEATURES

The Yoobure C03-TABCL5-A01 dresser is designed with practical storage solutions for various items.

- **Four Fabric Drawers:** The dresser features four deep fabric drawers, suitable for organizing clothes, socks, accessories, or other personal items.
- **Open Shelf:** An open shelf is located above the drawers, providing space for books, decorative items, or frequently accessed electronics.
- **Top Surface:** The top surface can hold items such as a lamp, alarm clock, or charging devices.



Everything at Hand

4 deep drawers storage your items

Image: The dresser with its fabric drawers pulled out, demonstrating its capacity to store various items like clothing, accessories, and toys.

MAINTENANCE

Proper care and maintenance will extend the life of your dresser.

- **Cleaning:** Wipe the wood finish and metal frame with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners. For fabric drawers, spot clean with a mild detergent and allow to air dry.
- **Dusting:** Regularly dust all surfaces to prevent buildup.
- **Drawer Care:** Ensure drawers are not overloaded to maintain their shape and functionality.
- **Electrical Components:** Keep the charging station and LED lights dry. Disconnect from power before cleaning.
- **Check Connections:** Periodically check all screws and bolts to ensure they remain tight. Retighten if necessary.

TROUBLESHOOTING

If you encounter any issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Dresser is wobbly/unstable	Uneven floor; loose screws; adjustable feet not properly set.	Adjust the feet until stable. Tighten all assembly screws. Ensure the anti-tip kit is installed.
LED lights not working	Power cord not plugged in; loose connection to charging station; remote battery dead; app not connected.	Ensure power cord is securely plugged into a working outlet. Check LED strip connection. Replace remote battery. Re-pair app if necessary.
Charging station not providing power	Power cord not plugged in; device not compatible; charging station unit not fully seated.	Verify power cord connection. Ensure device is compatible and cable is functional. Check if the charging station unit is properly installed.
Drawers do not slide smoothly	Drawer overloaded; fabric creased; obstruction.	Reduce drawer contents. Reshape fabric drawer. Check for any obstructions in the drawer slot.

SPECIFICATIONS

Brand	Yoobure
Model Number	C03-TABCL5-A01
Product Dimensions (L x W x H)	19.7" x 9.8" x 34.4" (50cm x 25cm x 87.4cm)
Item Weight	14.15 pounds (6.42 kg)
Material	Engineered Wood, Steel Frame, Fabric Drawers
Color	Black
Drawers	4 Fabric Drawers
Charging Station	2 AC Outlets (120V/12A), 2 USB Ports (5V/2A)
LED Lighting	RGB, 60,000+ Colors, 29 Modes (App/Remote Control)
Assembly Required	Yes

Product Dimension



Image: A diagram illustrating the precise dimensions of the Yoobure Narrow Dresser and its individual drawers.

WARRANTY AND SUPPORT

Your Yoobure C03-TABCL5-A01 Narrow Dresser is covered by a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and material flaws under normal use.

For any questions, concerns, or warranty claims, please contact Yoobure customer support. Our support team is available to assist you within 12 hours.

Contact Information: Refer to your purchase documentation or the official Yoobure website for the most current customer support contact details.