

## ASETRERT HX6930

# ASETRERT HX6930 Electric Toothbrush Host User Manual

For Models: HX6910, HX6920, HX6930, HX6970



## 1. INTRODUCTION

---

This manual provides instructions for the proper use and maintenance of your ASETRERT HX6930 Electric Toothbrush Host. This host is designed as a replacement handle compatible with various Philips Sonicare models, including HX6910, HX6920, HX6930, and HX6970. It features a durable construction and multiple cleaning modes to support your oral hygiene routine.

## 2. SAFETY INFORMATION

---

### Important Safety Instructions:

- This product may contain small parts. Keep out of reach of children.
- Do not use this product for any purpose other than oral hygiene.
- Consult a dentist or physician if you experience excessive bleeding from the gums or if bleeding continues after 1 week of use.
- Do not immerse the main unit in water for extended periods.
- Ensure the product is fully dry before charging.

## 3. PACKAGE CONTENTS

---

Your package should contain the following item:

- 1 x ASETRERT HX6930 Electric Toothbrush Host (main machine, including circuit board and battery)

## 4. SETUP

---

1. **Charge the Device:** Before first use, fully charge the toothbrush host. Place the host on a compatible Philips Sonicare charger (charger not included). The battery indicator will show charging status.
2. **Attach a Brush Head:** Align your compatible Philips Sonicare brush head with the metal shaft on the top of the host. Push the brush head down firmly until it clicks into place.





Figure 1: Side view of the ASETRERT HX6930 Electric Toothbrush Host. This image displays the full length of the toothbrush handle, highlighting its ergonomic design and the control panel on the front.

## 5. OPERATING INSTRUCTIONS

---

The HX6930 host features five distinct cleaning modes and a built-in timing function to optimize your brushing experience.





Figure 2: Close-up view of the control panel on the HX6930 host. The image clearly shows the power button and the indicators for the five cleaning modes: Clean, Sensitive, Massage, Go Care, and Max Care.

## 5.1. Cleaning Modes

Press the power button to cycle through the available modes. The illuminated indicator will show the currently selected mode.

- **Clean Standard Mode:** Provides a full oral cleaning experience. (Duration: 2 minutes)
- **Sensitive Mode:** Offers gentle cleaning for sensitive gums and teeth. (Duration: 2 minutes)
- **Massage Mode:** Gently stimulates the gums. (Duration: 2 minutes)
- **Go Care Quick Cleaning Mode:** Designed for a quick cleaning session. (Duration: 1 minute)
- **Max Care Gum Care Model:** Provides comprehensive oral cleaning, with gentle focus on problem areas and the gum line. (Duration: Varies based on user interaction, typically longer than standard modes)

## 5.2. Timing Function

The toothbrush host includes a built-in timing function to assist with recommended brushing times:

- **QuadPacer:** The device will provide a brief vibration reminder every 30 seconds, signaling you to move to a different quadrant of your mouth.
- **Smartimer:** The toothbrush will automatically shut down when the recommended brushing time (2 minutes for

most modes, 1 minute for Go Care) is reached.

## 6. MAINTENANCE

---

Proper maintenance ensures the longevity and hygiene of your toothbrush host.

1. **After Each Use:** Rinse the brush head thoroughly under running water. Wipe the toothbrush handle with a damp cloth to remove any toothpaste residue.
2. **Regular Cleaning:** Periodically remove the brush head and clean the metal shaft and the inside of the brush head thoroughly. Ensure no debris accumulates.
3. **Storage:** Store the toothbrush host in a dry place.



Figure 3: Top-down view of the HX6930 Electric Toothbrush Host. This image focuses on the metal shaft where the brush head attaches, illustrating the connection point for compatible brush heads.

## 7. TROUBLESHOOTING

---

If you encounter issues with your toothbrush host, consider the following:

- **Device Not Turning On:** Ensure the device is fully charged. Place it on a compatible charger for several

hours.

- **Weak Vibrations:** This may indicate a low battery. Recharge the device.
- **Unusual Noise:** Ensure the brush head is securely attached. If the noise persists, contact customer support.
- **Water Damage:** If water enters the device, immediately turn it off and allow it to dry completely. Do not attempt to use it if you suspect significant water damage.

## 8. SPECIFICATIONS

---

Feature	Detail
Host Model	HX6930
Compatible Models	Philips Sonicare HX6910, HX6920, HX6930, HX6970
Material	Thicker and harder material (Durable)
Cleaning Modes	Clean, Sensitive, Massage, Go Care, Max Care
Timing Function	30-second interval reminder, 2-minute auto shut-off
Power Source	Battery Powered
Item Weight	1.76 ounces
Package Dimensions	1.18 x 0.79 x 0.39 inches
Manufacturer	ASETRERT

## 9. WARRANTY AND SUPPORT

---

Specific warranty information for this ASETRERT product is not provided in this manual. For warranty details, technical support, or customer service inquiries, please refer to the product packaging or contact the manufacturer directly through their official channels.

