

[Manuals.plus](#) /

› [BRIO](#) /

› BRIO World 36019 Pull Back Train Instruction Manual

BRIO 36019

BRIO World 36019 Pull Back Train Instruction Manual

PRODUCT OVERVIEW

Welcome to the world of BRIO! This manual provides essential information for the BRIO World 36019 Pull Back Train. This durable, battery-free toy train is designed for children aged 3 years and up, offering engaging play through its simple pull-back mechanism and classic magnetic couplings.



The BRIO World 36019 Pull Back Train, a blue toy train, resting on wooden tracks with a blurred city skyline in the background, showcasing its design.

SAFETY GUIDELINES

Please read and follow these safety guidelines to ensure a safe play experience:

- **Age Recommendation:** This toy is suitable for children aged 3 years and older.
- **Supervision:** Adult supervision is recommended during play.
- **Choking Hazard:** Contains small parts. Not suitable for children under 3 years due to potential choking hazards.
- **Intended Use:** Use this product only as intended for play. Do not modify the toy.
- **Cleaning:** Refer to the 'Care and Maintenance' section for cleaning instructions.

WHAT'S INCLUDED

The BRIO World 36019 Pull Back Train package contains:

- 1x Pull Back Train

1
PIECE



A single unit of the BRIO World 36019 Pull Back Train, showing its complete form and design.

GETTING STARTED

The BRIO World 36019 Pull Back Train requires no assembly or batteries. Simply remove the train from its packaging, and it is ready for play.

OPERATING THE PULL BACK TRAIN


The Pull Back Train operates on a simple mechanical principle, requiring no batteries. Follow these steps to enjoy dynamic play:

1. **Pull Back:** Place the train on a flat surface or BRIO wooden tracks. Gently pull the train backward. You will feel a slight resistance as the internal mechanism winds up.



Step 1: An illustration showing a child pulling the blue BRIO train backward on a track, indicating the 'Pull Back' action.

2. **Release:** Once pulled back, release the train. It will automatically propel forward, moving along the tracks or surface.

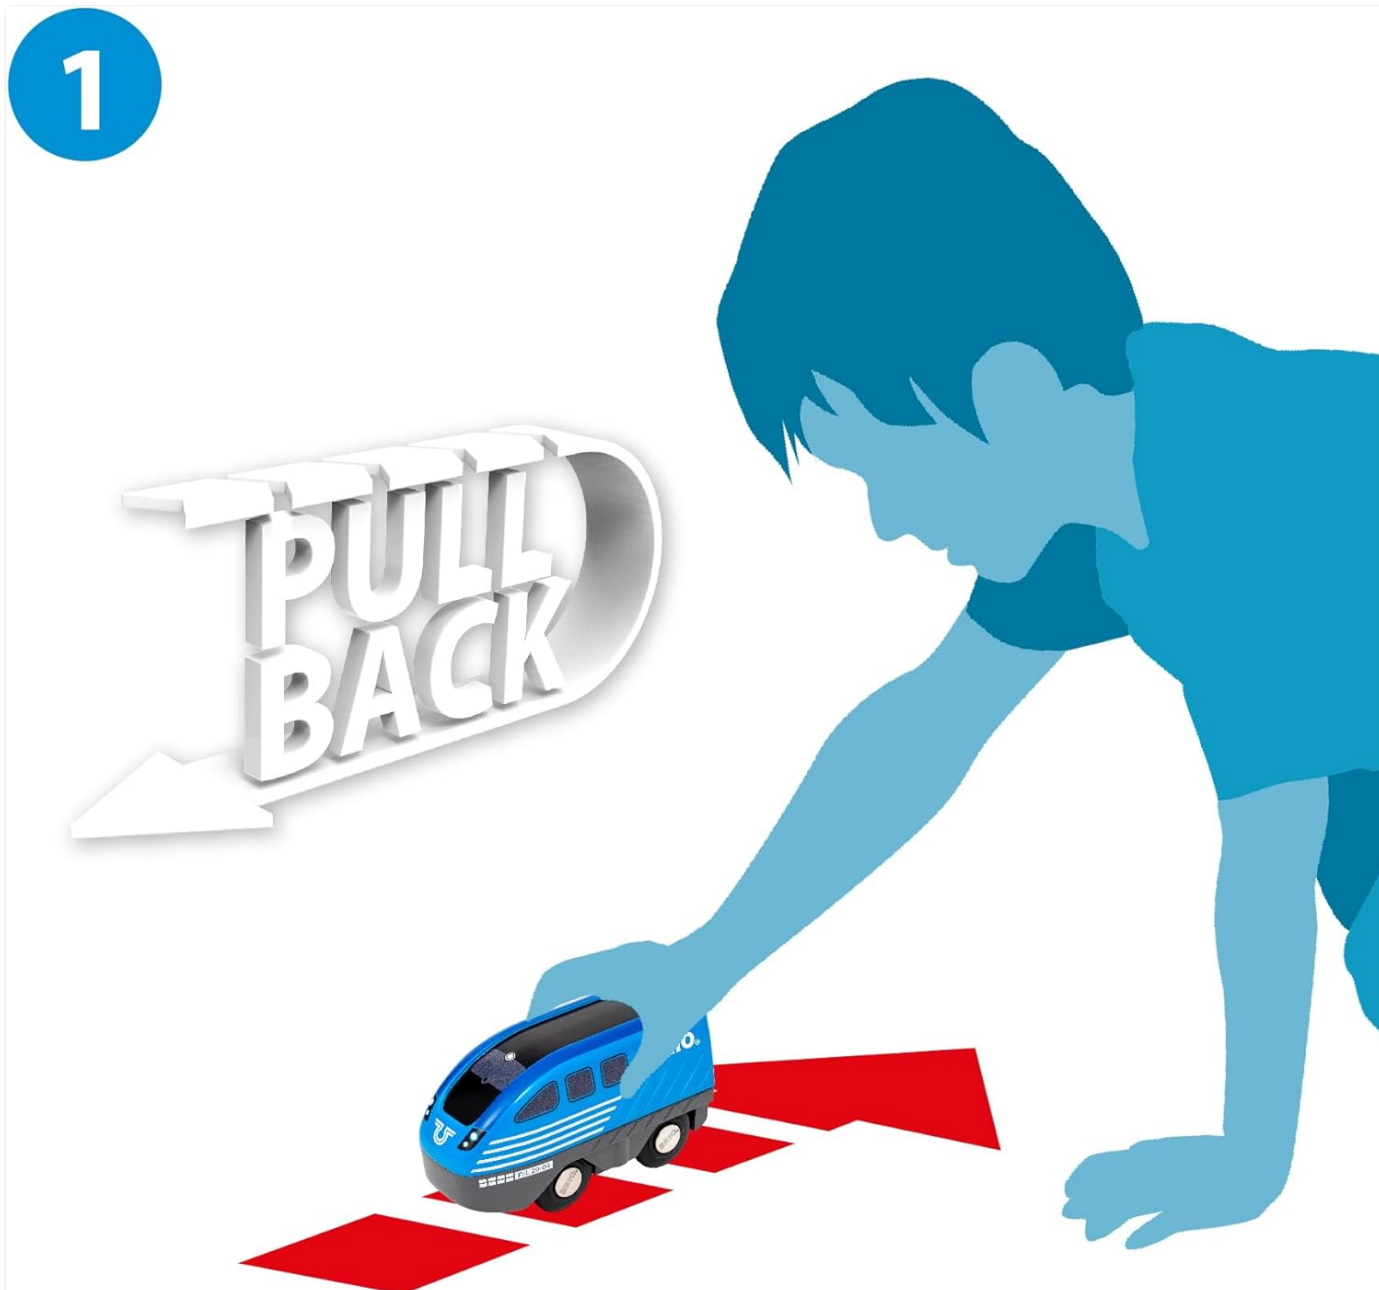

Step 2: An illustration showing a child releasing the blue BRIO train after pulling it back, allowing it to move forward.

- Magnetic Coupling:** The train features classic BRIO magnetic couplings at both ends, allowing it to connect easily with other BRIO World vehicles and wagons. Simply bring the magnetic ends close together for connection.

2



A close-up view of the BRIO Pull Back Train's magnetic coupling, highlighting its ability to connect with other BRIO World vehicles.

CARE AND MAINTENANCE

To ensure the longevity and cleanliness of your BRIO World 36019 Pull Back Train:

- **Cleaning:** Wipe the train with a damp cloth to remove dust and dirt. Do not immerse in water.
- **Storage:** Store the train in a dry place, away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically check for any signs of wear or damage. Discontinue use if the toy is broken.

TROUBLESHOOTING

The BRIO World 36019 Pull Back Train is a simple mechanical toy. If you encounter any issues:

- **Train does not move:** Ensure the train is pulled back sufficiently before releasing. Check that the wheels are free from obstructions.
- **Magnetic coupling issues:** Ensure the magnetic ends are clean and free from debris.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand Name	BRIO
Model Name	Pull Back Train
Model Number	63601900
Age Range Description	3+ Years
Power Source	Manual (Pull Back)
Batteries Required	No
Assembly Required	No
Material Type	Plastic
Item Weight	88 Grams
Item Dimensions	1.97 x 4.02 x 1.5 inches

SUPPORT AND WARRANTY

For further information, support, or details regarding warranty, please visit the official BRIO website or contact their customer service. You can find more information and product details at <https://l.ead.me/bcbaLJ>.

BRIO stands by the quality of its products. Please retain your proof of purchase for any warranty claims.

