



[Manuals.plus](#) /

› [ZUWSUJS](#) /

› ZUWSUJS Professional Cordless Hair Clippers and Trimmers Set User Manual

ZUWSUJS ZU-ZMLFQ-LTT-GOLD

ZUWSUJS Professional Cordless Hair Clippers and Trimmers Set User Manual

Brand: ZUWSUJS | Model: ZU-ZMLFQ-LTT-GOLD

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your ZUWSUJS Professional Cordless Hair Clippers and Trimmers Set. Please read all instructions carefully before first use and retain this manual for future reference.

SAFETY INFORMATION

Important Safety Instructions:

- Always unplug or turn off the device before cleaning.
- Do not use the device while charging.
- Keep the device away from water.
- Keep the device out of reach of children.
- Always use the device with caution, especially around the face and eyes.

PACKAGE CONTENTS

Your ZUWSUJS Professional Cordless Hair Clippers and Trimmers Set includes the following items:

- 1x Hair Clipper
- 1x Hair Trimmer
- 8x Premium Guide Combs for Clipper (various lengths)
- 6x Trimmer Guards for Trimmer (various lengths)
- 2x Charging Cables (one for each device)
- 1x Cleaning Brush

- 1x Lubricating Oil
- 1x Hair Comb
- 1x Storage Bag
- 1x Hair Cutting Cape



Image: All components included in the ZUWSUJS Professional Hair Clippers and Trimmers Set.

SETUP

1. Initial Charging

Before first use, fully charge both the hair clipper and the hair trimmer. The hair clipper has an 1800mAh battery and the trimmer has a 1200mAh battery. A full charge for both devices takes approximately 3 hours.

- Connect the appropriate charging cable to each device and a compatible USB power adapter (not included).
- The LCD display will indicate the charging status and battery percentage.

- Once fully charged, disconnect the devices from the power source.

Enough Power for a Whole Family Cut in One Charge



Full charged continuously work for 3 hours

Image: The LED display on the clipper and trimmer shows battery percentage and other status indicators.

2. Attaching Guide Combs

Select the desired guide comb for your preferred cutting length. The set includes 8 premium guide combs for the clipper (1.5mm to 19mm) and 6 trimmer guards for the trimmer.

- Ensure the clipper/trimmer is turned off.
- Align the guide comb with the blade and push it firmly until it clicks into place.
- To remove, gently pull the comb away from the blade.

Comes with Various Limit Combs

Meet the needs of various lengths


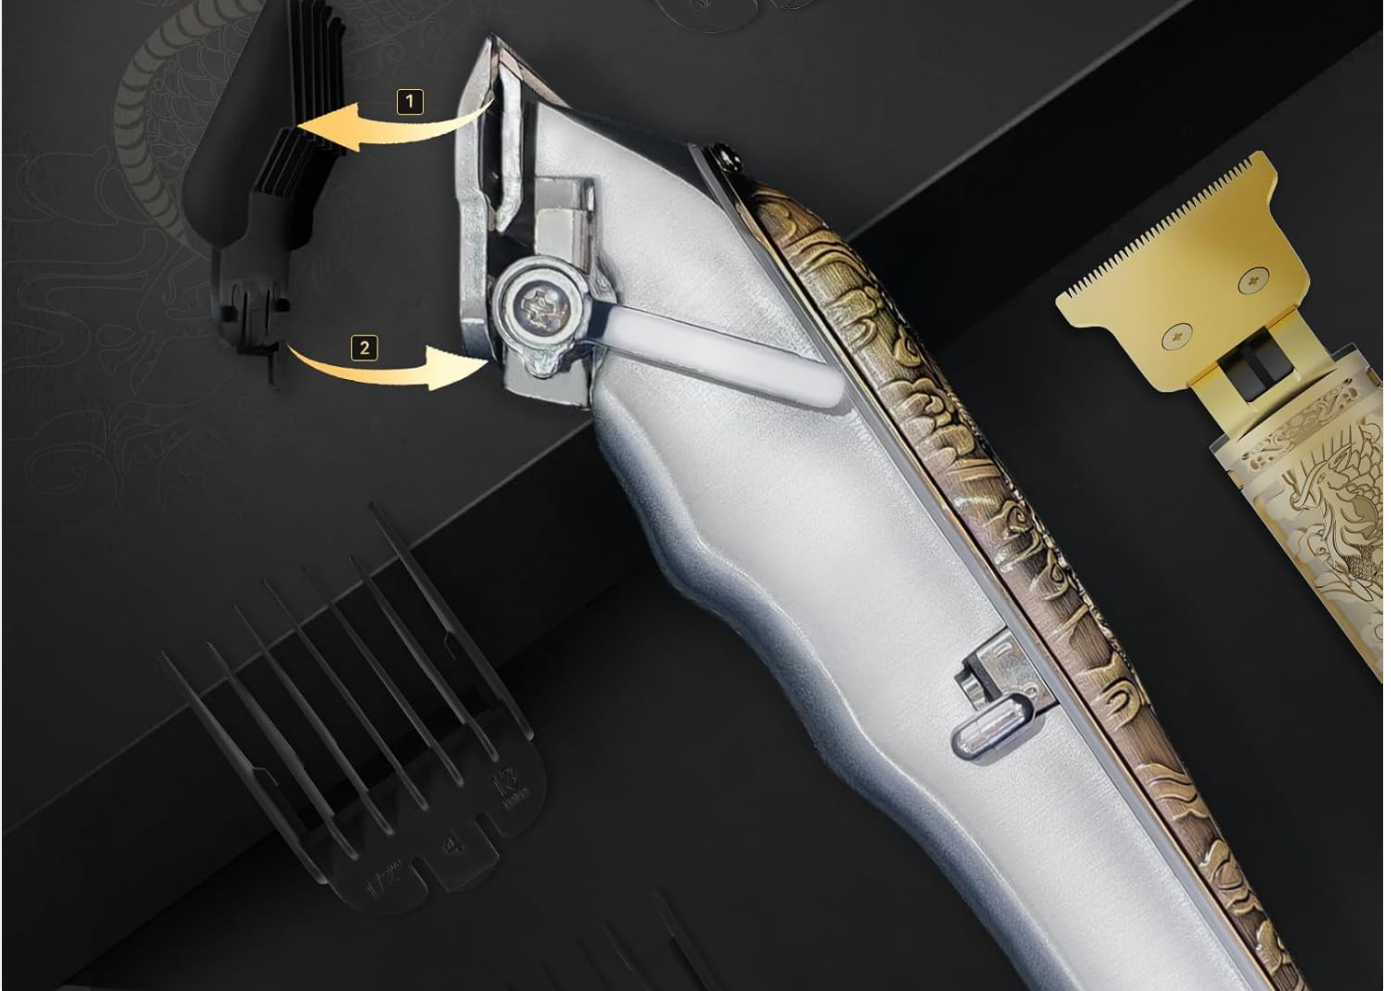


Image: Illustration of attaching a guide comb to the clipper.

Note: If a limit comb appears bent due to transportation, gently push it in the opposite direction to reset it. The combs are made of tough, flexible material.

Resetting the Limit Comb

Due to uncontrollable transportation conditions, the limit comb you received may have some deviation problems.

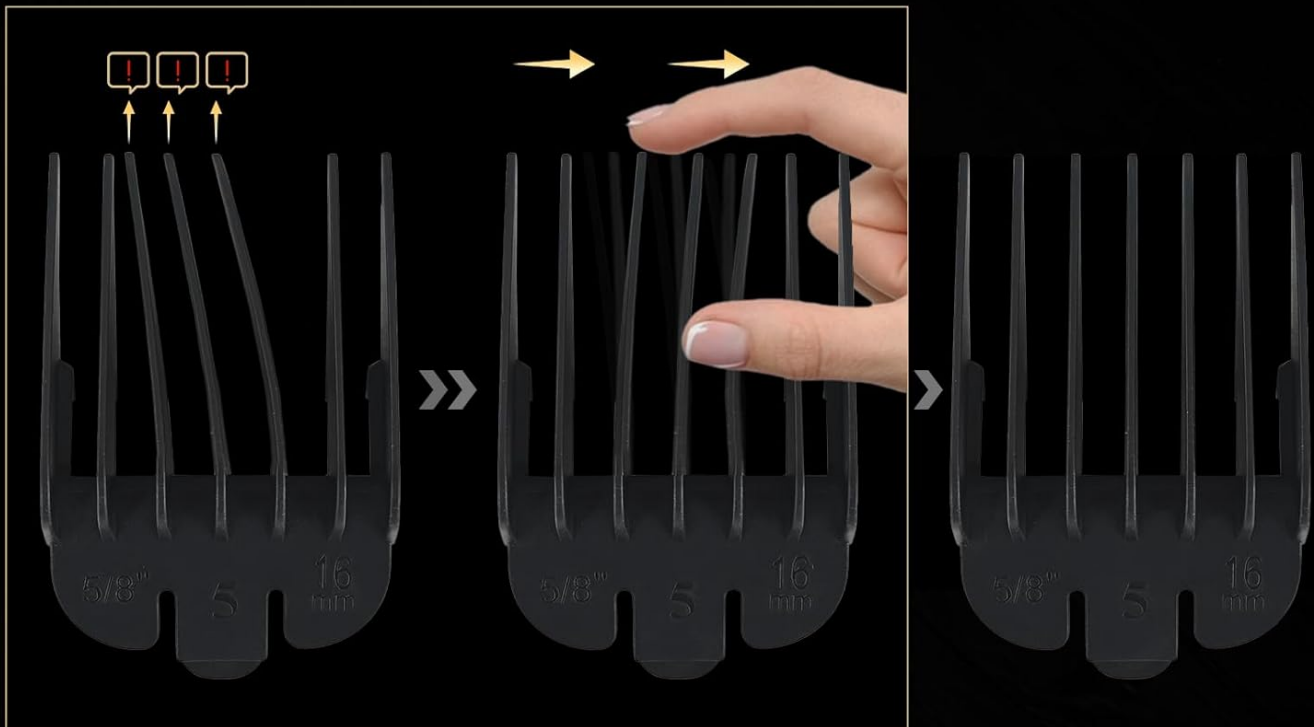

If the above problem occurs, please push it in the opposite direction to reset it. Don't worry, our limit comb is made of rubber with a certain toughness and can withstand a certain amount of force.

Image: Visual guide for resetting a bent guide comb.

OPERATING INSTRUCTIONS

1. Powering On/Off

Press the power button located on the device to turn it on or off. The LCD display will illuminate upon activation.

2. Using the Hair Clipper

The hair clipper is designed for general hair cutting. Attach the desired guide comb for the length you wish to achieve. The clipper features a powerful motor (up to 7000 RPM) and high-strength stainless steel blades for efficient cutting.

- Ensure the hair is clean and dry for best results.
- Start with a longer comb length if you are unsure, and gradually reduce it.
- Move the clipper against the direction of hair growth, using smooth, even strokes.
- The adjustable lever on the side of the clipper allows for fine-tuning of cutting length without changing the comb.



Image: Hair clipper in use for a haircut.

3. Using the Hair Trimmer

The hair trimmer is ideal for detailed work, outlining, and achieving precise lines. It also features an LCD display and multiple speed settings.

- Use the trimmer without a guard for closest cuts and sharp lines.
- Attach a trimmer guard for shorter stubble or beard trimming.
- Press the power button repeatedly to cycle through different speed settings for varied cutting needs.
- The R-shape blade design ensures comfortable contact with the skin, minimizing irritation.

Controlling Hair Length is Easy!!



14 different length limit combs for you to replace

A	1	B	2	
1.5mm / 0.585inch	3mm / 1.17inch	4.5mm / 1.755inch	6mm / 2.34inch	Length
3	4	5	6	
10mm / 3.9inch	13mm / 5.07inch	16mm / 6.24inch	19mm / 7.41inch	Length



Image: Hair trimmer in use for precise detailing.

4. LCD Display Information

Both devices feature an LCD display that provides important operational information:

- **Battery Level:** Shows the current battery percentage, ensuring you know when to recharge.
- **Oil Shortage Alert:** A yellow warning light will appear when the device requires lubrication, prompting you to oil the blades.
- **RPM (Clipper only):** Displays the motor's revolutions per minute.
- **Available Time (Trimmer only):** Shows the estimated remaining usage time.

Enough Power for a Whole Family Cut in One Charge



Image: Detailed view of the LCD display on both devices.

MAINTENANCE

1. Cleaning the Blades

Regular cleaning ensures optimal performance and extends the lifespan of your devices.

- Turn off and unplug the device before cleaning.
- Use the provided cleaning brush to remove any loose hair from the blades.
- For thorough cleaning, the trimmer blade can be carefully detached and reattached (refer to the "How to change blade" video for guidance).

Your browser does not support the video tag.

Video: Demonstrates how to change and clean the trimmer blade for maintenance.

2. Oiling the Blades

Apply a small amount of the provided lubricating oil to the blades after every few uses or when the oil shortage alert appears on the LCD display.

- Apply 1-2 drops of oil to the moving parts of the blades.
- Turn on the device for a few seconds to distribute the oil evenly.
- Wipe off any excess oil with a soft cloth.

3. Storage

Store the devices in a cool, dry place. Use the provided storage bag to protect them from dust and damage.

- To extend battery life, charge the devices at least every 6 months.
- If not used for a long period, ensure the battery level is at least 30% before storing.

TROUBLESHOOTING

If you encounter any issues with your ZUWSUJS Professional Hair Clippers and Trimmers Set, please refer to the following common solutions:

- **Device not turning on:** Ensure the device is fully charged. Check the charging cable and adapter for damage.
- **Poor cutting performance:** Clean the blades thoroughly and apply lubricating oil. Ensure the correct guide comb is securely attached. The blades may need to be realigned or replaced if heavily worn.
- **Excessive noise or vibration:** Clean and oil the blades. If the issue persists, contact customer support.
- **Battery not holding charge:** Ensure the device is charged regularly (at least every 6 months). Avoid completely draining the battery frequently.

For further assistance, please contact ZUWSUJS customer support.

SPECIFICATIONS

Feature	Detail
Brand	ZUWSUJS
Model Name	ZU-ZMLFQ-LTT-GOLD
Product Dimensions	5.31 x 3.37 x 9.23 inches
Item Weight	1.96 Pounds
Charging Time	3 Hours
Battery Description	Rechargeable (Clipper: 1800mAh, Trimmer: 1200mAh)
Included Components	Hair clipper, Hair trimmer, 8 premium guards for clipper, 6 trimmer guards for trimmer, Cleaning brush, Lubricating oil, Hair comb, Storage bag, Hair cutting cape

WARRANTY AND SUPPORT

For any questions, concerns, or warranty claims regarding your ZUWSUJS Professional Hair Clippers and Trimmers Set,

please contact the seller or manufacturer directly through your purchase platform. Please retain your proof of purchase for warranty validation.

© 2025 ZUWSUJS. All rights reserved.