

## ZAQE D53

# ZAQE M505 MP3 Player Case User Manual

Model: D53

## 1. INTRODUCTION

---

Thank you for choosing the ZAQE M505 MP3 Player Case. This protective case is specifically designed for the ZAQE 4-inch Full Screen Touch M505 Music Player, providing a secure and organized solution for your device and its essential accessories. This manual will guide you through the proper use and care of your new case.

### Product Features:

- **Protective Design:** Safeguards your ZAQE M505 MP3 player from scratches, dust, and minor impacts.
- **Accessory Storage:** Dedicated compartments for earbuds, USB cable, and memory cards.
- **Compact and Portable:** Easy to carry, making it ideal for travel and daily use.
- **Durable Construction:** Made from high-quality materials for long-lasting protection.



Figure 1: ZAQE M505 MP3 Player Case (Closed)

## 2. SETUP AND DEVICE PLACEMENT

Follow these steps to properly place your ZAQE M505 MP3 player and its accessories into the case.

1. **Open the Case:** Unzip the case completely to reveal the interior compartments.
2. **Insert MP3 Player:** Gently place your ZAQE M505 MP3 player into the main mesh pocket on one side of the case. Ensure it fits snugly without excessive force.
3. **Organize Accessories:**
  - Place earbuds into the smaller mesh pocket or secure them with the elastic strap (if present).
  - Coil your USB charging cable neatly and place it in another designated accessory slot or mesh pocket.
  - Store any memory cards in the small elastic loops or pockets designed for them.
4. **Close the Case:** Carefully zip the case closed, ensuring no cables or accessories are caught in the zipper.

# Dimensions



Figure 2: ZAQE M505 MP3 Player Case (Open) showing interior organization

## 3. OPERATING THE CASE

The ZAQE M505 MP3 Player Case is designed for simple and convenient use.

- **Carrying:** Use the integrated wrist strap or simply carry the compact case in your hand, bag, or backpack.
- **Accessing Device:** To use your MP3 player, simply unzip the case. The player can remain in its mesh pocket while in use, or be removed for full access.
- **Accessing Accessories:** Open the case to retrieve earbuds, cables, or memory cards from their respective compartments.

## 4. MAINTENANCE AND CARE

Proper care will extend the life and appearance of your ZAQE M505 MP3 Player Case.

- **Cleaning:** Wipe the exterior with a soft, damp cloth. For stubborn stains, use a mild soap solution and then wipe clean with a damp cloth. Allow to air dry completely.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, solvents, or strong detergents, as these can damage the material.
- **Storage:** When not in use, store the case in a cool, dry place away from direct sunlight and extreme

temperatures.

- **Prevent Overfilling:** Avoid overfilling the case, as this can strain the zippers and material, potentially causing damage.

## 5. TROUBLESHOOTING

If you encounter any issues with your ZAQE M505 MP3 Player Case, refer to the following common solutions.

Problem	Possible Cause	Solution
Case does not close smoothly.	Overfilled or items obstructing the zipper.	Remove some items or rearrange them to ensure nothing is blocking the zipper path.
Device or accessories do not fit.	Incorrect device model or oversized accessories.	Ensure your device is the ZAQE 4-inch Full Screen Touch M505 MP3 Player. Verify accessory dimensions against case compartments.
Zipper is stuck.	Fabric caught in the zipper or zipper teeth misaligned.	Gently pull the fabric away from the zipper. If teeth are misaligned, try to gently realign them. Do not force the zipper.

## 6. SPECIFICATIONS

Key specifications for the ZAQE M505 MP3 Player Case (Model D53).

- **Model Name:** D53 (Case)
- **Compatibility:** ZAQE 4-inch Full Screen Touch M505 Music Player
- **Approximate External Dimensions:** 5.5 x 3.5 x 1 inches (14 x 9 x 2.5 cm)
- **Item Weight:** 1.44 ounces
- **Material:** Durable composite material
- **Color:** 4.0"-CASE (as per product variant)



Figure 3: Case Dimensions (External and Internal)

## 7. WARRANTY AND RETURNS

This product is subject to the standard return policy of the retailer from which it was purchased. For specific details regarding returns or exchanges, please refer to the retailer's policy.

- **Return Policy Duration:** Typically 30 days from the date of purchase for refund/replacement, as per Amazon's standard policy.
- **Condition:** Product must be returned in its original condition.

## 8. CUSTOMER SUPPORT

---

If you have any questions, concerns, or require assistance with your ZAQE M505 MP3 Player Case, please contact customer support through your Amazon account.

### Contacting Seller Support:

1. Log into your Amazon Account.
2. Go to the product listing on Amazon.com and click the seller name (SZZTDSHUMA).
3. Click "Ask a Question" or "Contact the Seller" (depending on your location).
4. Follow the instructions to submit your query.



Figure 4: Guide to contacting customer support