

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ROBUD](#) /

› [ROBUD WG403 Mud Kitchen for Kids Outdoor with Wheels Instruction Manual](#)

## ROBUD WG403

# ROBUD WG403 Mud Kitchen for Kids Outdoor with Wheels Instruction Manual

Model: WG403

## 1. INTRODUCTION

---

This instruction manual provides essential information for the safe assembly, operation, and maintenance of your ROBUD WG403 Mud Kitchen for Kids Outdoor with Wheels. Please read this manual thoroughly before assembly and use to ensure proper function and safety. Retain this manual for future reference.



Image 1.1: Fully assembled ROBUD WG403 Mud Kitchen.

## 2. SAFETY INFORMATION

**WARNING:** Adult assembly required. Keep small parts away from children before and during assembly. This product is intended for children aged 36 months to 10 years. Adult supervision is recommended during play.

- Ensure all screws and fasteners are securely tightened before use. Regularly check for loose parts.
- Do not allow children to climb on the mud kitchen.
- Place the mud kitchen on a flat, stable surface to prevent tipping.
- This product is designed for outdoor use. Protect wooden components from prolonged exposure to extreme weather conditions to prevent damage.

- Small accessories may pose a choking hazard for very young children.

### **3. PACKAGE CONTENTS**

---

Before assembly, verify that all components listed below are present. If any parts are missing or damaged, contact customer support.

- Wooden frame components
- 2 Wheels
- 1 Removable Sink
- 1 Faucet
- 2 Pots
- 3 Cooking Utensils
- 2 Storage Boxes
- 2 Planters
- 1 Watering Can
- 1 Dish Rack
- Assembly hardware (screws, bolts, etc.)

### **4. SETUP AND ASSEMBLY**

---

Assembly of the ROBUD WG403 Mud Kitchen requires adult supervision and tools (not included). Detailed step-by-step instructions and diagrams are provided in the separate assembly guide included with your product. Follow these instructions carefully.

1. Unpack all components and lay them out on a clean, flat surface.
2. Identify all wooden pieces and hardware according to the assembly guide.
3. Assemble the main frame structure, ensuring all connections are secure.
4. Attach the wheels and handlebar for mobility.
5. Install the sink, faucet, and other accessories as directed.
6. Perform a final check to ensure all parts are correctly installed and tightened.

# SOLID WOOD CONSTRUCTION

Smooth Edge



Unique Texture



Stable Legs



Image 4.1: Illustration of solid wood construction and components.

# EFFORTLESS & SMOOTH MOVEMENT



Image 4.2: The mud kitchen features an easy-to-grip handlebar and two rolling wheels for smooth movement.

## 5. OPERATING INSTRUCTIONS

The ROBUD WG403 Mud Kitchen is designed to encourage imaginative outdoor play. It features realistic elements for an engaging experience.

- **Stove Top:** Use the included pots and utensils on the simulated stove top for pretend cooking.
- **Rotatable Knobs:** The stove knobs can be turned to simulate cooking adjustments.
- **Water Box & Faucet:** Fill the water box to enable the faucet to dispense water into the removable sink, allowing for water play and cleaning of pretend dishes.
- **Oven Baking:** The oven compartment can be used for pretend baking activities.
- **Accessories:** Utilize the various accessories like pots, cooking utensils, storage boxes, planters, watering can, and dish rack to enhance play scenarios.
- **Mobility:** The integrated wheels and handlebar allow the mud kitchen to be easily moved to different outdoor locations.

# REALISTIC OUTDOOR PLAY KITCHEN SET



Image 5.1: Realistic play features including stove, knobs, sink, and oven.



 **Toy Kitchenware**



 **Potted Plants**



 **Running Water System**



 **Toy Oven**

Image 5.2: Close-up of various play elements: toy kitchenware, potted plants, running water system, and toy oven.



Image 5.3: Children engaging in imaginative play with the mud kitchen.

## 6. MAINTENANCE

---

Regular maintenance will extend the life of your ROBUD Mud Kitchen.

- **Cleaning:** Wipe down wooden surfaces with a damp cloth. The removable sink and plastic accessories can be washed with mild soap and water. Ensure all parts are dry before storage.
- **Wood Care:** The mud kitchen is crafted from natural fir wood. To prevent warping or damage, avoid prolonged exposure to direct sunlight, heavy rain, or extreme humidity. Store in a covered area or use a protective cover when not in use.
- **Hardware Check:** Periodically inspect all screws and fasteners. Tighten any loose connections to maintain structural integrity.
- **Water System:** After water play, empty the sink and water box completely to prevent stagnant water and potential mold growth.

## 7. TROUBLESHOOTING

---

If you encounter issues with your mud kitchen, refer to the following common solutions:

<b>Problem</b>	<b>Possible Cause</b>	<b>Solution</b>
Parts feel loose or unstable.	Screws or fasteners are not fully tightened.	Inspect all connections and tighten any loose screws. Avoid over-tightening to prevent stripping.
Wood appears warped or damaged.	Prolonged exposure to moisture or extreme weather.	Ensure the mud kitchen is stored in a dry, covered area when not in use. Avoid leaving it exposed to rain or intense sun for extended periods.
Faucet not dispensing water.	Water box is empty or faucet is clogged.	Ensure the water box is filled. Check the faucet for any blockages and clear if necessary.
Missing parts during assembly.	Packaging error.	Refer to the package contents list. Contact ROBUD customer support with your purchase details for assistance.

## 8. SPECIFICATIONS

---

**Model:** WG403

**Brand:** ROBUD

**Product Dimensions:** 11.5 x 31.5 x 33.5 inches (29.2 x 80 x 85 cm)

**Item Weight:** 14 pounds (6.35 kg)

**Recommended Age:** 36 months - 10 years

**Material:** Natural Fir Wood

**Safety Standards:** Meets ASTM and CPSC standards

# PRODUCT DIMENSION



Image 8.1: Product dimensions and age suitability.

## 9. WARRANTY AND SUPPORT

Warranty information for the ROBUD WG403 Mud Kitchen is typically included with the product packaging. Please refer to the documentation provided at the time of purchase for details regarding warranty coverage and terms.

For technical support, missing parts, or any other inquiries, please contact ROBUD customer service directly. Contact information can usually be found on the product packaging or the official ROBUD website.