

[Manuals.plus](#) /

› [PlusAcc](#) /

› PlusAcc Battery Base for Spot (Model E11-A) User Manual

PlusAcc E11-A

PlusAcc Battery Base for Spot (Model E11-A) User Manual

Portable 5000mAh Charger Stand with USB-C Output Port

INTRODUCTION

This manual provides instructions for the PlusAcc Battery Base, Model E11-A, designed to enhance the portability and functionality of your Spot device. This 5000mAh portable charger stand allows you to power your Spot device wirelessly and also features a USB-C output port for charging other compatible devices. Enjoy extended sound playback and the flexibility to use your Spot in various locations.

WHAT'S IN THE BOX

- PlusAcc Battery Base (Model E11-A)
- User Manual

Note: The Spot device, charging cable, and power adapter are not included.

What's in the Box

Important Notes: Speaker/charger/cable not included



Image: The retail box for the PlusAcc Battery Base, displaying the battery base and the included user manual. The Spot device, charging cable, and power adapter are explicitly noted as not included.

COMPATIBILITY

The PlusAcc Battery Base is specifically designed for the Spot device. It is also compatible with various USB-C powered devices such as smartphones, earbuds, tablets, and smartwatches, allowing for simultaneous charging.

- **Compatible with:** Spot, iPhone, Samsung, Motorola Moto, and other USB-C powered devices.
- **Not compatible with:** Pop, Dot 4th/5th generation, or other non-Spot devices.

Compatibility

Power Spot and mobile phone at the same time



Cellphones/Earphones/Spot



Pop/Dot 4th/5th

Image: A visual guide illustrating that the battery base is compatible with Spot devices, cellphones, and earphones, but not with Pop or Dot 4th/5th generation devices.

SETUP AND INSTALLATION

Follow these steps to correctly install your Spot device onto the PlusAcc Battery Base:

1. **Step 1:** Lay the bottom of your Spot device flat. Align the edge of the Spot with the inside snaps of the battery base.
2. **Step 2:** Gently press down on the back of the Spot device until you hear a "click" sound. This indicates that the device is securely attached.
3. **Step 3:** Gently shake the bracket to confirm the Spot is firmly attached to the battery base.



Correct Way to Install

- 1 Lay the device's bottom flat, Align the edge of the Spot with the inside of the snaps.



- 2 Press down on the back of the Spot until you hear a “click”



Gently shake the bracket to check the Spot is attached.

Image: Detailed steps for installing the Spot device onto the battery base, showing alignment and the final click to secure it.

Your browser does not support the video tag.

Video: A short demonstration on how to correctly install the Spot device onto the battery base and how to remove it.

OPERATING INSTRUCTIONS

Charging the Battery Base

To charge the PlusAcc Battery Base, use the original power adapter and charging cable that came with your Spot device. Connect the adapter to the battery base's input port. The LED indicators on the base will show the charging status.

Important: Always use the original adapter for your Spot speaker to charge the stand.



Image: The battery base being charged using the original Spot adapter, highlighting the importance of using the correct power source.

Powering On/Off and Battery Indicators

Press the power button on the front of the battery base to turn it on or off. The four LED lights indicate the remaining battery charge:

- One light: 0-25% charge
- Two lights: 25-50% charge
- Three lights: 50-75% charge
- Four lights: 75-100% charge

Using the USB-C Output Port

The battery base includes one USB-C output port (5V 1A) that can be used to charge other compatible devices such as smartphones, earbuds, or smartwatches. Simply connect your device to this port using a compatible USB-C cable.

Compatible with Spot & Smartphones & Intelligent Electronics

! Spot and adapter are not included



Spot



Pop



Dot Max

Image: The battery base simultaneously powering a Spot device and charging a smartphone via its USB-C output port.

Your browser does not support the video tag.

Video: A demonstration of the battery base powering a Spot device and charging a cellphone simultaneously.

FEATURES

- **Extended Battery Life:** The 5000mAh battery provides up to 8 hours of portable playback (at 50% volume) and up to 13 hours of standby time. A full charge takes approximately 3 hours.



Image: Battery performance metrics for the 5000mAh battery base.

- **Non-Destructive Sound Quality:** The design of the battery holder ensures that it does not interfere with the sound quality of your Spot device, allowing for clear audio playback and voice command recognition.

Zero loss of Sound Quality

Open design ensures sound is not blocked



Image: Visual representation of unaffected sound quality when the Spot is on the battery base.

- **Enhanced Portability:** Transform your Spot into a portable device, allowing you to move it freely between rooms or even outdoors.

Compact and Convenient

Compact, Lightweight, and Easy to Carry



Image: The battery base making the Spot device portable, shown being held in a hand.

- **Non-Slip Bottom:** Equipped with a non-slip pad on the bottom to ensure stability and prevent accidental sliding on various surfaces.

MAINTENANCE

To ensure the longevity and optimal performance of your PlusAcc Battery Base, follow these maintenance guidelines:

- Keep the device clean by wiping it with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- Store the battery base in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid dropping the device or subjecting it to strong impacts.
- Do not attempt to disassemble or repair the device yourself, as this will void the warranty and may cause damage.

TROUBLESHOOTING

If you encounter issues with your PlusAcc Battery Base, refer to the following common solutions:

Problem	Possible Cause	Solution
Battery Base not charging.	Incorrect power adapter or cable; loose connection; power outlet issue.	Ensure you are using the original Spot power adapter and cable. Check all connections are secure. Try a different power outlet.
Spot device not powering on when attached.	Battery Base is off; low battery charge; incorrect installation.	Press the power button on the battery base to turn it on. Charge the battery base. Re-install the Spot device, ensuring it clicks into place.
USB-C output not charging other devices.	Battery Base is off; low battery charge; incompatible device; faulty cable.	Ensure the battery base is on and has sufficient charge. Verify the connected device is USB-C compatible. Try a different USB-C cable.
Blue LED lights are too bright.	Intended design.	If used in a dark environment like a bedroom, consider placing a small piece of electrical tape over the LEDs if they are disruptive.

SPECIFICATIONS

Feature	Detail
Brand	PlusAcc
Model Number	E11-A
Battery Capacity	5000mAh
Hardware Interface	USB Type C
USB-C Output	5V 1A
Input Voltage	12 volts (from Spot adapter)
Compatible Devices	Spot, Smartphones, Earbuds, Smartwatches, etc.
Sound Playback Time	Up to 8 hours (at 50% volume)
Standby Time	Up to 13 hours

SAFETY INFORMATION

Please read and follow these safety guidelines carefully:

- For external use only.
- Do not expose the device to water or excessive moisture.
- Avoid extreme temperatures, direct sunlight, and heat sources.
- Keep out of reach of children.
- Use only the specified charging adapter (original Spot adapter) to charge the battery base.
- Do not short-circuit the battery or dispose of it in fire.

WARRANTY AND SUPPORT

The PlusAcc Battery Base (Model E11-A) comes with a **1-Year Warranty** from the date of purchase. For warranty claims, technical support, or any product-related inquiries, please contact PlusAcc customer service through the retailer where the product was purchased (e.g., Amazon.com). Please have your purchase details and model number (E11-A) ready.

You can also visit the official PlusAcc store on Amazon for more information: [PlusAcc Store](#)

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question