

Moshi 99MO241016

Moshi iGlaze for iPhone 16 Pro Max (MagSafe) User Manual

Model: 99MO241016

INTRODUCTION

This manual provides essential information for the proper use and maintenance of your Moshi iGlaze case for iPhone 16 Pro Max. The iGlaze case is designed to protect your device while enhancing its aesthetic with a unique pattern and ensuring compatibility with MagSafe accessories.



Figure 1: Moshi iGlaze case for iPhone 16 Pro Max in Mist White, showcasing its sleek design and MagSafe compatibility.

SETUP AND INSTALLATION

Follow these steps to properly install the Moshi iGlaze case on your iPhone 16 Pro Max.

1. **Prepare your device:** Ensure your iPhone 16 Pro Max is clean and free of dust or debris.
2. **Align the case:** Gently align the top edge of your iPhone with the top edge of the iGlaze case, ensuring the camera cutout matches.
3. **Insert the phone:** Carefully push your iPhone into the case, starting from the top, then pressing down on the corners until the phone is fully seated and all edges are covered by the case's bumper.
4. **Verify fit:** Check that all buttons (volume, power) are accessible and functional, and that the charging port and speakers are unobstructed.

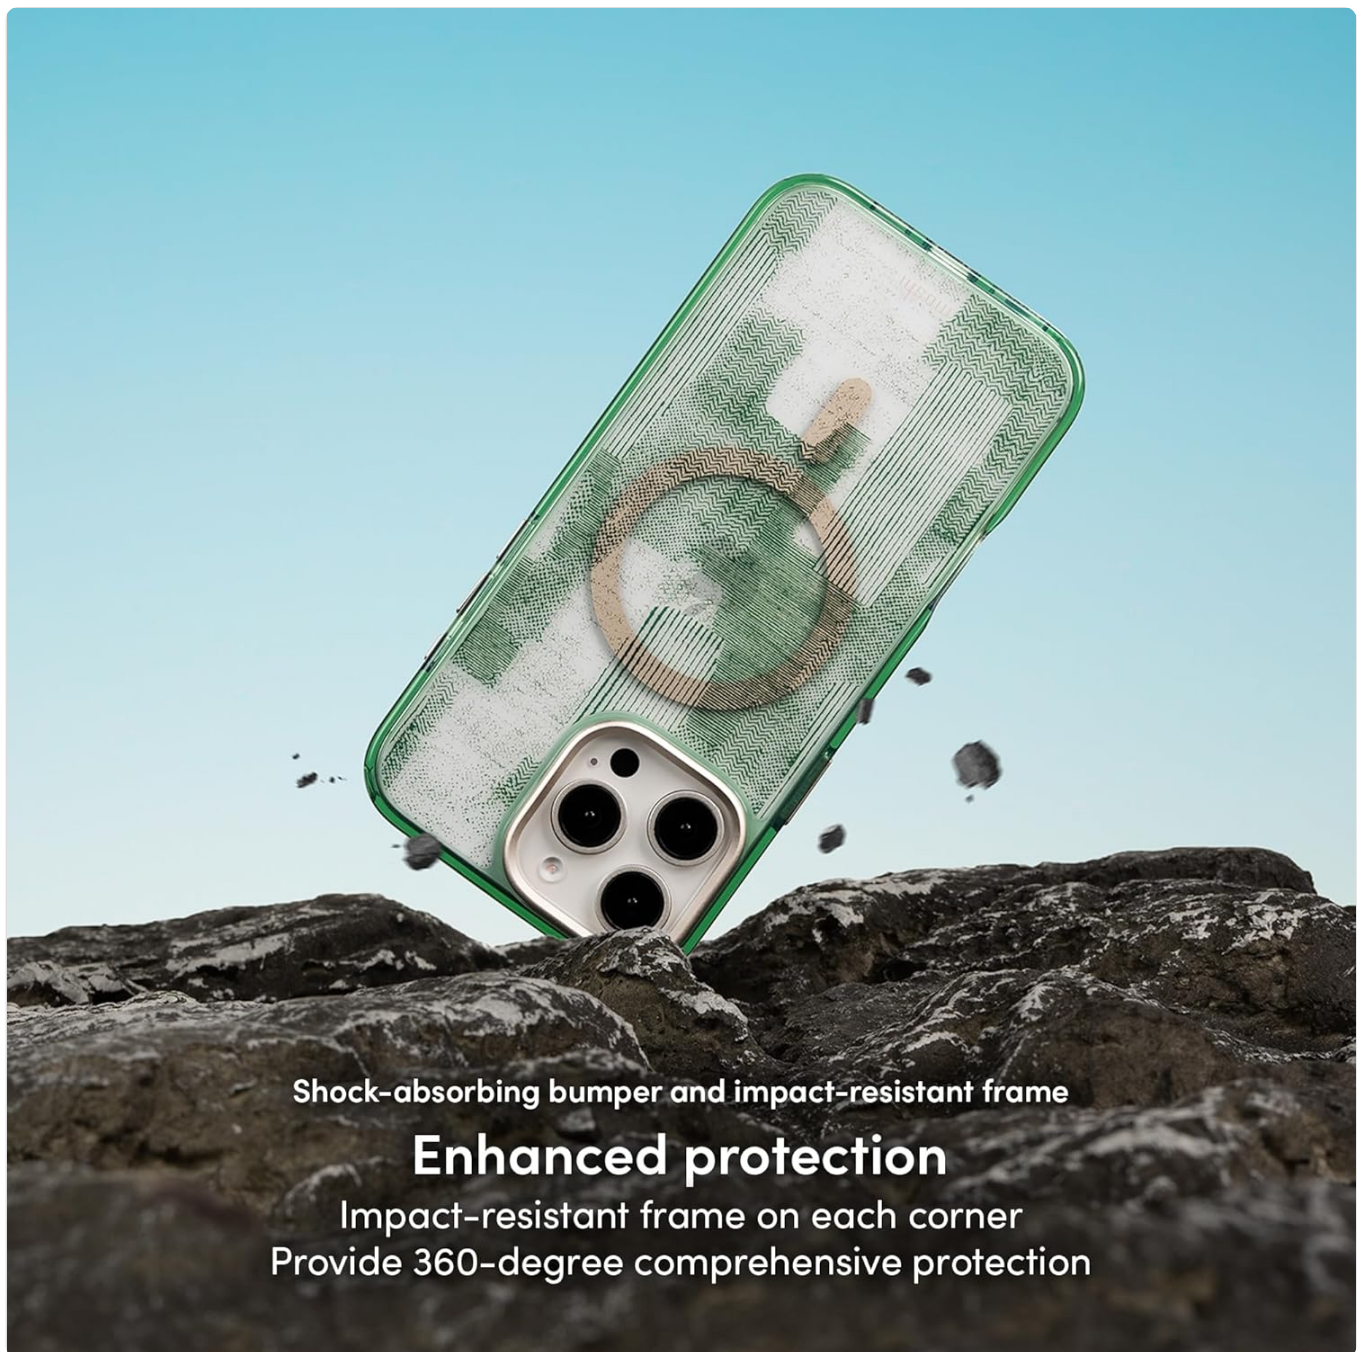


Figure 2: The Moshi iGlaze case securely fitted onto an iPhone 16 Pro Max, demonstrating its precise cutouts and slim profile.

OPERATING FEATURES

The Moshi iGlaze case is designed with several features to enhance your iPhone 16 Pro Max experience.

- **MagSafe Compatibility:** The case features an integrated magnetic ring that ensures full compatibility with MagSafe chargers and accessories, allowing for secure attachment and efficient wireless charging.



Shock-absorbing bumper and impact-resistant frame

Enhanced protection

Impact-resistant frame on each corner
Provide 360-degree comprehensive protection

Figure 3: The iGlaze case demonstrating its MagSafe compatibility, allowing for seamless attachment of magnetic accessories.

- **Camera and Button Protection:** Premium alloy components are integrated around the camera module and buttons to accurately protect them from scratches and impacts, maintaining full functionality.



Camera Protector / Buttons

Premium alloy components

Accurately protect the camera module from scratches

Figure 4: A detailed view of the iGlaze case's camera protector and button covers, highlighting the premium alloy components.

- **Enhanced Drop Protection:** The shock-absorbing bumper and impact-resistant frame on each corner provide 360-degree comprehensive protection against drops and impacts.



Transparent three-layer stacking design

Eliminate the risk of detachment and damage
Improve the stability and durability of the magnetic coil

Figure 5: The iGlaze case demonstrating its robust design for enhanced protection against drops and impacts.

- **2-in-1 Wrist/Body Strap Compatibility:** The case is compatible with Moshi's 2-in-1 Wrist/Body Strap, offering hands-free convenience.



MagSafe compatible magnetic accessories

Fully enjoy with wireless charger experience

Figure 6: The iGlaze case shown with the optional 2-in-1 Wrist/Body Strap, illustrating its compatibility for hands-free use.

MAINTENANCE

To keep your Moshi iGlaze case in optimal condition, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft, damp cloth to wipe down the case. For stubborn dirt, a small amount of mild soap can be used. Avoid harsh chemicals, abrasive cleaners, or solvents, as these can damage the case material.
- **Storage:** When not in use, store the case in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Sharp Objects:** Prevent contact with sharp objects that could scratch or puncture the case surface.

TROUBLESHOOTING

If you encounter any issues with your Moshi iGlaze case, refer to the following common solutions:

- **Case not fitting correctly:**
Ensure you have the correct model of the iGlaze case for your iPhone 16 Pro Max. Remove any existing screen

- protectors or skins that might interfere with the fit. Re-align and gently press the phone into the case, ensuring all corners snap into place.
- **MagSafe accessories not attaching securely:**
Verify that the MagSafe accessory is genuinely MagSafe compatible. Ensure there is no debris or foreign objects between the case and the accessory that could impede the magnetic connection. If the issue persists, try a different MagSafe accessory to rule out accessory malfunction.
 - **Buttons are stiff or unresponsive:**
Check if the case is fully seated on the phone. Sometimes, a slight misalignment can cause buttons to feel stiff. Remove and re-install the case, ensuring a snug fit around all edges and buttons.

For further assistance, please contact Moshi customer support.

SPECIFICATIONS

Moshi iGlaze for iPhone 16 Pro Max (MagSafe)

Feature	Detail
Product Dimensions	6.57 x 3.27 x 0.59 inches
Item Weight	3.52 ounces
Model Number	99MO241016
Special Features	Magnetic, Shock-Absorbent
Form Factor	Basic Case
Color	Mist White
Compatible Phone Models	iPhone 16 Pro Max
Material	AL alloy, Polycarbonate, Polyethylene Terephthalate, Thermoplastic Polyurethane
What's in the box	Phone Case

Product Information

iGlaze Hardshell Case (MagSafe)



Material	PC, TPU, PET, AL alloy
Color	Mist White, Sunlit Green, Dust Indigo
Specifications	16.7 x 8.3 x 1.5 cm
Weight	40g
Device	iPhone 16 Pro Max

Figure 7: Visual representation of product information, including materials and available colors (Mist White, Sunlit Green, Dust Indigo).

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please visit the official Moshi website or contact their customer service department. Moshi products typically come with a standard warranty covering manufacturing defects.

Official Moshi Store: [Moshi Store on Amazon](#)