

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SoBuy](#) /

› [SoBuy FSR180-W Shoe Storage Cabinet Instruction Manual](#)

SoBuy FSR180-W

SoBuy FSR180-W Shoe Storage Cabinet Instruction Manual

Model: FSR180-W | Brand: SoBuy

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your SoBuy FSR180-W Shoe Storage Cabinet. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



Image 1.1: Front view of the SoBuy FSR180-W Shoe Storage Cabinet, featuring a top drawer and two tilt-out compartments.

2. SAFETY WARNINGS

To ensure safe use of the SoBuy FSR180-W Shoe Storage Cabinet, please observe the following warnings:

- **Anti-Tipping Device:** It is strongly recommended to fix the cabinet to the wall using the included anti-tipping device. This prevents accidents, especially if children climb on or hang from the furniture.
- **Weight Capacity:** Do not exceed the maximum weight capacity of 25 kg for the entire unit. Distribute weight evenly.
- **Stable Surface:** Place the cabinet on a flat, stable surface to prevent wobbling or tipping.
- **Children Safety:** Keep small parts and assembly hardware out of reach of children during assembly.

3. PACKAGE CONTENTS

Before assembly, verify that all components are present. The package contains:

- All necessary parts for assembly (numbered for easy identification).
- Detailed assembly instructions with illustrations.
- Hardware kit, including screws, dowels, and the anti-tipping device.

If any parts are missing or damaged, please contact SoBuy customer support immediately.

4. SETUP AND ASSEMBLY

The SoBuy FSR180-W Shoe Storage Cabinet is designed for easy self-assembly. Follow the detailed, illustrated instructions provided in the package. It is recommended to have two people for assembly.

1. **Preparation:** Clear a spacious area for assembly. Lay out all parts and hardware on a soft, clean surface to prevent scratches.
2. **Follow Instructions:** Refer to the numbered parts and step-by-step diagrams in the included assembly manual.
3. **Secure Connections:** Ensure all screws and fasteners are tightened securely, but do not overtighten to avoid damaging the engineered wood.
4. **Install Anti-Tipping Device:** Once assembled, attach the anti-tipping device to the back of the cabinet and secure it to a wall stud or appropriate wall anchor.



Image 4.1: Detail of drawer runners and screws, illustrating typical assembly components.

5. OPERATING INSTRUCTIONS

The SoBuy FSR180-W cabinet offers practical storage solutions for your entryway.

5.1 Top Drawer

The upper drawer is designed for storing small items such as shoe polish, keys, shoehorns, and other accessories. The top surface of the cabinet can also be used to place frequently accessed items like bags or glasses.



Image 5.1: The top drawer, open, showing storage for small personal items.

5.2 Tilt-Out Shoe Compartments

The cabinet features two tilt-out compartments, each with two levels for shoe storage. The internal separation is adjustable to two positions, allowing flexibility for different shoe sizes.

- To open, gently pull the top edge of the compartment door outwards.
- Place shoes on the designated racks.
- To close, push the compartment door back until it is flush with the cabinet front.

The hollow handle design not only facilitates opening and closing but also helps maintain ventilation within the shoe cabinet.



Image 5.2: An open tilt-out compartment displaying shoes stored on two levels.



Image 5.3: Detail of the tilt-out mechanism, showing the internal shoe racks.

6. MAINTENANCE

The SoBuy FSR180-W Shoe Storage Cabinet is designed for easy cleaning and maintenance.

- **Cleaning:** Wipe the surfaces with a soft, damp cloth. Avoid using abrasive cleaners or harsh chemicals, as these can damage the finish.
- **Spills:** Clean up spills immediately to prevent staining or damage to the engineered wood.
- **Ventilation:** Ensure good air circulation around the cabinet, especially if storing damp shoes, to prevent moisture buildup.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.

7. TROUBLESHOOTING

If you encounter any issues with your SoBuy FSR180-W Shoe Storage Cabinet, consider the following:

- **Assembly Difficulties:** Double-check the assembly instructions. Ensure all parts are oriented

correctly and all fasteners are properly installed.

- **Wobbling:** Ensure the cabinet is placed on a level surface. If wobbling persists, check that all connections are tight and the anti-tipping device is securely installed.
- **Drawer/Compartment Not Closing Smoothly:** Check for any obstructions. Ensure drawer runners are correctly aligned and free of debris.

For persistent issues or if you require replacement parts, please contact SoBuy customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	SoBuy
Model Number	FSR180-W
Color	White
Material	Engineered Wood (Particle Board)
Product Dimensions (L x W x H)	60 x 30 x 90 cm (23.6 x 11.8 x 35.4 inches)
Item Weight	20.1 kg (44.3 lbs)
Maximum Weight Capacity	25 kg (55 lbs)
Number of Shoe Compartments	2 (tilt-out, each with 2 levels)
Number of Drawers	1 (top drawer)
Fixation Type	Floor Mount (with anti-tipping device for wall attachment)



Image 8.1: Dimensional diagram of the SoBuy FSR180-W Shoe Storage Cabinet.

9. WARRANTY AND SUPPORT

SoBuy products are designed for quality and durability. Please retain your purchase invoice as proof of purchase.

- **Invoice:** An invoice is provided with your purchase. This document is essential for any warranty claims or support requests.
- **Returns:** If you are not satisfied with the product or if there is an issue, you may be eligible for a return. Please refer to the retailer's return policy for details.
- **Customer Support:** For any questions, missing parts, or assistance with assembly, please contact SoBuy customer service. Contact information can typically be found on the retailer's website or on the packaging.

