



Manuals.plus /

› ARNSSIEN /

› ARNSSIEN M3 Kids Instant Print Digital Camera User Manual

ARNSSIEN M3

ARNSSIEN M3 Kids Instant Print Digital Camera User Manual

Model: M3

Introduction	Package Contents	Product Overview	Setup	Operation	Maintenance
	Troubleshooting	Specifications	Warranty & Support		

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your ARNSSIEN M3 Kids Instant Print Digital Camera. Please read this manual thoroughly before operating the device and retain it for future reference. The ARNSSIEN M3 camera is designed to allow children aged 3-12 to capture photos and videos, and instantly print black and white images.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any items are missing or damaged, please contact customer support.

- ARNSSIEN M3 Instant Print Camera (Pink)
- 7 Rolls of Thermal Printing Paper
- 12 Color Pens
- 32GB Micro SD Card
- Lanyard
- Card Reader
- USB Type-C Cable
- Instruction Manual
- 2 Cartoon Stickers



Image 2.1: The ARNSSIEN M3 Kids Instant Print Camera with included accessories, including the camera unit, thermal paper rolls, color pens, 32GB SD card, lanyard, card reader, and USB-C cable.

3. PRODUCT OVERVIEW

The ARNSSIEN M3 camera features a user-friendly design with multiple functions for creative play. Familiarize yourself with the camera's components and controls.

3.1 Key Features

- **Instant Printing:** Print black and white photos directly from the camera.
- **HD Video Recording:** Capture videos in 1080P resolution.
- **2.4-inch IPS Screen:** Eye-protecting display for viewing photos and videos.
- **Multiple Modes:** Switch between print, photo, and selfie modes easily.
- **Creative Options:** Fun photo frames, filters, puzzles, timed photos, continuous shooting, 16x zoom.
- **Music Player:** Enjoy music playback on the device.
- **Overheat Protection:** Automatic safety feature to prevent overheating during prolonged use.



Image 3.1: Visual representation of the camera's multi-functional capabilities, including instant printing, HD video, long battery life, and various creative modes.

4. SETUP

4.1 Charging the Camera

1. Connect the provided USB Type-C cable to the camera's charging port.
2. Plug the other end of the cable into a compatible USB power adapter (DC 5V 1200mAh recommended) or a computer's USB port.
3. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off.
4. A full charge typically takes 2-5 hours and provides 2-5 hours of usage.

4.2 Inserting the Micro SD Card

The camera requires a Micro SD card (32GB included) to store photos and videos.

1. Locate the Micro SD card slot on the side of the camera.
2. Gently insert the Micro SD card into the slot with the gold contacts facing down until it clicks into place.
3. To remove, push the card in slightly until it springs out.

4.3 Loading Thermal Printing Paper

The camera uses thermal paper for instant black and white prints.

1. Press the grooves on both sides of the camera to open the paper slot cover.
2. Place a roll of thermal printing paper inside the camera body. Ensure the paper feeds out with the printable side (usually smoother) facing up. Incorrect placement will result in print failure.
3. Close the paper slot cover firmly until it clicks.



Image 4.1: Detailed view of the camera's side panel showing the SD card slot and reset button, along with a three-step guide for correctly loading the thermal printing paper.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- To power on, press and hold the Power button for a few seconds.
- To power off, press and hold the Power button again until the screen turns off.

5.2 Taking Photos

1. Turn on the camera.
2. Use the navigation buttons to select the Photo mode.
3. Frame your shot using the 2.4-inch IPS screen.
4. Press the Shutter button to capture the photo.

5.3 Recording Videos

1. Turn on the camera.
2. Navigate to the Video mode.
3. Press the Shutter button once to start recording.
4. Press the Shutter button again to stop recording.

5.4 Instant Printing

After taking a photo, you can choose to print it instantly.

1. In Photo mode, after capturing an image, an option to print may appear.
2. Alternatively, navigate to the Gallery, select a photo, and choose the print option.
3. The camera supports 4 different print densities and 2 print modes (e.g., Gray Print, Dot Print). Adjust these settings in the menu if desired.
4. The camera will print the image in black and white on the thermal paper.

One-touch printing & 5 print density modes



Gray Print

Dot Print



Security



Intelligence

! Tips:

When the temperature reaches 45 ° automatic reminder and pause printing, while parents should remind children do not change the film when this sign appears .

Intelligent overheating protection reminder
More durable camera, safer for kids



Image 5.1: Illustration of the camera's printing capabilities, including various print density options and a warning for overheating protection.

5.5 Using Creative Features

- **Photo Frames & Filters:** Access these options in the photo mode menu to add fun effects to your pictures.
- **Timed Photo Taking:** Set a timer (e.g., 3s, 5s, 10s) before a photo is taken, allowing the user to get into position.
- **Continuous Shooting:** Capture multiple photos in quick succession.
- **16x Zoom:** Use the zoom function to get closer to your subject.
- **Music Player:** Load MP3 files onto the SD card to play music.
- **Puzzle Games:** The camera includes several built-in puzzle games for entertainment.

to prolonged operation, it will automatically trigger a warning alert and suspend the printing function to ensure safe use. Allow the camera to cool down before resuming printing.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on	Low battery; Power button not pressed long enough	Charge the camera; Press and hold the Power button for 3-5 seconds.
Cannot take photos/videos	No Micro SD card inserted; SD card full; SD card error	Insert SD card; Delete old files or replace SD card; Format SD card (backup data first).
Prints are blank or faded	Thermal paper inserted incorrectly; Paper roll empty; Overheating protection active	Re-insert paper with printable side up; Replace paper roll; Allow camera to cool down.
Camera freezes or becomes unresponsive	Software glitch; Low battery	Press the reset button (small hole on the side) with a pin; Charge the camera.
Poor print quality	Print density setting; Low battery; Dirty print head	Adjust print density in settings; Charge camera; Gently clean print head with a soft cloth.

8. SPECIFICATIONS

Feature	Detail
Model Name	M3
Brand	ARNSSIEN
Screen Size	2.4 Inches IPS
Video Resolution	1080p
Effective Still Resolution	1 MP
Digital Zoom	16x
Battery Capacity	1200 mAh Lithium Polymer
Battery Life (Average)	4 Hours
External Memory	32GB Micro SD Card (Included)
Connectivity	USB Type-C
Supported File Format	JPEG (Photos), MP4 (Videos)
Special Features	Instant Print, Time-lapse, Music Player, Puzzle Games, Overheat Protection
Item Weight	0.5 Kilograms

9. WARRANTY AND SUPPORT

9.1 Product Warranty

The ARNSSIEN M3 Kids Instant Print Digital Camera comes with a **30-day warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or improper storage.

9.2 Customer Support

If you encounter any issues or have questions regarding your ARNSSIEN M3 camera, please contact our customer support team. We aim to provide 100% satisfaction within 24 hours.

For support, please refer to the contact information provided with your purchase or visit the official ARNSSIEN store on Amazon: [ARNSSIEN Store](#)

