

Taurus HVCA7296B

Taurus Homeland Ultimate Animal Cordless Stick Vacuum Cleaner Instruction Manual

Model: HVCA7296B

1. INTRODUCTION

Thank you for choosing the Taurus Homeland Ultimate Animal Cordless Stick Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

The Taurus Homeland Ultimate Animal is a lightweight and versatile cordless vacuum cleaner designed for effective cleaning across various surfaces, including hard floors and carpets. Its powerful suction and specialized accessories make it ideal for homes with pets.

2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using an electrical appliance:

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they

may be present.

- Do not pick up toxic material (e.g., chlorine bleach, ammonia cleaner, drain cleaner).
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not charge the unit outdoors.
- Use only the charger supplied by the manufacturer to recharge.
- Store the appliance indoors. Put away after use to prevent accidents.

3. PACKAGE CONTENTS

Your Taurus Homeland Ultimate Animal Cordless Stick Vacuum Cleaner package includes the following components:

- Main Vacuum Unit (Motor and Dustbin)
- Extension Tube
- Motorized ALL ROAD Brush Head
- Mini Turbo Brush
- Crevice Tool
- Upholstery Brush
- Wall Mount Bracket
- Charger
- User Manual



Figure 3.1: Taurus Homeland Ultimate Animal Cordless Stick Vacuum Cleaner with included accessories.

4. PRODUCT OVERVIEW

The Taurus Homeland Ultimate Animal is engineered for powerful and convenient cleaning. Key features include:

- **High Suction Power:** Delivers 165 W of power and 12,500 Pa suction for effective dirt removal.
- **Removable Lithium Battery:** Equipped with a 33.6 V MAX lithium battery, providing up to 70 minutes of autonomy in ECO mode and a fast 4-hour charge time.
- **Advanced Triple Cyclonic Filtration:** Features a HEPA filter, cyclonic filter, and protective mesh for cleaner air and sustained performance.
- **Specialized Brushes:** Includes an ALL ROAD motorized brush suitable for all surfaces and a Mini Turbo Brush specifically designed for pet hair.
- **Lightweight and Ergonomic Design:** Weighs approximately 2 kg, making it easy to maneuver. Integrated OPTIC LED lighting enhances visibility in dark areas.



Figure 4.1: Vacuum in use, highlighting power and suction.

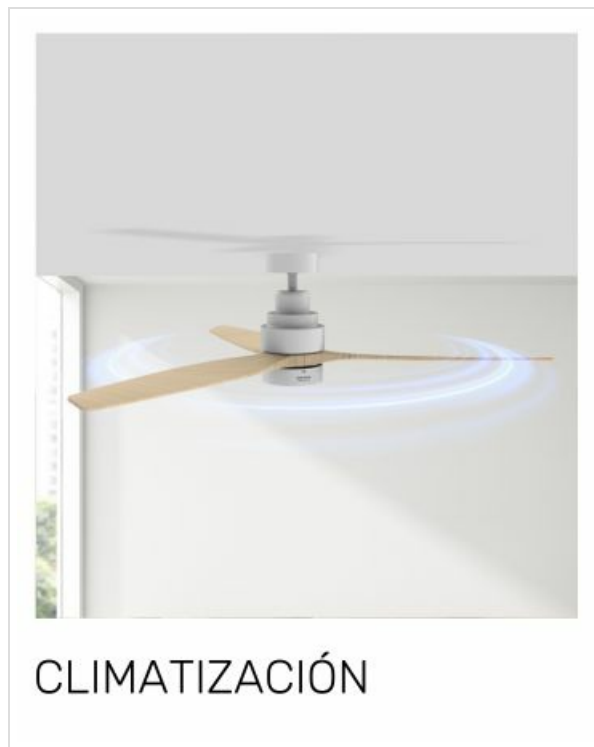


Figure 4.2: Lightweight design allows for easy cleaning of high areas.

5. SETUP

5.1 Assembly

1. **Attach the Extension Tube:** Insert the extension tube into the main vacuum unit until it clicks securely into place.
2. **Attach the Floor Brush:** Connect the motorized ALL ROAD brush head to the other end of the extension tube, ensuring it locks firmly.
3. **Attach Accessories:** For handheld use, attach desired accessories (e.g., crevice tool, upholstery brush, Mini Turbo Brush) directly to the main vacuum unit or the extension tube using the 'One Touch System'.



Figure 5.1: The 'One Touch System' for attaching accessories.

5.2 Charging the Battery

Before first use, fully charge the battery. The battery can be charged while attached to the vacuum or separately.

1. Connect the charger to a power outlet.
2. Plug the charging cable into the charging port on the battery.
3. The battery indicator will show charging status. A full charge takes approximately 4 hours.
4. Once fully charged, disconnect the charger.



Figure 5.2: Charging the vacuum cleaner battery.

6. OPERATING INSTRUCTIONS

6.1 Powering On/Off and Mode Selection

1. Press the power button to turn the vacuum cleaner on.
2. The vacuum will typically start in ECO mode.
3. Press the mode selection button to switch between ECO and TURBO modes as needed for different cleaning tasks.
4. Press the power button again to turn the vacuum cleaner off.

6.2 Using Attachments

- **Motorized ALL ROAD Brush:** Ideal for daily cleaning on both hard floors and carpets. The integrated OPTIC LED lights illuminate the cleaning path.
- **Mini Turbo Brush:** Specifically designed for removing pet hair and stubborn dirt from upholstery, stairs, and smaller carpeted areas.
- **Crevice Tool:** Use for narrow gaps, corners, and edges.

- **Upholstery Brush:** Suitable for cleaning delicate surfaces like curtains and furniture.



Figure 6.1: Using the Mini Turbo Brush for pet hair.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

7.1 Emptying the Dustbin

Empty the dustbin regularly, especially when the MAX line is reached, to maintain suction power.

1. Ensure the vacuum is turned off.
2. Press the dustbin release button to detach it from the main unit.
3. Position the dustbin over a waste bin.
4. Press the 'Touch & Clean' release button on the dustbin to open the bottom flap and empty the contents.
5. Close the flap and reattach the dustbin to the main unit until it clicks.



HOGAR

Figure 7.1: Emptying the dustbin.

7.2 Cleaning the Filters

The triple filtration system (HEPA filter, cyclonic filter, mesh) should be cleaned regularly to prevent clogging and maintain suction.

1. Remove the dustbin as described above.
2. Twist and pull out the filter assembly from the dustbin.
3. Separate the HEPA filter, cyclonic filter, and mesh.
4. Tap off loose dirt. Rinse all filter components under cold running water until the water runs clear.
5. Allow all parts to air dry completely for at least 24 hours before reassembling and placing back into the vacuum. Do not use a dryer or other heating methods.



Figure 7.2: Triple advanced filtration system components.



Figure 7.3: Washing the filter components.

7.3 Cleaning the Brush Roll

Periodically check the brush roll for tangled hair or debris. Use scissors to cut away any tangled hair and remove it.

8. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged.	Charge the battery fully.
	Battery is not properly installed.	Ensure the battery is securely clicked into place.

Problem	Possible Cause	Solution
Low suction power	Dustbin is full.	Empty the dustbin.
	Filters are clogged.	Clean or replace the filters.
	Brush roll is tangled.	Remove hair and debris from the brush roll.
	Hose or nozzle is blocked.	Check for and remove any blockages.
Brush roll not spinning	Brush roll is jammed.	Clear any obstructions from the brush roll.
	Attachment not properly connected.	Ensure the brush head is securely attached.

9. SPECIFICATIONS

Feature	Specification
Brand	Taurus
Model Number	HVCA7296B
Wattage	165 W
Suction Power	12,500 Pa
Battery Type	33.6 V MAX Lithium-Ion
Charging Time	Approx. 4 hours
Runtime (ECO mode)	Up to 70 minutes
Filter Type	HEPA Filter (Triple Advanced Filtration)
Operational Weight	Approx. 2 kg
Recommended Uses	Carpets and hard floors
Special Feature	Cordless, OPTIC LED lighting

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Taurus website. Keep your proof of purchase for any warranty claims.

Taurus Official Website: [Taurus Brand Store on Amazon](#)

 <p> HOMELAND ULTIMATE HOMELAND ULTIMATE ANIMAL </p> <p> ES: Instrucciones de seguridad ES: Instrucciones de uso ES: Instrucciones de mantenimiento ES: Instrucciones de solución de problemas ES: Instrucciones de almacenamiento ES: Instrucciones de transporte ES: Instrucciones de limpieza ES: Instrucciones de desmontaje ES: Instrucciones de montaje ES: Instrucciones de uso ES: Instrucciones de mantenimiento ES: Instrucciones de solución de problemas ES: Instrucciones de almacenamiento ES: Instrucciones de transporte ES: Instrucciones de limpieza ES: Instrucciones de desmontaje ES: Instrucciones de montaje </p> <p>Taurus</p>	<p>Taurus Homeland Ultimate Animal Vacuum Cleaner Safety and Operation Manual</p> <p>Comprehensive safety advice, operating instructions, and troubleshooting for the Taurus Homeland Ultimate Animal vacuum cleaner. Learn about proper usage, maintenance, and eco-friendly disposal.</p>
 <p> HOMELAND ULTIMATE HOMELAND ULTIMATE ANIMAL </p> <p> ES: Instrucciones de seguridad ES: Instrucciones de uso ES: Instrucciones de mantenimiento ES: Instrucciones de solución de problemas ES: Instrucciones de almacenamiento ES: Instrucciones de transporte ES: Instrucciones de limpieza ES: Instrucciones de desmontaje ES: Instrucciones de montaje ES: Instrucciones de uso ES: Instrucciones de mantenimiento ES: Instrucciones de solución de problemas ES: Instrucciones de almacenamiento ES: Instrucciones de transporte ES: Instrucciones de limpieza ES: Instrucciones de desmontaje ES: Instrucciones de montaje </p> <p>Taurus</p>	<p>Manual de Instrucciones Taurus Homeland Ultimate y Homeland Ultimate Animal</p> <p>Manual de usuario completo para las aspiradoras inalámbricas Taurus Homeland Ultimate y Homeland Ultimate Animal. Encuentre guías detalladas sobre instalación, uso, mantenimiento, solución de problemas y consejos de seguridad para una limpieza eficiente del hogar.</p>
 <p> HOMELAND ULTIMATE HOMELAND ULTIMATE ANIMAL </p> <p> ES: Instrucciones de seguridad ES: Instrucciones de uso ES: Instrucciones de mantenimiento ES: Instrucciones de solución de problemas ES: Instrucciones de almacenamiento ES: Instrucciones de transporte ES: Instrucciones de limpieza ES: Instrucciones de desmontaje ES: Instrucciones de montaje ES: Instrucciones de uso ES: Instrucciones de mantenimiento ES: Instrucciones de solución de problemas ES: Instrucciones de almacenamiento ES: Instrucciones de transporte ES: Instrucciones de limpieza ES: Instrucciones de desmontaje ES: Instrucciones de montaje </p> <p>Taurus</p>	<p>Taurus Homeland Ultimate Animal Upright Vacuum Cleaner - User Manual & Safety Guide</p> <p>User and safety manual for the Taurus Homeland Ultimate Animal upright vacuum cleaner. Provides operating instructions, safety warnings, maintenance advice, and product specifications for household use.</p>
 <p> Taurus ULTIMATE GO ULTIMATE DIGITAL ULTIMATE GO ANIMAL ULTIMATE DIGITAL FUZZY </p> <p> ES: Instrucciones de seguridad ES: Instrucciones de uso ES: Instrucciones de mantenimiento ES: Instrucciones de solución de problemas ES: Instrucciones de almacenamiento ES: Instrucciones de transporte ES: Instrucciones de limpieza ES: Instrucciones de desmontaje ES: Instrucciones de montaje ES: Instrucciones de uso ES: Instrucciones de mantenimiento ES: Instrucciones de solución de problemas ES: Instrucciones de almacenamiento ES: Instrucciones de transporte ES: Instrucciones de limpieza ES: Instrucciones de desmontaje ES: Instrucciones de montaje </p>	<p>Taurus Ultimate Go Series Stick Vacuum Cleaner User Manual</p> <p>User manual for Taurus Ultimate Go, Ultimate Digital, Ultimate Go Animal, and Ultimate Digital Fuzzy cordless stick vacuum cleaners. Covers usage, care, installation, charging, cleaning, and maintenance.</p>
<p>Downloaded by: gahilman on 04/04/2023 10:08:02:07</p>  <p> HOMELAND DIGITAL FLEX HOMELAND DIGITAL ANIMAL FLEX </p> <p> ES: Instrucciones de seguridad ES: Instrucciones de uso ES: Instrucciones de mantenimiento ES: Instrucciones de solución de problemas ES: Instrucciones de almacenamiento ES: Instrucciones de transporte ES: Instrucciones de limpieza ES: Instrucciones de desmontaje ES: Instrucciones de montaje ES: Instrucciones de uso ES: Instrucciones de mantenimiento ES: Instrucciones de solución de problemas ES: Instrucciones de almacenamiento ES: Instrucciones de transporte ES: Instrucciones de limpieza ES: Instrucciones de desmontaje ES: Instrucciones de montaje </p> <p>Taurus</p>	<p>Manual de Usuario Aspiradora Taurus Homeland Digital Flex y Animal Flex</p> <p>Guía completa de usuario para las aspiradoras Taurus Homeland Digital Flex y Animal Flex, cubriendo instalación, operación, mantenimiento y solución de problemas.</p>
 <p> Taurus ULTIMATE GO ULTIMATE DIGITAL </p> <p> ES: Instrucciones de seguridad ES: Instrucciones de uso ES: Instrucciones de mantenimiento ES: Instrucciones de solución de problemas ES: Instrucciones de almacenamiento ES: Instrucciones de transporte ES: Instrucciones de limpieza ES: Instrucciones de desmontaje ES: Instrucciones de montaje ES: Instrucciones de uso ES: Instrucciones de mantenimiento ES: Instrucciones de solución de problemas ES: Instrucciones de almacenamiento ES: Instrucciones de transporte ES: Instrucciones de limpieza ES: Instrucciones de desmontaje ES: Instrucciones de montaje </p>	<p>Manual de Instrucciones Taurus Ultimate Go Ultimate Digital</p> <p>Guía completa para el aspirador vertical sin cable Taurus Ultimate Go Ultimate Digital, cubriendo uso, carga, limpieza y mantenimiento.</p>

