

[Manuals.plus](#) /

> [shenruifa](#) /

> shenruifa Handheld Game Console Instruction Manual

shenruifa shenruifagn3owcx0bz-69

shenruifa Handheld Game Console Instruction Manual

Model: shenruifagn3owcx0bz-69

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your shenruifa Handheld Game Console (Model: shenruifagn3owcx0bz-69). Please read this manual thoroughly before using the device to ensure optimal performance and longevity.



Image: Front view of the shenruifa Handheld Game Console, showcasing its red casing and central screen.

PACKAGE CONTENTS

Verify that all items are present in the package:

- shenruifa Handheld Game Console (Model: shenruifagn3owcx0bz-69)

Note: 3 AAA batteries are required for operation and are not included in the package.

DEVICE OVERVIEW

Familiarize yourself with the console's buttons and features:



Image: Front and back view of the console with labels for Volume button, Switch, Arrow keys, Function keys, Power button, Start/pause key, Reset key, 2.0 inch eye protection screen, Horn, and Battery compartment.

- **Volume button:** Adjusts audio output.
- **Switch:** Power on/off switch.
- **Arrow keys:** Directional controls for gameplay and menu navigation.
- **Function keys:** Action buttons for in-game commands.
- **Power button:** Secondary power control or menu function.
- **Start/pause key:** Initiates games or pauses gameplay.
- **Reset key:** Restarts the console or current game.
- **2.0 inch eye protection:** The main display screen.
- **Horn:** Speaker for audio output.
- **Battery compartment:** Located on the back for AAA battery installation.

SETUP

1. Install Batteries:

- Locate the battery compartment on the back of the console.
- Open the battery compartment cover.
- Insert 3 new AAA batteries, ensuring correct polarity (+/-).
- Close the battery compartment cover securely.

2. Power On:

- Slide the 'Switch' to the ON position.
- Press the 'Power button' if the screen does not immediately illuminate.

OPERATING INSTRUCTIONS

1. Game Selection:

- Upon powering on, the console will display a game menu.
- Use the 'Arrow keys' to navigate through the list of 268 built-in games.
- Press the 'Start/pause key' or a designated 'Function key' to select and begin a game.

2. Gameplay:

- Use the 'Arrow keys' for movement and 'Function keys' for actions within the game.
- Press the 'Start/pause key' during gameplay to pause or resume.

3. Volume Adjustment:

- Use the 'Volume button' to increase or decrease the sound level.

4. Resetting the Console/Game:

- To restart the current game or return to the main menu, press the 'Reset key'.

5. Power Off:

- Slide the 'Switch' to the OFF position to power down the console.

6. Language Selection:

- The console supports Chinese and English languages. Refer to the on-screen menu for language selection options, typically found in the settings or initial boot screen.

MAINTENANCE

- **Cleaning:** Wipe the console with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials, as they may damage the flame-retardant ABS material or screen.
- **Battery Care:** If the console will not be used for an extended period, remove the AAA batteries to prevent leakage and potential damage to the device.
- **Storage:** Store the console in a cool, dry place away from direct sunlight and extreme temperatures.
- **Screen Protection:** The 2.0 inch screen is designed for eye protection. Avoid pressing on the screen or exposing it to sharp objects.

TROUBLESHOOTING

- **Console does not power on:**

- Ensure batteries are correctly installed with proper polarity.
 - Replace old batteries with new AAA batteries.
 - Confirm the 'Switch' is in the ON position.
- **Screen is blank or flickering:**
 - Check battery level and replace if low.
 - Try pressing the 'Reset key'.
- **No sound:**
 - Adjust the 'Volume button'.
 - Ensure the game itself has sound enabled (if applicable).
- **Buttons are unresponsive:**
 - Try pressing the 'Reset key' to restart the game or console.
 - Ensure the console has sufficient battery power.

SPECIFICATIONS

Model Number	shenruifagn3owcx0bz-69
Brand	shenruifa
Material	Flame retardant ABS
Screen	2.0 inch TFT HD LCD Color Screen
Built-in Games	268 Classic Retro Games
Power Source	3 x AAA Batteries (not included)
Console Dimensions (approx.)	21 cm x 9.8 cm x 4.7 cm (8.27 in x 3.86 in x 1.85 in)
Screen Dimensions (approx.)	3.7 cm x 3.4 cm (1.46 in x 1.34 in)
Item Weight	3.77 ounces (approx. 107 grams)

WARRANTY INFORMATION

No specific warranty information is provided with this product. Please refer to your point of purchase or retailer for details regarding their return or warranty policies.

SUPPORT

For further assistance or inquiries, please contact the retailer from whom you purchased this product. No direct manufacturer support contact information is provided in the product details.



