

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [PureMounts](#) /

› [PureMounts PM-TVS-40 Universal Height-Adjustable TV Stand Instruction Manual](#)

## PureMounts PM-TVS-40


# PureMounts PM-TVS-40 Universal Height-Adjustable TV Stand Instruction Manual

Model: PM-TVS-40

## 1. INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient assembly, operation, and maintenance of your PureMounts PM-TVS-40 Universal Height-Adjustable TV Stand. Please read this manual thoroughly before installation and retain it for future reference.

The PureMounts PM-TVS-40 is designed to provide a stable and elegant solution for displaying televisions ranging from 32 to 70 inches, supporting a maximum weight of 40 kg. It features VESA compatibility up to 400x400, height adjustment, and swivel functionality for optimal viewing.

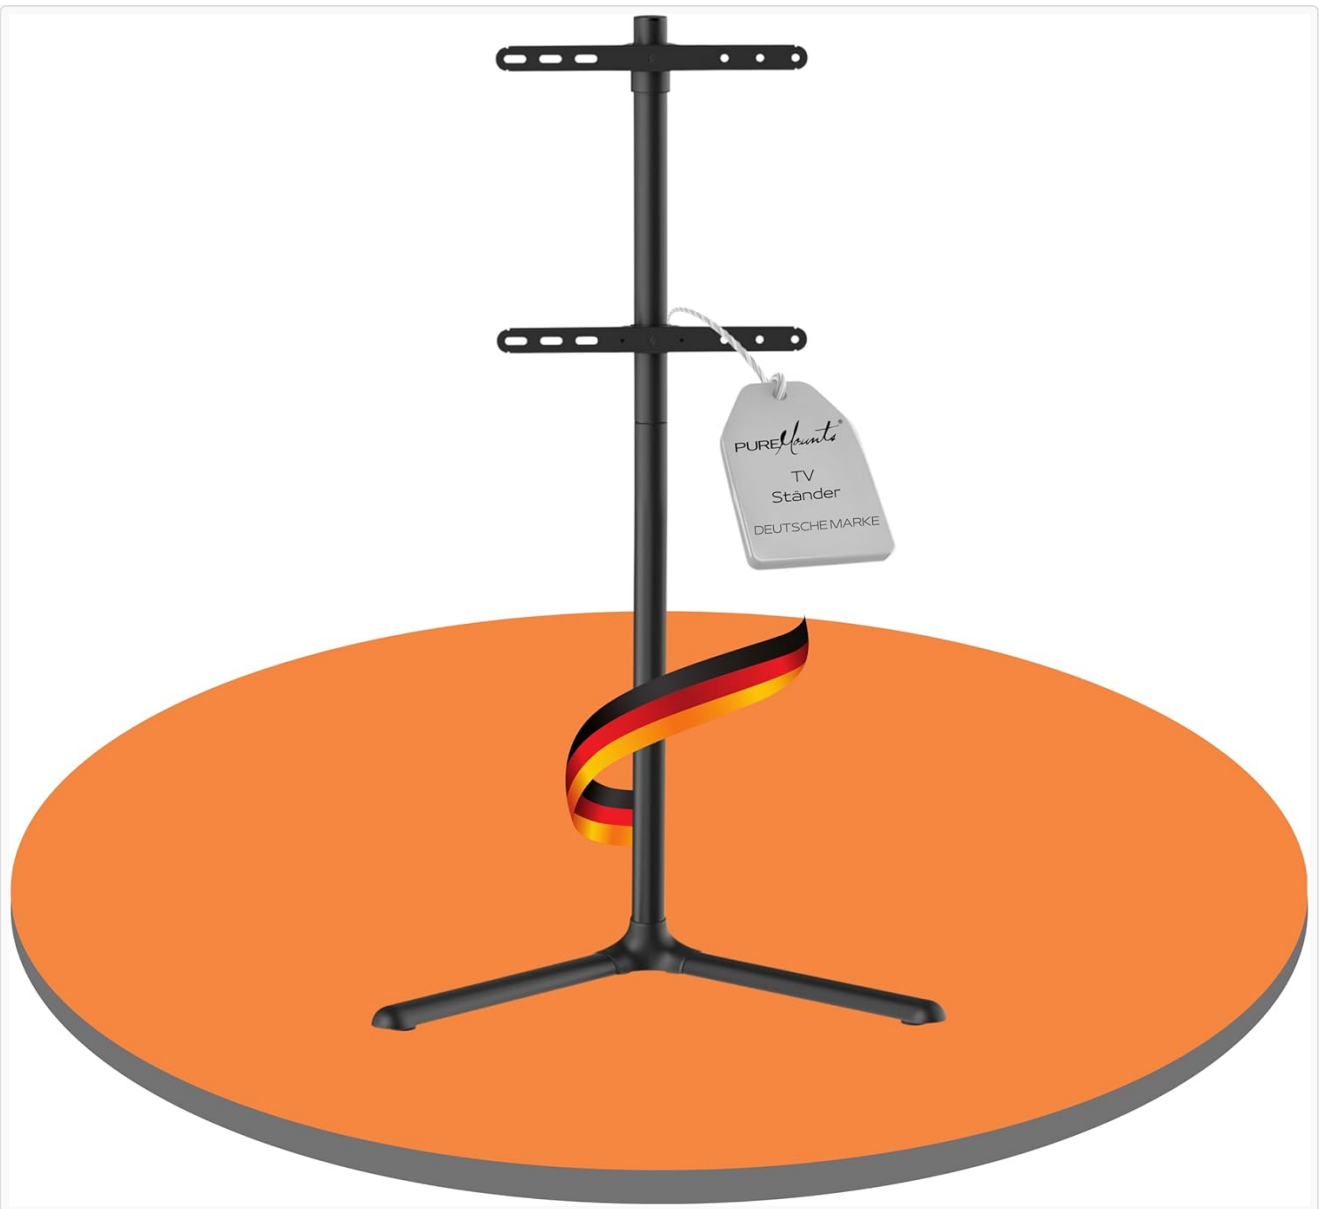

**Image 1.1:** The PureMounts PM-TVS-40 Universal Height-Adjustable TV Stand, featuring a sleek black design and a stable base.

## 2. SAFETY INFORMATION

**Important:** Failure to follow these safety instructions may result in property damage, serious injury, or death. If you do not understand these instructions, or have doubts about the safety of the installation, please contact PureMounts customer support.

- Ensure the floor surface is stable and can support the combined weight of the TV stand and your television.
- Do not exceed the maximum weight capacity of 40 kg (88 lbs).
- Do not exceed the maximum VESA compatibility of 400x400 mm.
- Always use two people for lifting and positioning heavy televisions.
- Keep all small parts and packaging materials away from children.
- Tighten all screws firmly, but do not overtighten. Overtightening can damage the screws or the stand components.
- Regularly check that the stand is securely assembled and that all fasteners are tight.

## 3. PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. If any parts are missing or damaged, do not attempt to assemble the stand. Contact PureMounts customer service for assistance.



**Image 3.1:** All components and mounting hardware included with the PureMounts PM-TVS-40 TV Stand. This includes the stand base, vertical support pole, TV mounting brackets, various screws, washers, spacers, and assembly tools.

The package typically includes:

- Stand Base
- Vertical Support Pole
- TV Mounting Brackets (2 pieces)
- Cable Management Clips
- Assorted Screws, Washers, and Spacers for TV attachment
- Assembly Tools (e.g., Allen key)
- Instruction Manual

## 4. SETUP AND INSTALLATION

Follow these steps carefully to assemble your PureMounts PM-TVS-40 TV Stand.

#### 4.1 Assemble the Base and Vertical Pole

1. Attach the vertical support pole to the stand base using the provided screws and tools. Ensure it is securely fastened.

#### 4.2 Attach TV Mounting Brackets to the TV

The stand is compatible with VESA patterns from 200x200 to 400x400 mm and supports TVs from 32 to 70 inches.



**Image 4.1:** Illustration of VESA compatibility ranging from 200x200 to 400x400 mm, suitable for various LCD, LED, OLED, QLED, Curved, and Plasma TVs. The image also highlights the robust and elegant design of the stand.

1. Identify the VESA mounting holes on the back of your television.
2. Select the appropriate screws, washers, and spacers from the provided hardware kit that fit your TV's mounting holes.
3. Attach the two TV mounting brackets to the back of your television. Ensure they are securely tightened and level.

### 4.3 Mount the TV to the Stand

1. With assistance, carefully lift your television and hook the attached mounting brackets onto the vertical support pole of the stand.
2. Secure the TV to the stand using the safety screws or locking mechanisms provided. Refer to the specific instructions in the included assembly guide for detailed steps.

### 4.4 Cable Management

The stand features an integrated cable management system to keep your cables organized and out of sight.

1. Route your TV and device cables through the designated cable management clips or channels on the back of the vertical pole.
2. Secure the cables to maintain a tidy appearance and prevent accidental disconnections.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Height Adjustment

The PureMounts PM-TVS-40 TV Stand offers four height adjustment levels (1090mm, 1040mm, 990mm, 940mm) to optimize your viewing experience.



PUREMounts®



Höhenverstellbar  
(109 / 104 / 99 /  
94 cm)



40 Kg Traglast

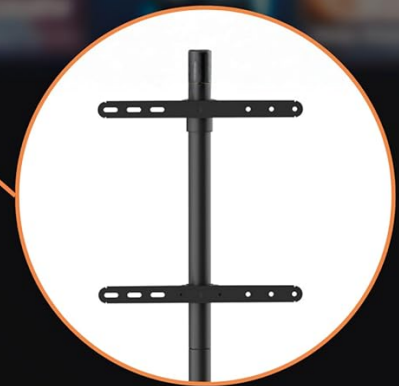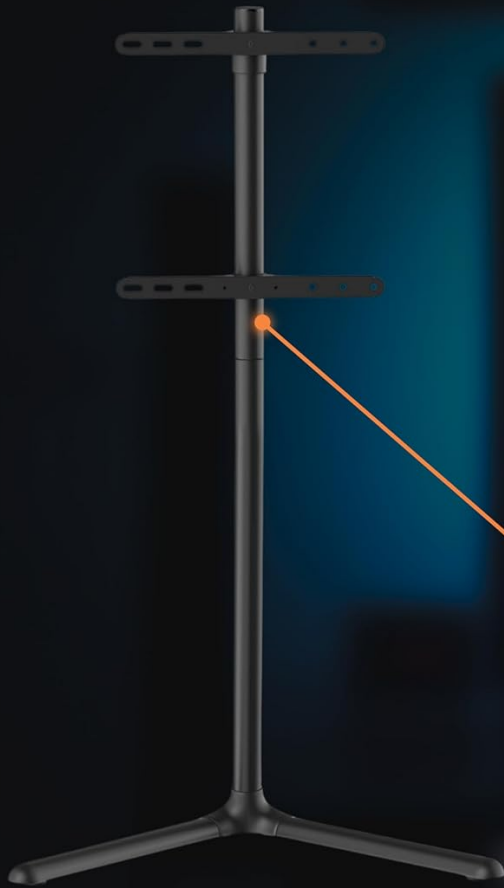

Höhen-  
verstellbar

## Optimale Anpassungsmöglichkeiten

**Image 5.1:** This image illustrates the height adjustability of the PureMounts TV stand, showing four possible height settings (109/104/99/94 cm). It also highlights the maximum load capacity of 40 kg.

1. To adjust the height, you may need to partially unmount the TV from the stand to access the adjustment points on the vertical pole.
2. Follow the specific instructions in your assembly guide for safe height adjustment. Ensure the TV is securely re-mounted at the desired height.

### 5.2 Swivel Function

The stand allows for a swivel range of +70° to -70°, enabling you to adjust the viewing angle.

1. Gently grasp the sides of your television and carefully rotate it to the desired angle.
2. Avoid forcing the TV beyond its intended swivel range.

## 6. MAINTENANCE

To ensure the longevity and optimal performance of your PureMounts PM-TVS-40 TV Stand, follow these

maintenance guidelines:

- **Cleaning:** Wipe the stand with a soft, dry cloth. For stubborn marks, a slightly damp cloth with mild soap can be used, followed by drying thoroughly. Avoid abrasive cleaners or solvents.
- **Inspection:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten if necessary, but do not overtighten.
- **Ventilation:** The open design of the stand promotes ventilation for your TV. Ensure that the area around your TV is not obstructed to maintain proper airflow.

## 7. TROUBLESHOOTING

If you encounter any issues with your PureMounts PM-TVS-40 TV Stand, refer to the following common solutions:

- **Stand feels unstable:**
  - Ensure all screws are securely tightened.
  - Verify that the TV's weight and VESA pattern are within the stand's specifications.
  - Place the stand on a flat, level, and stable surface.
- **TV is not level:**
  - Check that the TV mounting brackets are installed evenly on the back of the TV.
  - Ensure the stand's vertical pole is assembled straight.
- **Difficulty adjusting height or swivel:**
  - Ensure no cables are obstructing movement.
  - For height adjustment, ensure the TV is partially unmounted as per instructions.
  - Do not force movement; if resistance is met, re-check assembly.

If the issue persists, please contact PureMounts customer support for further assistance.

## 8. SPECIFICATIONS

Feature	Specification
Brand	PureMounts
Model Number	PM-TVS-40
Compatible TV Sizes	32 - 70 inches
Maximum Load Capacity	40 kg (88 lbs)
VESA Compatibility	200x200, 300x200, 400x200, 300x300, 400x300, 400x400 mm
Height Adjustment	4 steps (1090mm, 1040mm, 990mm, 940mm)
Swivel Range	+70° to -70°
Color	Black
Material	Plastic, Stainless Steel
Mounting Type	Floor Mount

## 9. WARRANTY AND SUPPORT

---

PureMounts products are manufactured with high-quality materials and undergo strict quality control. For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official PureMounts website.

For technical support, missing parts, or any questions regarding your PureMounts PM-TVS-40 TV Stand, please contact PureMounts customer service. Contact details can typically be found on the product packaging or the official PureMounts website.



© 2024 PureMounts. All rights reserved.