

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GOWENIC](#) /

› [GOWENIC Portable Wall Mountable CD Player User Manual \(Model: GOWENICnmgwafbvq1\)](#)

GOWENIC GOWENICnmgwafbvq1

GOWENIC Portable Wall Mountable CD Player User Manual

Model: GOWENICnmgwafbvq1

INTRODUCTION

Thank you for purchasing the GOWENIC Portable Wall Mountable CD Player. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

This versatile player combines a traditional CD player with modern connectivity options, including Bluetooth 5.0, USB playback, and an AUX input, all controllable via intuitive on-device buttons or a convenient remote control.

IMPORTANT SAFETY INFORMATION

- **Laser Safety:** This product utilizes a laser. Do not touch the laser head of the device. Improper use may result in hazardous radiation exposure. Always ensure the CD cover is closed during operation.
- **Power Supply:** Use only the specified power adapter provided with the device. Ensure the power cord is not damaged, pinched, or placed under heavy objects. Disconnect power during thunderstorms or when unused for long periods.
- **Placement:** Install the device on a stable, flat surface or wall mount it securely using the provided hardware. Avoid placing it in direct sunlight, near heat sources, in humid environments, or where it may be exposed to excessive dust or vibrations.
- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners, aerosols, or harsh chemicals, as these may damage the finish or internal components.
- **Servicing:** Do not attempt to open or repair this device yourself. Refer all servicing to qualified service personnel. Unauthorized repairs may void your warranty and pose safety risks.

PACKAGE CONTENTS

Please verify that all the following items are included in your package:

- 1 x GOWENIC Wall CD Player
- 1 x Remote Control
- 1 x Wall Mounting Bracket
- 1 x USB Power Cable
- 1 x 3.5mm Audio Cable (AUX Cable)
- 1 x User Manual
- 3 x Screws
- 3 x Nails
- 3 x Expansion Caps



Figure 1: All items included in the GOWENIC Portable CD Player package, showing the player, remote, cables, and mounting hardware.

PRODUCT OVERVIEW

The GOWENIC Portable CD Player is designed for versatile audio playback, featuring a sleek, circular

design that can be placed on a surface or mounted on a wall.

Key Components:

- **CD Compartment:** Located at the front, protected by a cover.
- **Control Buttons:** Intuitive buttons for playback, volume, and mode selection.
- **Pull Cord Switch:** For convenient power on/off.
- **USB Port:** For playing audio files from a USB flash drive.
- **Headphone Jack:** For private listening.
- **AUX Input:** For connecting external audio sources.
- **DC Input:** For power connection.



Figure 2: Front view of the GOWENIC CD Player, highlighting the CD compartment and safety warnings regarding the laser head.

Multi Functional Ports

This CD music player comes with multiple ports, including USB and headphone jacks, allowing for real time music playback. It also supports timer switch. It is an ideal present for kids, elders, parents and friends etc.



Figure 3: Detail of the multi-functional ports on the CD player, including the USB port and headphone jack.

SETUP INSTRUCTIONS

1. Wall Mounting (Optional):

1. Select a suitable, sturdy location on a wall, ensuring it is free from moisture and direct heat.
2. Use the provided wall mounting bracket as a template to mark the drilling points.
3. Drill holes, insert the expansion caps, and secure the bracket to the wall using the screws and nails.
4. Carefully attach the GOWENIC CD Player to the mounted bracket.

Wall Mountable CD Player



Figure 4: The GOWENIC CD Player displayed as wall-mounted, showcasing its design and space-saving capability.

2. Power Connection:

1. Connect the USB power cable to the DC input port on the back of the CD player.
2. Plug the other end of the USB power cable into a compatible USB power adapter (not always included, check package contents) and then into a standard electrical outlet.

3. Initial Power On:

Before first use, ensure the protective card covering the laser head is removed. Gently pull the power cord downwards to turn on the device. Pulling the cord again will switch off the device.

You can turn on the device and start playing by pulling the power cord.

Pulling the cord again will switch off the device.



Figure 5: Visual guide demonstrating how to remove the protective card from the CD player's laser head and how to use the pull cord switch for power.

OPERATING INSTRUCTIONS

1. Basic Operation:

- **Power On/Off:** Pull the power cord downwards to toggle the device on or off.
- **Volume Control:** Use the dedicated volume buttons on the device or the remote control to adjust the sound level.
- **Mode Selection:** Press the 'MODE' button on the device or remote to cycle through available modes: CD, Bluetooth (BT), USB, and AUX.

Intuitive Button Design

The portable CD player is equipped with simple and ergonomic buttons for easy operating and a clear interface. It also comes with a remote control for more convenience.



Figure 6: Detail of the intuitive button layout on the GOWENIC CD Player for easy control of playback and settings.

2. Playing CDs:

1. Gently open the CD compartment cover.
2. Place a compatible CD (CD, CD-R, CD-RW, MP3, WMA format) onto the central spindle, ensuring it is seated flat and securely.
3. Close the CD compartment cover. The player will automatically detect the disc and begin playback.
4. Use the 'Play/Pause', 'Next Track', and 'Previous Track' buttons on the device or remote control to manage playback.

3. Bluetooth Mode:

1. Press the 'MODE' button until "BT" or "Bluetooth" is displayed (if applicable) or indicated by a light. The device will enter pairing mode.
2. On your mobile phone, tablet, or other Bluetooth-enabled device, navigate to Bluetooth settings and search for available devices. Select "GOWENIC CD Player" (or a similar name) to initiate pairing.
3. Once successfully paired, you can stream audio wirelessly from your Bluetooth device to the CD player.

4. USB Playback:

1. Insert a USB flash drive containing MP3 or WMA audio files into the USB port.
2. Press the 'MODE' button until "USB" mode is selected.
3. The player will automatically detect and begin playing audio files from the USB drive. Use playback

controls to navigate tracks.

5. AUX Input:

1. Connect an external audio device (e.g., smartphone, MP3 player) to the AUX input port on the CD player using the provided 3.5mm audio cable.
2. Press the 'MODE' button until "AUX" mode is selected.
3. Audio from the connected device will now play through the CD player's speakers. Control playback from your external device.

6. Remote Control:

The included remote control provides full functionality from a distance. Ensure two AAA batteries (not included) are installed correctly according to the polarity markings inside the battery compartment. The remote allows for power on/off, mode selection, volume adjustment, track navigation, and timer settings.

MAINTENANCE AND CARE

- **Cleaning the Unit:** Regularly wipe the exterior of the CD player with a soft, dry, lint-free cloth to remove dust. Avoid using abrasive materials or chemical cleaners.
- **Cleaning the Laser Lens:** If you experience consistent CD playback issues (e.g., skipping, reading errors), a specialized CD lens cleaner disc can be used. Do not attempt to clean the laser lens manually with cotton swabs or other objects, as this can cause damage.
- **CD Handling:** Always handle CDs by their edges to avoid touching the playing surface. Store CDs in their original cases or protective sleeves to prevent scratches, dust accumulation, and warping.
- **Storage:** When the CD player is not in use for extended periods, disconnect the power adapter from the wall outlet. Store the unit in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter any issues with your GOWENIC CD Player, please consult the following table before contacting customer support.

Problem	Possible Cause	Solution
No power / Unit does not turn on	Power cord not securely connected; power outlet not functioning; protective card still covering laser head.	Ensure the power cord is firmly plugged into both the player and the wall outlet. Test the outlet with another device. Verify the protective card has been removed from the laser head. Pull the power cord to initiate power.
CD not playing or skipping tracks	CD is dirty, scratched, or damaged; CD inserted incorrectly; unsupported CD format; laser lens is dirty.	Clean the CD with a soft, lint-free cloth. Reinsert the CD correctly, ensuring it is flat on the spindle. Confirm the CD format is supported (CD, CD-R, CD-RW, MP3, WMA). Use a CD lens cleaner disc.

Problem	Possible Cause	Solution
Bluetooth device cannot connect	Player not in Bluetooth mode; Bluetooth device is out of range; device already paired with another unit; Bluetooth interference.	Switch the CD player to Bluetooth mode. Ensure your Bluetooth device is within 10 meters (33 feet) of the player. Disconnect your device from any other active Bluetooth connections. Try restarting both the player and your Bluetooth device.
No sound output	Volume is too low or muted; incorrect mode selected; headphones are connected; audio cable (AUX) is loose or faulty.	Increase the volume level on both the player and the connected source device. Ensure the correct playback mode (CD, BT, USB, AUX) is selected. Disconnect headphones if sound is desired from the built-in speakers. Check AUX cable connections.
Remote control is unresponsive	Batteries are dead or inserted incorrectly; obstruction between remote and player; remote sensor is blocked.	Replace the remote control batteries (2x AAA), ensuring correct polarity. Remove any objects obstructing the line of sight between the remote and the player's sensor. Ensure the remote is pointed directly at the player.

SPECIFICATIONS

Feature	Detail
Model Number	GOWENICnmgwafbvq1
Brand	GOWENIC
Connectivity	Bluetooth 5.0, USB, 3.5mm Headphone Jack, 3.5mm AUX Input
Supported CD Formats	CD, CD-R, CD-RW, MP3, WMA
Control Methods	On-device buttons, Infrared Remote Control, Pull Cord Switch
Special Features	Wall Mountable Design, Timer Switch Functionality
Item Weight	Approximately 1.87 pounds (0.85 kg)
Package Dimensions	Approximately 9.45 x 8.66 x 3.15 inches (24 x 22 x 8 cm)
Power Input	DC 5V (via USB power cable)

WARRANTY AND CUSTOMER SUPPORT

GOWENIC products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty card or documentation included with your purchase. In most regions, a standard manufacturer's warranty covers defects in materials and workmanship from the date of purchase.

If you require technical assistance, have questions about product operation, or need to report a defect, please contact GOWENIC customer service through the retailer where you purchased the product. You may also find additional support and product information by visiting the official GOWENIC store on Amazon:

[**Visit the GOWENIC Amazon Store**](#)

Please have your model number (GOWENICnmgwafbvq1) and proof of purchase ready when contacting support.