Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Wacom /
- Wacom Intuos Pro Small Bluetooth Professional Graphic Drawing Tablet with Pro Pen 3 User Manual (Model PTK470K0A)

Wacom PTK470K0A

Wacom Intuos Pro Small Bluetooth Professional Graphic Drawing Tablet

MODEL: PTK470K0A - USER MANUAL

1. Introduction

This manual provides essential instructions for setting up, operating, and maintaining your Wacom Intuos Pro Small Bluetooth Professional Graphic Drawing Tablet with Pro Pen 3. Please read this guide thoroughly to ensure optimal performance and longevity of your device.



Image: The Wacom Intuos Pro Small tablet with the Pro Pen 3 resting on its surface, showcasing its compact design.

2. What's in the Box

Verify that all components are present in your package:

- Wacom Intuos Pro Small Tablet
- Wacom Pro Pen 3
- · Pen stand with replacement nibs
- USB-C to USB-A charging/connection cable
- . USB-A to USB-C adapter
- · Quick Start Guide & Regulation Sheet

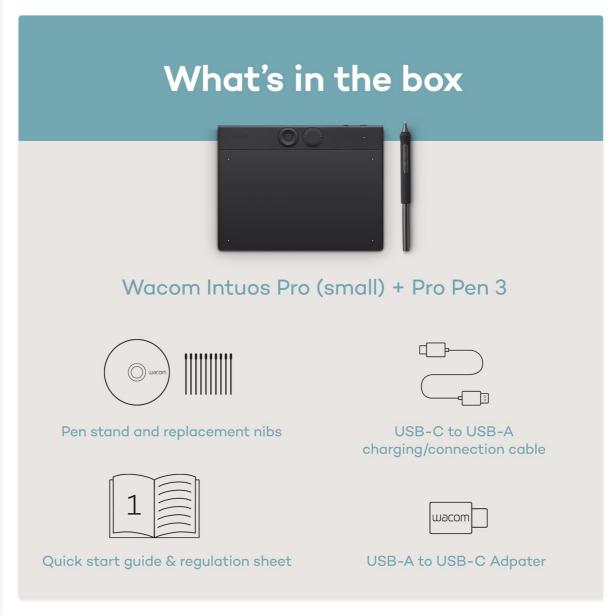


Image: A visual representation of the Wacom Intuos Pro Small tablet, Pro Pen 3, pen stand, replacement nibs, USB cables, and documentation included in the product packaging.

3. Setup

3.1. Connecting the Tablet

Your Wacom Intuos Pro Small offers both wired and wireless connectivity options.


Wired Connection:

- 1. Connect the USB-C end of the provided cable to the tablet's USB-C port.
- 2. Connect the USB-A end of the cable to an available USB port on your computer. If your computer only has USB-C ports, use the included USB-A to USB-C adapter.

Bluetooth Connection:

The tablet supports Bluetooth 5.3 Low Energy for wireless operation.

- 1. Ensure your computer's Bluetooth is enabled.
- 2. On the tablet, slide the USB/Bluetooth selector switch to one of the Bluetooth positions (BT1 or BT2).
- 3. Press and hold the power button on the tablet until the Bluetooth indicator light begins to flash, indicating pairing mode.
- 4. On your computer, navigate to Bluetooth settings and select the Wacom Intuos Pro Small from the list of available devices to pair.

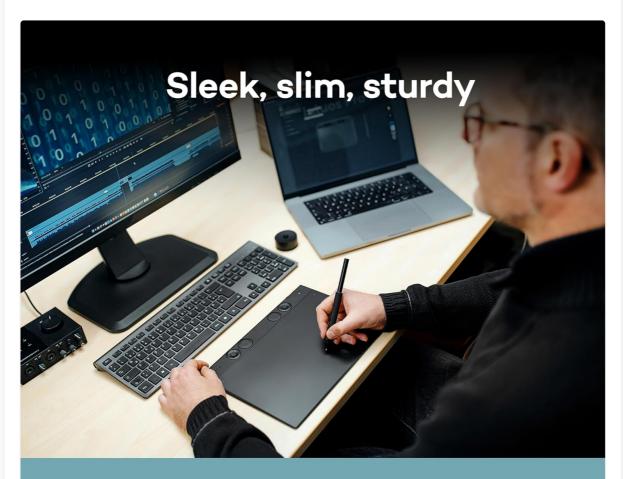

Combining a 16:9 drawing area with a thin yet rugged design, Intuos Pro is perfect for multiple monitors, at the office or on the go

Image: A close-up diagram illustrating the USB/Bluetooth selector switch and indicator lights on the Wacom Intuos Pro Small tablet, showing options for USB, BT1, and BT2 connections.

3.2. Driver Installation

- 1. Visit the official Wacom website (wacom.com/start/intuospro) to download the latest drivers for your operating system (Windows or macOS).
- 2. Follow the on-screen instructions to install the drivers. A restart of your computer may be required.
- 3. Once installed, the Wacom Desktop Center application will allow you to customize tablet and pen settings.



Image: A top-down view of the Wacom Intuos Pro Small tablet with the Pro Pen 3, illustrating its sleek design and the placement of ExpressKeys and the Dial.

4. Operating the Tablet

4.1. Using the Pro Pen 3

The Wacom Pro Pen 3 offers 8192 levels of pressure sensitivity and tilt recognition for precise control.

- Holding the Pen: Hold the pen as you would a traditional drawing tool. The pen tip acts as your cursor.
- Pen Buttons: The Pro Pen 3 features three customizable buttons. By default, these buttons
 perform functions such as right-click, scroll, or modifier keys. Customize their functions in the
 Wacom Desktop Center.
- **Customization:** The Pro Pen 3 allows for physical customization with different grips and weight balances to suit your preference. Refer to the Quick Start Guide for instructions on changing pen components.

Precision meets customization



Image: An exploded view of the Wacom Pro Pen 3, showing its internal components, different grip options, and weight balance accessories for personalized comfort and control.

4.2. ExpressKeys and Dial

The tablet features 5 customizable ExpressKeys and a Dial for quick access to frequently used functions and shortcuts.

- ExpressKeys: Assign specific keyboard shortcuts, mouse clicks, or application-specific functions to each ExpressKey via the Wacom Desktop Center.
- **Dial:** The Dial can be configured for various functions such as zooming, scrolling, brush size adjustment, or layer navigation. Cycle through different Dial modes using the center button.

Boost your performance

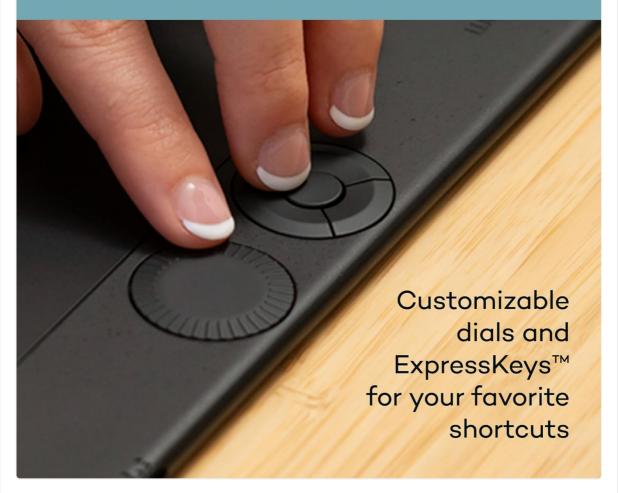


Image: A close-up of a hand interacting with the customizable ExpressKeys and the Dial on the Wacom Intuos Pro Small tablet, highlighting their ergonomic placement.

4.3. Battery Information

The tablet is equipped with a 1200mAh battery, providing up to 16 hours of use. Charging times are approximately 3.5 hours for a normal charge and 2 hours for rapid charging via a DC 5V input.



Used by creative pros for illustration, photo & video editing, motion graphics, 3D modeling, design and more!

Image: A person using the Wacom Intuos Pro Small tablet connected to a laptop, demonstrating its use in a creative workflow.

5. Maintenance

5.1. Cleaning the Tablet and Pen

- Use a soft, lint-free cloth slightly dampened with water or a mild, non-abrasive cleaner.
- Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the surface.
- Ensure the tablet and pen are completely dry before use.

5.2. Replacing Pen Nibs

The pen stand contains replacement nibs and a nib removal tool.

- 1. Gently pull the worn nib straight out of the pen using the nib removal tool.
- 2. Insert a new nib firmly into the pen until it clicks into place.

6. Troubleshooting

If you encounter issues with your Wacom Intuos Pro Small, try the following steps:

• No Pen Response:

- Ensure the tablet is powered on and connected (USB or Bluetooth).
- Check if the pen nib is properly inserted.
- Verify that the Wacom drivers are installed and up to date.
- · Restart your computer.

• Bluetooth Connectivity Issues:

- Ensure the tablet's Bluetooth selector is in the correct position (BT1 or BT2).
- Remove the tablet from your computer's Bluetooth device list and re-pair it.
- Try connecting via USB to confirm the tablet is functional.

• ExpressKeys/Dial Not Working:

- Open the Wacom Desktop Center and check the customization settings.
- Ensure the drivers are correctly installed.

For further assistance, visit the Wacom support website or contact customer service.

7. Specifications

Feature	Detail
Product Dimensions	8.46 x 6.42 x 0.04 inches
Item Weight	8.5 ounces (240 Grams)
Item Model Number	PTK470K0A
Pen Technology	Wacom Pro Pen 3
Pressure Levels	8192
Resolution	5080 lpi
Connectivity	USB Type-C, Bluetooth 5.3 Low Energy
Battery Type	1 Nonstandard Battery (included)
Battery Capacity	1200mAh
Battery Life	Up to 16 hours
Charging Time	3.5 hours (normal), 2 hours (rapid)
Operating System Compatibility	Windows, macOS

8. Warranty and Support

For detailed warranty information, please refer to the documentation included with your product or visit the official Wacom website. Wacom provides technical support and resources to assist with any product-related inquiries.

Wacom Support: https://www.wacom.com/support

© 2025 Wacom. All rights reserved.

Related Documents - PTK470K0A



 
Wacom MovinkPad 11: Your All-in-One Creative Android Tablet

Explore the Wacom MovinkPad 11, a compact, portable Android tablet designed for artists. Discover its natural pen feel, optimized display, and professional features for digital creation.

Control of the Contro

Wacom Intuos Pro Pen Tablet (PTH-660/PTH-860) Specifications and Features

Detailed specifications and features for the Wacom Intuos Pro Pen Tablet, including model numbers PTH-660 and PTH-860, dimensions, pen technology, system requirements, and included accessories.

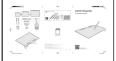

Wacom Intuos Pro Quick Start Guide

Concise guide to setting up and using your Wacom Intuos Pro pen tablet, covering connections, software installation, and pen maintenance.

Against an entre de la contra del la contra del

<u>Графический планшет Wacom Intuos Pro Paper Edition (Medium) - Руководство пользователя</u> Подробное описание графического планшета Wacom Intuos Pro Paper Edition (Medium) PTH-660P-R, PTH-660-R, его функций, комплектации, особенностей использования и обслуживания.



Bamboo (CTH-470, CTH-670, CTL-470)

Wacom Bamboo (CTH-470, CTH-670) Bamboo Pen (CTL-470) , ,

Wacom DTK168 Pen Display: Important Product Information, Warranty, and Safety

Essential product information, warranty terms, and safety guidelines for the Wacom DTK168 Pen Display. Learn about product care, potential hazards, and regulatory compliance.

Documents - Wacom - PTK470K0A



[pdf] Decleration of Conformity Label

PTK470 0 support wacom asia sites default files certificates |||

Declaration of the Presence Condition of the Restricted Substances Marking No. Certificate NoApplication No. Picture Product Label and Commodity Inspection Mark. Sample and its location / Creative Pen Tablet PTK470, Equipment name Type designation Type **PTK470K0A**,PTK470K0B,PTK470K0C,PTK...

lang:en score:18 filesize: 129.35 K page_count: 1 document date: 2024-09-04