

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Wacom](#) /

› [Wacom Intuos Pro Medium User Manual](#)

Wacom PTK670K0A

Wacom Intuos Pro Medium User Manual

Model: PTK670K0A

INTRODUCTION

This manual provides comprehensive instructions for setting up, operating, and maintaining your Wacom Intuos Pro Medium Bluetooth Professional Graphic Drawing Tablet. Designed for creative professionals, this 2025 Edition tablet offers advanced features for digital art, photo editing, and design.

For optimal performance, please read this manual thoroughly before using your device.

WHAT'S IN THE BOX

Upon unboxing your Wacom Intuos Pro Medium, ensure all the following components are present:

- Wacom Intuos Pro Medium tablet
- Wacom Pro Pen 3
- Pen stand with replacement nibs
- USB-C to USB-A charging/connection cable
- USB-A to USB-C Adapter
- Quick start guide & regulation sheet


What's in the box



Wacom Intuos Pro (medium) + Pro Pen 3



Pen stand and replacement nibs

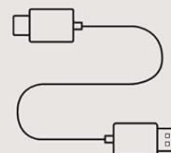

USB-C to USB-A
charging/connection cable



Quick start guide & regulation sheet



USB-A to USB-C Adapter

Image: All items included in the Wacom Intuos Pro Medium package, laid out clearly.

KEY FEATURES

The Wacom Intuos Pro Medium offers a range of features designed to enhance your creative workflow:

- **Wacom Pro Pen 3:** Experience unparalleled precision with 8192 pressure levels and $\pm 60^\circ$ tilt recognition. The pen is customizable with different grips and weight balance for personalized comfort.
- **Versatile Connectivity:** Connect seamlessly via Bluetooth 5.3 for wireless freedom or USB-C for a stable wired connection.
- **Ultra-Slim and Durable Design:** Featuring an ultra-slim profile (4-7 mm thickness) and a durable magnesium build, the tablet is both portable and robust.
- **Extended Battery Life:** Enjoy up to 16 hours of continuous use on a single charge, ensuring long creative sessions without interruption.
- **Customizable Controls:** Utilize the customizable dials and ExpressKeys™ for quick access to your favorite shortcuts, streamlining your workflow.

Precision meets customization

Pro Pen 3:
Wacom's
finest pen
technology

3 buttons for
maximum
productivity
and control



Configure
with different
grips and
weight balance

Image: Detailed view of the Wacom Pro Pen 3, illustrating its modular design with interchangeable grips and internal weights for user customization.

Boost your performance



Image: A close-up of a hand interacting with the customizable dials and ExpressKeys on the Wacom Intuos Pro tablet, designed for quick shortcuts.

SETUP

Follow these steps to set up your Wacom Intuos Pro Medium tablet:

1. **Unpack the Device:** Carefully remove all components from the packaging.
2. **Connect to Power:** Connect the USB-C to USB-A cable to the tablet and a power source (e.g., computer USB port or wall adapter). Ensure the tablet is charged before first use.
3. **Install Drivers:** Visit the official Wacom website (wacom.com/start/intuospro) to download and install the latest drivers for your operating system (Mac or Windows). Restart your computer after installation if prompted.
4. **Choose Connection Method:**
 - **USB Connection:** Keep the USB-C cable connected to your computer.
 - **Bluetooth Connection:**

- a. Ensure your computer's Bluetooth is enabled.
- b. On the tablet, slide the USB/Bluetooth selector switch to one of the Bluetooth positions (BT1 or BT2).
- c. Follow the pairing instructions provided in your operating system's Bluetooth settings.

5. **Customize Settings:** Open the Wacom Desktop Center application (installed with the drivers) to customize pen settings, ExpressKeys, and Touch Ring functions to suit your preferences.



Easily switch between USB & Bluetooth connections with smooth, reliable performance

[See Quick Start Guide for instructions on pairing and use]

Image: An illustration detailing the USB and dual Bluetooth connectivity options available on the Wacom Intuos Pro tablet, allowing seamless switching between devices.

OPERATING INSTRUCTIONS

The Wacom Intuos Pro Medium is designed for intuitive use. Here are basic operating guidelines:

- **Using the Pro Pen 3:** Hold the pen like a regular pencil. The pen tip acts as your mouse cursor. Pressing the pen tip to the tablet surface registers a click.
- **Pen Buttons:** The buttons on the side of the Pro Pen 3 can be customized for various functions (e.g., right-click,

scroll, undo). Configure these in the Wacom Desktop Center.

- **ExpressKeys™:** The physical buttons located on the tablet's top edge (or side, depending on orientation) are programmable shortcuts. Assign frequently used commands or keystrokes to these keys for efficiency.
- **Touch Ring/Dials:** The circular dials provide quick control over functions like brush size, zoom, or canvas rotation. Rotate the dial to adjust, and press the center button to cycle through assigned functions.
- **Working Area:** The active drawing area of the tablet corresponds to your monitor screen. Movement on the tablet translates directly to cursor movement on the screen.



Image: A user demonstrating the Wacom Intuos Pro tablet in action, performing image editing tasks on a dual-monitor setup, showcasing its integration into a professional workflow.

Your browser does not support the video tag.

Video: An official Wacom video demonstrating image editing techniques using the Intuos Pro tablet, highlighting its precision and efficiency for digital artists and retouchers.

MAINTENANCE

Proper care and maintenance will extend the life of your Wacom Intuos Pro Medium:

- **Cleaning:** Use a soft, lint-free cloth to gently wipe the tablet surface and pen. For stubborn marks, slightly dampen the cloth with water. Avoid harsh chemicals or abrasive materials.
- **Nibs Replacement:** The Pro Pen 3 nibs will wear down over time. Replace them when they become too short or sharp to maintain optimal drawing feel. Spare nibs are stored in the pen stand.

- **Storage:** When not in use, store the tablet and pen in a safe place to prevent scratches or damage. Consider a protective sleeve for travel.
- **Battery Care:** For optimal battery longevity, avoid fully discharging the tablet frequently. Charge it regularly, especially if storing for extended periods.

TROUBLESHOOTING

If you encounter issues with your Wacom Intuos Pro Medium, try the following solutions:

Problem	Possible Solution
Pen is not responding.	<p>Ensure the tablet is powered on and connected (USB or Bluetooth).</p> <p>Check if the pen nib is properly inserted.</p> <p>Reinstall the Wacom drivers.</p> <p>Test the pen on another compatible device if possible.</p>
Bluetooth connectivity issues.	<p>Ensure the tablet's Bluetooth switch is in the correct position (BT1 or BT2).</p> <p>Remove the tablet from your computer's Bluetooth device list and re-pair.</p> <p>Try connecting via USB to confirm tablet functionality.</p> <p>Update your computer's Bluetooth drivers.</p>
Tablet not recognized by software.	<p>Verify that Wacom drivers are correctly installed and up-to-date.</p> <p>Restart your computer and the application.</p> <p>Check for software compatibility with your operating system and Wacom drivers.</p>
ExpressKeys or Dials not working.	<p>Open Wacom Desktop Center and ensure the keys/dials are properly assigned.</p> <p>Reset settings to default in the Wacom Desktop Center and reconfigure.</p>

SPECIFICATIONS

Feature	Detail
Product Dimensions	11.46 x 8.11 x 0.04 inches
Item Weight	14.6 ounces
Model Number	PTK670K0A
Batteries	1 Lithium Polymer battery (included)
Connectivity Technology	Bluetooth 5.3, USB-C
Pressure Sensitivity	8192 Levels
Tilt Recognition	±60°
Operating System Compatibility	Windows, Mac
Special Feature	Ergonomic, Ultra-slim profile (4-7 mm)
Manufacturer	Wacom Technology Co

WARRANTY & SUPPORT

Wacom products are designed for reliability and performance. For detailed warranty information specific to your region, please refer to the regulation sheet included in your product packaging or visit the official Wacom support website. For technical assistance, driver downloads, FAQs, and community forums, please visit the Wacom Support page:

[Wacom Support Website](#)

Additionally, consider available protection plans for extended coverage, such as the 2-Year or 4-Year Protection Plans, or the Complete Protect plan for comprehensive coverage, as offered by various retailers.

© 2025 Wacom Technology Co. All rights reserved.

Wacom and Intuos Pro are trademarks or registered trademarks of Wacom Co., Ltd.