

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Cutting Edge](#) /
- › [Cutting Edge CXR1-1002 Rotary Shaver Instruction Manual](#)

## Cutting Edge CXR1-1002

# Cutting Edge CXR1-1002 Rotary Shaver

Instruction Manual

Model: CXR1-1002 | Brand: Cutting Edge

## 1. SAFETY INFORMATION

**Caution:** This product may cause cuts or skin irritation. Always use with care. Avoid using near water or while charging. Clean after each use to prevent bacterial growth.

Read all instructions before using this appliance to ensure safe and effective operation. Keep this manual for future reference.

## 2. PRODUCT OVERVIEW

The Cutting Edge Rotary Shaver is engineered for efficiency, precision, and comfort in your grooming routine. Featuring durable stainless steel blades, this electric shaver provides a close and smooth shave with minimal irritation. Its cordless design and long-lasting battery offer convenience for both home and travel use.

- **Stainless Steel Blades:** Precision-engineered for a close, smooth shave with minimal irritation.
- **Rechargeable & Cordless:** Offers up to 1 hour of run-time on a full 2-hour charge for ultimate flexibility.
- **Ergonomic Design:** Fits comfortably in hand for superior control and maneuverability.
- **Pivoting Head:** Adapts to facial contours for a thorough shave.

## 3. PACKAGE CONTENTS

- Cutting Edge Rotary Shaver (Model CXR1-1002)
- Charging Cable
- Protective Cap
- Cleaning Brush
- Instruction Manual

## 4. SETUP

## 4.1 Initial Charge

Before first use, fully charge the shaver for 2 hours. A full charge provides approximately 1 hour of cordless run-time. The shaver may arrive with a partial charge, but a full initial charge is recommended for optimal battery life.



Image: The Cutting Edge Rotary Shaver, blue and black, showing the three rotary heads and power button.

## 4.2 Charging the Shaver

1. Ensure the shaver is turned off.
2. Connect the charging cable to the shaver's charging port.
3. Plug the USB end of the charging cable into a compatible USB power adapter (not included) or a USB port.
4. The charging indicator will illuminate, typically showing battery progress.
5. Once fully charged, disconnect the shaver from the power source.

Video: A demonstration of connecting the charging cable to the electric razor and plugging it into a power outlet, showing the charging indicator.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Basic Shaving

The Cutting Edge Rotary Shaver can be used for both wet and dry shaving. For best results, ensure your skin is clean.

1. Press the power button to turn on the shaver.
2. Gently press the shaver head against your skin. Move the shaver in small, circular motions over your face and neck.
3. For a closer shave, stretch your skin slightly with your free hand.
4. After shaving, press the power button to turn off the shaver.

Video: A user performing a real shave test with an electric rotary shaver, demonstrating its effectiveness on facial hair.

### 5.2 Using the Pop-up Trimmer

The integrated pop-up trimmer is ideal for shaping sideburns, mustaches, and beards.

1. With the shaver turned on, slide the trimmer release button (usually located on the back of the shaver) upwards to activate the pop-up trimmer.
2. Use the trimmer to precisely shape and trim your facial hair.
3. Once finished, slide the trimmer release button downwards to retract the trimmer.

## 6. MAINTENANCE

---

### 6.1 Cleaning the Shaver

Regular cleaning ensures optimal performance and hygiene. The shaver head is washable under running water.

1. Turn off the shaver and remove the protective cap.
2. Press the release button to open the shaver head assembly.
3. Rinse the shaver head thoroughly under warm running water to remove hair clippings and shaving cream residue.
4. Use the provided cleaning brush to remove any stubborn debris from the blades and inner chamber.
5. Allow the shaver head to air dry completely before closing the assembly and replacing the protective cap.

Video: A demonstration of opening the shaver head and rinsing it under running water for cleaning.

## 7. TROUBLESHOOTING

- **Shaver not turning on:** Ensure the shaver is fully charged. Check the charging cable and adapter for damage.
- **Poor shaving performance:** Clean the shaver head thoroughly. If performance does not improve, the blades may need replacement.
- **Skin irritation:** Ensure blades are clean and sharp. Use a gentle shaving cream for wet shaving. Allow your skin to adjust to the new shaver over a few weeks.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	CXR1-1002
Power Source	Battery Powered
Charge Time	2 hours for full charge
Run-Time	Up to 1 hour (cordless)
Special Features	Cordless, High Efficiency, Lightweight, Pivoting Head, Rechargeable
Recommended Use	Face
Dimensions	8 x 5.5 x 2 inches
Weight	11.2 ounces

## 9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Cutting Edge customer service directly. Keep your proof of purchase for any warranty claims.