

Pure Silk CPS1-7021

Pure Silk Body Hair Shaver (Model: CPS1-7021) Instruction Manual

INTRODUCTION

Thank you for choosing the Pure Silk Body Hair Shaver for Women. This versatile and efficient grooming tool is designed to provide smooth, hair-free skin for both your face and body. Equipped with dual-sided blades, it offers a close and precise shave, minimizing nicks, burns, and irritation. This manual provides essential information on how to set up, operate, and maintain your shaver for optimal performance and longevity.

PRODUCT FEATURES

- **Dual-Sided Blades:** Precision-engineered blades for efficient and smooth hair removal on both face and body, ideal for delicate areas like the bikini line and larger body areas.
- **Gentle and Irritation-Free:** Hypoallergenic blades glide smoothly over skin, reducing discomfort, nicks, burns, and irritation, suitable for sensitive skin.
- **Versatile Grooming:** Adaptable design for removing facial hair, trimming the bikini line, or shaving larger body areas.
- **Battery-Powered Convenience:** Operates on 2 AAA batteries (not included) for cordless use at home or while traveling, eliminating the need for charging.
- **Compact and Ergonomic Design:** Lightweight and comfortable to hold, providing excellent control and precision for maneuvering around curves and contours.

SAFETY INFORMATION

Please read and understand all safety instructions before using the Pure Silk Body Hair Shaver. Failure to follow these instructions may result in injury or damage to the product.

- Always use the shaver with caution to avoid injury.
- Keep the shaver clean and dry to prevent bacterial growth.

- Do not use the shaver near water or while charging to avoid electrical hazards.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep out of reach of children.

SETUP: BATTERY INSTALLATION

Your Pure Silk Body Hair Shaver requires 2 AAA batteries (not included) for operation.

1. Ensure the shaver is in the "OFF" position.
2. Gently twist the bottom cap of the shaver counter-clockwise to open the battery compartment.
3. Insert two fresh AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Replace the bottom cap by twisting it clockwise until it is securely closed.



This image shows the front of the Pure Silk Body Hair Shaver, highlighting the power button and the dual-sided blade head. The battery compartment is located at the bottom of the handle.

OPERATING INSTRUCTIONS

Turning On/Off

- To turn on the shaver, press the power button located on the front of the handle.
- To turn off the shaver, press the power button again.

Shaving Technique

For best results, ensure your skin is clean and dry before shaving. While the shaver is designed for gentle use, applying a small amount of baby oil or a pre-shave oil can further enhance glide and comfort.

1. Hold the shaver at a slight angle against your skin.
2. Gently glide the shaver against the direction of hair growth for a closer shave. For sensitive areas or if you experience any discomfort, shave with the direction of hair growth.
3. Use short, light strokes. Avoid pressing too hard, as this can cause irritation.
4. For facial hair, use extra care and stretch the skin taut to ensure a smooth surface.
5. For bikini areas, trim longer hairs first if necessary, then use the shaver for a smooth finish.
6. After shaving, turn off the shaver and clean the blade head as described in the Maintenance section.





An angled view of the Pure Silk Body Hair Shaver, providing a closer look at the dual-sided blade design and ergonomic handle, illustrating how to hold the shaver during use.

MAINTENANCE

Cleaning the Shaver

Regular cleaning ensures optimal performance and hygiene.

1. After each use, turn off the shaver.
2. Gently remove the blade head.
3. Tap out any loose hairs. You may use a small brush (not included) to remove stubborn hairs from the blades.
4. Rinse the blade head under running water. Ensure no water enters the main body of the shaver.
5. Allow the blade head to air dry completely before reattaching it to the shaver body.

Storage

- Store the shaver in a cool, dry place away from direct sunlight and moisture.
- Ensure the shaver is clean and dry before storing.
- If storing for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Shaver Not Turning On:

Check if the batteries are inserted correctly with the correct polarity (+/-). Ensure the batteries are fresh and not depleted. Replace with new AAA batteries if necessary.

Poor Shaving Performance / Pulling Hairs:

The blades may be clogged with hair. Clean the blade head thoroughly as described in the Maintenance section. If the issue persists, the batteries may be low and need replacement.

Skin Irritation:

Ensure you are not pressing too hard on the skin. Try shaving with the direction of hair growth. Make sure your skin is clean and dry before use. If irritation continues, discontinue use.

SPECIFICATIONS

Model Name:

Pure Silk CPS1-7021

Power Source:

Battery Powered (2 x AAA batteries, not included)

Special Feature:

Cordless

Recommended Uses:

Face, Body, Genital, Pubic

Brand:

Pure Silk

Item Model Number:

CPS1-7021-WHT

Package Dimensions:

8.5 x 5.3 x 1.5 inches

Item Weight:

6.4 ounces

WARRANTY AND SUPPORT

For information regarding warranty coverage or product support, please refer to the packaging or contact Pure Silk customer service directly. Keep your purchase receipt as proof of purchase.

Manufacturer: Pure Silk