

## Coby CD202BK

# Coby Portable CD Player with Bluetooth & Wireless Earbuds (Model CD202BK) Instruction Manual

[Introduction](#)   [What's in the Box](#)   [Product Overview](#)   [Setup](#)   [Operating Instructions](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. INTRODUCTION

---

This manual provides detailed instructions for the safe and efficient use of your Coby Portable CD Player with Bluetooth and Wireless Earbuds, Model CD202BK. Please read this manual thoroughly before operating the device and retain it for future reference.

## 2. WHAT'S IN THE BOX

---

Verify that all items are present upon unboxing:

- Coby Portable CD Player (Model CD202BK)
- Wireless Earbuds with Charging Case
- Wired Earbuds
- USB Charging Cable
- Instruction Manual

## 3. PRODUCT OVERVIEW

---

The Coby Portable CD Player offers versatile audio playback with both traditional CD support and modern Bluetooth connectivity. It includes wireless earbuds for a complete listening experience.



Figure 3.1: Coby Portable CD Player and Wireless Earbuds. The image displays the black portable CD player alongside its accompanying black wireless earbuds in their charging case.

# NOSTALGIC DESIGN, MODERN TECHNOLOGY

BLUETOOTH WIRELESS EARBUDS &  
PORTABLE CD PLAYER BUNDLE



Figure 3.2: Front view of the Coby Portable CD Player. The player features a digital display and control buttons along its edge, with 'COBY' branding and 'ANTI-SKIP PROTECTION DIGITAL' text on the lid.



Figure 3.3: Wireless Earbuds in their charging case. The black earbuds are shown inside a clear-lidded charging case, indicating their compact and portable design.

## 4. SETUP

---

### 4.1 Charging the CD Player

The CD player includes a rechargeable battery. Use the provided USB charging cable to connect the player to a compatible USB power source (e.g., computer USB port, USB wall adapter). The charging indicator will illuminate during charging and turn off when fully charged.

### 4.2 Charging the Wireless Earbuds

Place the wireless earbuds into their charging case. Connect the charging case to a USB power source using the provided cable. The indicator lights on the case will show the charging status. Ensure the earbuds are fully charged before first use for optimal battery life.

### 4.3 Bluetooth Pairing (CD Player to Wireless Audio Devices)

To connect your CD player to Bluetooth headphones or speakers:

1. Ensure the CD player is powered on.
2. Activate Bluetooth pairing mode on your wireless headphones or speaker. Refer to your audio

device's manual for specific instructions.

3. On the CD player, press and hold the Bluetooth button (usually indicated by a Bluetooth icon) until the Bluetooth indicator light flashes, signifying pairing mode.
4. The CD player will search for nearby Bluetooth devices. Once connected, the Bluetooth indicator light will become solid.



Figure 4.1: User enjoying music with the Coby Portable CD Player and Bluetooth headphones. This illustrates the wireless listening capability of the device.

#### 4.4 Inserting a CD

To insert a CD:

1. Locate the 'OPEN' button on the side of the CD player and press it to open the lid.
2. Carefully place the CD onto the center spindle with the label side facing up. Ensure the CD is securely seated.
3. Close the lid firmly until it clicks into place.

### 5. OPERATING INSTRUCTIONS

---

#### 5.1 CD Playback

After inserting a CD and powering on the device, the player will automatically begin reading the disc. Use the control buttons on the player's edge:

- **Play/Pause** (▶ / ||): Press to start or pause playback.
- **Next/Previous Track** (▶ ▶ | / | ◀ ◀): Press briefly to skip to the next or previous track.
- **Fast Forward/Rewind** (▶ ▶ ▶ | / | ◀ ◀ ◀): Press and hold to fast forward or rewind within a track.
- **Repeat (RPT)**: Cycles through repeat modes (e.g., repeat one track, repeat all tracks).
- **Shuffle (SHUF)**: Plays tracks in a random order.
- **Super Bass (EQ)**: Activates or deactivates the Super Bass audio enhancement.

The CD player supports CD, CD-R, and MP3 discs. The anti-skip protection helps prevent interruptions during movement.



Figure 5.1: Coby Portable CD Player highlighting CD playback, FM radio, and MP3 disc support. The image shows the player's features for various audio formats.

## 5.2 FM Radio

To use the built-in FM radio:

1. Press the 'MODE' button to switch to FM radio mode.
2. Use the 'TUNE+' or 'TUNE-' buttons to manually scan for stations.

3. To auto-scan and save presets, press and hold the 'SCAN' button. The player will automatically find and store available FM stations.
4. Use the 'PRESET+' or 'PRESET-' buttons to navigate through saved stations.

### 5.3 Using Wireless Earbuds

Once paired with your CD player or another Bluetooth device, the wireless earbuds provide up to 12 hours of playtime. They feature touch-enabled controls for managing playback and calls. The ergonomic design ensures a comfortable fit.

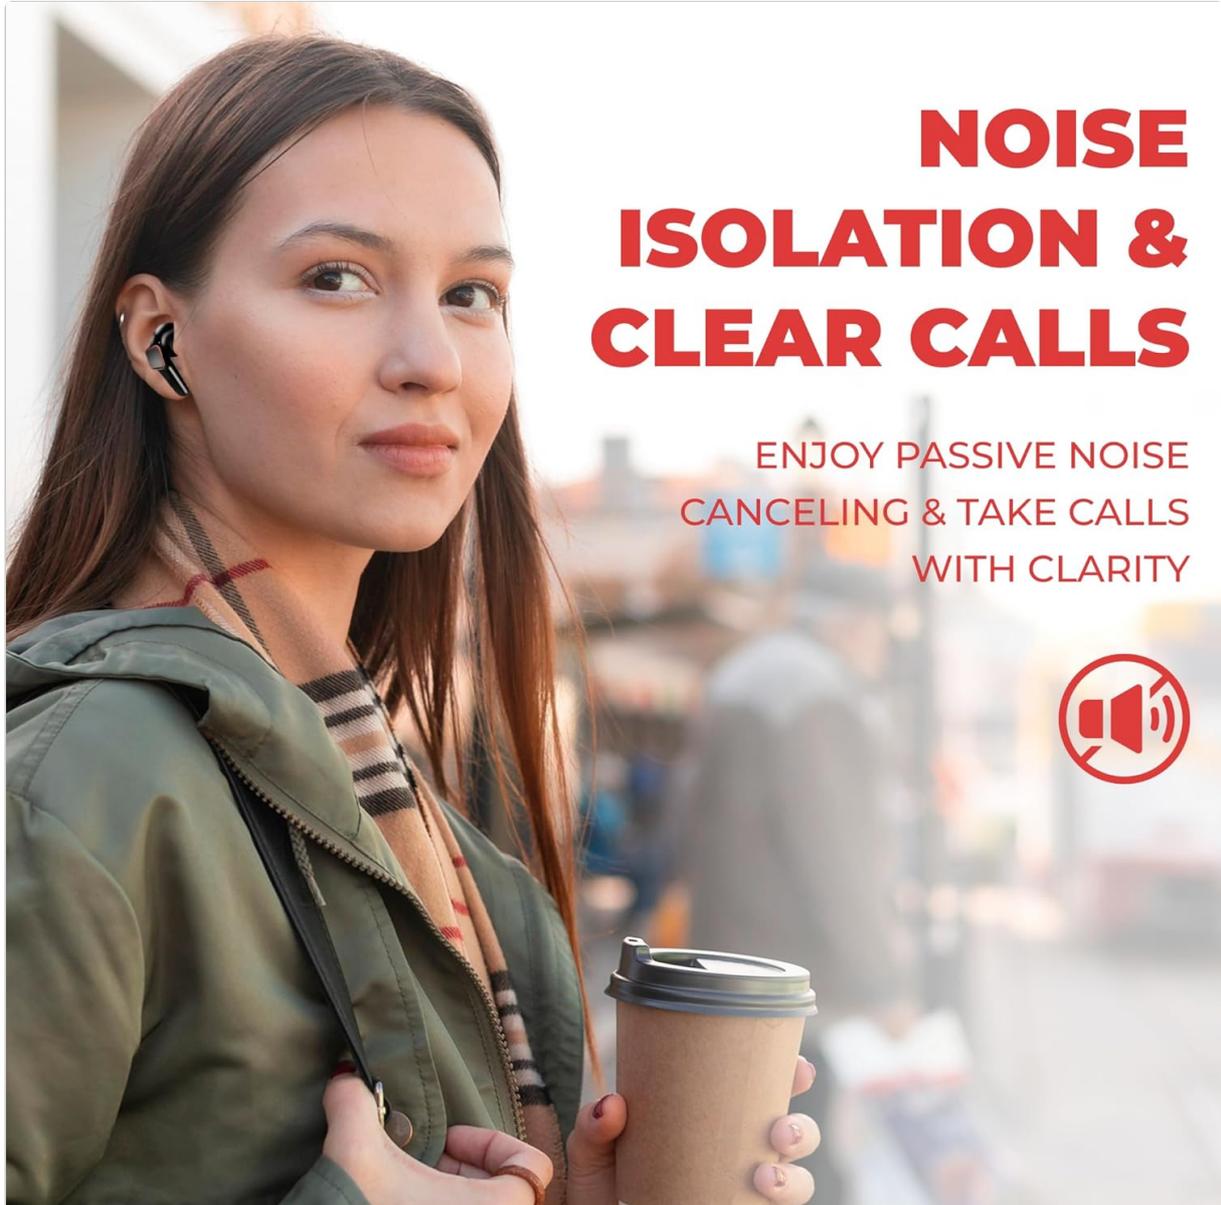


Figure 5.2: User wearing Coby Wireless Earbuds, emphasizing noise isolation and clear call capabilities. The earbuds are designed for an immersive audio experience.

# PERFECT FIT

Ergonomic Design  
And Comfortable Fit  
Suited For Your  
Active Lifestyle



Figure 5.3: User engaged in physical activity while wearing Coby Wireless Earbuds, highlighting their secure and comfortable fit for an active lifestyle.

## 6. MAINTENANCE

---

### 6.1 Cleaning

To clean the CD player and earbuds, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the surfaces. For the CD lens, use a specialized CD lens cleaning kit.

### 6.2 Storage

When not in use, store the device in a cool, dry place away from direct sunlight and extreme temperatures. Keep the earbuds in their charging case to protect them and maintain their charge.

## 7. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
CD player does not power on	Low battery; Power switch off	Charge the CD player; Ensure power switch is in 'ON' position

Problem	Possible Cause	Solution
CD skips or stops playback	Dirty or scratched CD; Excessive movement; CD not properly seated	Clean the CD; Minimize movement during playback; Re-insert CD correctly
Cannot pair Bluetooth earbuds/speaker	Device not in pairing mode; Out of range; Interference	Ensure both devices are in pairing mode; Move devices closer; Turn off other Bluetooth devices
No sound from earbuds/speaker	Volume too low; Device not connected; Earbuds not charged	Increase volume; Re-pair devices; Charge earbuds
FM radio reception is poor	Weak signal; Environmental interference	Move to an area with better reception; Try auto-scanning for stations again

## 8. SPECIFICATIONS

---

- **Model Name:** PORTABLE CD PLAYER WITH BLUETOOTH & WIRELESS EAR BUDS
- **Item Model Number:** CD202BK
- **Brand:** Coby
- **Connectivity Technology:** Wireless
- **Special Features:** Anti-Skip Protection, Bluetooth, Built-In Radio, Portable, Rechargeable
- **Batteries:** 1 Lithium Ion battery required (included)
- **Item Weight:** 1.33 pounds
- **Package Dimensions:** 10.31 x 8.27 x 3.5 inches
- **Manufacturer:** Summit Electronics, LLC

## 9. WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the documentation included with your product or visit the official Coby website. Keep your proof of purchase for any warranty claims.

Your browser does not support the video tag.

Video 9.1: COBY CD Player and Headphone Bundle Overview. This video provides a visual overview of the Coby Portable CD Player and its included accessories, demonstrating its features and components.