

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Impecca](#) /

› [IMPECCA Countertop Microwave Oven User Manual](#)

Impecca CM-0771ST

IMPECCA Countertop Microwave Oven User Manual

Model: CM-0771ST

INTRODUCTION

Thank you for purchasing the IMPECCA Countertop Microwave Oven. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before using the microwave oven and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not operate the oven if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- Do not use corrosive chemicals or vapors in this appliance.
- Do not use this microwave oven for commercial purposes. It is intended for household use only.
- Always ensure the turntable is properly seated before operation.

PRODUCT OVERVIEW

Familiarize yourself with the components and control panel of your IMPECCA microwave oven.



Figure 1: Front view of the IMPECCA Countertop Microwave Oven. The image displays the microwave's stainless steel and black exterior, featuring a large viewing window on the left and a digital control panel on the right. The control panel includes a digital time display (showing '12:00'), various function buttons such as 'Potato', 'Popcorn', 'Pizza', 'Beverage', 'Frozen Dinner', 'Reheat', 'Clock', 'Time Cook', 'Kitchen Timer', 'Time Defrost', 'Weight Defrost', 'Power Level', a numeric keypad (1-9, 0), 'Stop/Clear', and 'START/+30 Sec'. The 'IMPECCA' logo is visible on the bottom left of the appliance.

Control Panel Functions:

- **Digital Display:** Shows time of day, cooking time, power level, and program indicators.
- **Auto Menus:** Dedicated buttons for Potato, Popcorn, Pizza, Beverage, Frozen Dinner, and Reheat.
- **Clock:** Sets the current time.
- **Time Cook:** Used to set manual cooking time.
- **Kitchen Timer:** Functions as a standalone timer.
- **Time Defrost:** Defrosts food based on time input.
- **Weight Defrost:** Defrosts food based on weight input.
- **Power Level:** Adjusts the microwave power output.
- **Numeric Keypad (0-9):** Used to input time, weight, or select menu options.
- **Stop/Clear:** Stops cooking, clears settings, or cancels a program.
- **START/+30 Sec:** Starts cooking or adds 30 seconds to cooking time.

SETUP AND INSTALLATION

1. **Unpacking:** Remove all packing materials and accessories. Inspect the oven for any damage such as dents or a broken door. Do not install if damaged.
2. **Placement:** Place the microwave oven on a flat, stable surface that can support its weight and the heaviest food likely to be cooked in it. Ensure adequate ventilation space around the oven (at least 4 inches from the back and sides, and 12 inches above).
3. **Power Connection:** Plug the power cord into a standard 3-prong grounded electrical outlet. Ensure the voltage and frequency match the specifications on the rating label.

4. **Turntable Installation:** Place the turntable ring inside the oven cavity, then place the glass turntable plate on top of the ring, ensuring it sits securely on the center hub.

OPERATING INSTRUCTIONS

Setting the Clock

1. Press the **Clock** button once.
2. Use the numeric keypad to enter the current time (e.g., 1-2-0-0 for 12:00).
3. Press the **Clock** button again to confirm.

Basic Microwave Cooking (Time Cook)

1. Place food in the microwave-safe dish and put it on the turntable. Close the door.
2. Press the **Time Cook** button.
3. Use the numeric keypad to enter the desired cooking time (e.g., 1-0-0 for 1 minute).
4. To adjust power level (optional): Press **Power Level**, then use the numeric keypad (1-10 for 10%-100% power).
5. Press **START/+30 Sec** to begin cooking.

Express Cooking (+30 Sec)

For quick cooking at 100% power:

- Simply press the **START/+30 Sec** button to start cooking for 30 seconds at full power.
- Each subsequent press of **START/+30 Sec** will add 30 seconds to the cooking time.

Auto Menus

The oven has pre-programmed settings for common foods:

- **Potato:** Press **Potato**, then select quantity (e.g., 1 for one potato). Press **START/+30 Sec**.
- **Popcorn:** Press **Popcorn**, then select quantity (e.g., 1 for 1.75 oz). Press **START/+30 Sec**.
- **Pizza:** Press **Pizza**, then select quantity (e.g., 1 for 4 oz). Press **START/+30 Sec**.
- **Beverage:** Press **Beverage**, then select quantity (e.g., 1 for 1 cup). Press **START/+30 Sec**.
- **Frozen Dinner:** Press **Frozen Dinner**, then select quantity (e.g., 1 for 10 oz). Press **START/+30 Sec**.
- **Reheat:** Press **Reheat**, then select quantity (e.g., 1 for 1 cup). Press **START/+30 Sec**.

Defrosting

Your microwave offers two defrost methods:

- **Time Defrost:** Press **Time Defrost**, enter the desired defrosting time using the numeric keypad, then press **START/+30 Sec**.
- **Weight Defrost:** Press **Weight Defrost**, enter the weight of the food in ounces (e.g., 16 for 1 lb) using the numeric keypad, then press **START/+30 Sec**.

Kitchen Timer

To use the microwave as a kitchen timer:

1. Press the **Kitchen Timer** button.
2. Enter the desired time using the numeric keypad.

3. Press **START/+30 Sec**. The timer will count down without microwave operation.

Child Lock Function

To prevent unsupervised operation, especially by children:

- **To activate:** Press and hold the **Stop/Clear** button for 3 seconds. A lock indicator will appear on the display.
- **To deactivate:** Press and hold the **Stop/Clear** button for 3 seconds again. The lock indicator will disappear.

MAINTENANCE AND CLEANING

Proper care ensures the longevity and performance of your microwave oven.

- **Interior Cleaning:** Wipe the interior cavity with a damp cloth after each use. For stubborn stains, use a mild detergent or a microwave-safe cleaner. Do not use abrasive cleaners or steel wool.
- **Exterior Cleaning:** Clean the exterior surface with a soft, damp cloth. For stainless steel surfaces, use a specialized stainless steel cleaner if necessary.
- **Turtable:** The glass turntable and turntable ring can be washed in warm soapy water or in the dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Door Seal:** Regularly clean the door seals and adjacent parts to remove any spills or debris. This helps ensure a proper seal.
- **Odor Removal:** To remove odors, combine a cup of water with a few slices of lemon or a tablespoon of vinegar in a microwave-safe bowl. Heat on high for 2-3 minutes, then let it sit in the oven for 5 minutes before wiping clean.

TROUBLESHOOTING

If you encounter issues with your microwave oven, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Oven will not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped; Child lock activated.	Ensure plug is securely in outlet; Close door firmly; Check household fuse/circuit breaker; Deactivate child lock.
Food not cooking evenly	Food not stirred or turned; Improper power level or cooking time; Turntable not rotating.	Stir or turn food halfway through cooking; Adjust power level/time; Ensure turntable is correctly placed and clean.
Light not working	Bulb burned out.	Contact qualified service personnel for bulb replacement.
Excessive steam from door	High moisture content in food.	This is normal for some foods. Ensure proper ventilation.

SPECIFICATIONS

Feature	Detail
Brand	Impecca

Feature	Detail
Model Number	CM-0771ST
Capacity	0.7 Cubic Feet
Wattage	700 Watts
Installation Type	Countertop
Product Dimensions (D x W x H)	12.72" x 17.56" x 9.57"
Material	Stainless Steel
Color	Stainless Steel
Special Feature	Ventless
Included Components	Turntable

© 2024 Impecca. All rights reserved.

Related Documents - CM-0771ST

 <p>1.3 CU FT Microwave Oven - User Guide Horno Micro-ondas de 1.3 Pies Cúbicos - Manual de Usuario Le Four à Micro-ondes 1.3 Pièces Cubes - Manuel de l'Utilisateur Model: CM-1396 www.impecca.com</p>	<p>Impecca CM-1396 Microwave Oven User Guide Comprehensive user guide for the Impecca CM-1396 1.3 cu ft Microwave Oven, covering setup, operation, safety instructions, and cooking functions like microwave, convection, air fry, bake, and roast.</p>
 <p>Microwave Oven – User's Guide Horno de Microondas – Guía de Usuario Four Micro-ondes – Guide de l'Utilisateur Model: CM-0992 K/W www.impecca.com</p>	<p>Impecca CM-0992 K/W Microwave Oven User's Guide Comprehensive user guide for the Impecca CM-0992 K/W microwave oven, covering safety instructions, operation, installation, cleaning, and troubleshooting. Available in English, Spanish, and French.</p>
 <p>Microwave Oven – User's Guide Horno de Microondas – Guía de Usuario Four Micro-ondes – Guide de l'Utilisateur Model: CM-0992 K/W www.impecca.com</p>	<p>Impecca CM-0992 K/W Microwave Oven User Guide Comprehensive user guide for the Impecca CM-0992 K/W microwave oven, covering safety, installation, operation, and maintenance. Available in English, Spanish, and French.</p>

 <p>IMPECCA</p> <p>Microwave Oven – User's Guide Horno de Microondas – Guía del Usuario Four Micro-ondes – Guide de l'utilisateur</p> <p>Model: CM-0775</p> <p>www.impecca.com</p>	<p><u>Impecca CM-0775 Microwave Oven User's Guide</u></p> <p>User's guide for the Impecca CM-0775 microwave oven, covering installation, operation, safety, cleaning, and troubleshooting. Learn to use all features for optimal cooking performance.</p>
 <p>IMPECCA</p> <p>LED TV User Guide Manual Del Usuario Guide de l'utilisateur</p> <p>Model: TL-3202H</p> <p>www.impecca.com</p>	<p><u>Impecca TL-3202H LED TV User Guide - Setup, Operation, and Troubleshooting</u></p> <p>Comprehensive user guide for the Impecca TL-3202H LED TV, covering setup, installation, remote control features, menu navigation, troubleshooting tips, and warranty information.</p>
 <p>IMPECCA</p> <p>User's Guide Guía del Usuario – Guía del Fabricante</p> <p>Model: RA-2151</p> <p>14.6 CU FT Refrigerator 14.6 Pies Cúbicos Refrigerador 14.6 Cu Pi Réfrigérateur</p> <p>www.impecca.com</p>	<p><u>Impecca RA-2151 Refrigerator User's Guide</u></p> <p>User's guide for the Impecca RA-2151 14.6 cu ft refrigerator, covering installation, operation, safety, maintenance, and troubleshooting. Includes support and warranty information.</p>