

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER Crisp 'N Bake™ 6-Slice Digital Air Fry Toaster Oven Instruction Manual

BLACK+DECKER TO60D5-2BD

Instruction Manual

BLACK+DECKER CRISP 'N BAKE™ 6-SLICE DIGITAL AIR FRY TOASTER OVEN

Model: TO60D5-2BD

Product Overview



Image: The BLACK+DECKER Crisp 'N Bake Toaster Oven, showcasing its interior capacity with a roasted chicken and vegetables, highlighting its versatility.

The BLACK+DECKER Crisp 'N Bake™ 6-Slice Digital Air Fry Toaster Oven is designed to simplify your cooking experience, offering versatile functions for breakfast, lunch, and dinner. It features 5 heating elements and 750 Watts for efficient cooking. With 8 digital cooking functions, including bake, toast, air fry, bagel, broil, pizza, keep warm, and reheat, this appliance provides convenience for various meal preparations. Its AirFry Technology uses high-intensity hot air to crisp foods with minimal oil, offering a

healthier alternative to deep frying. The intuitive touch-activated digital control panel allows for precise setting of shade, time, and temperature. Dishwasher-safe accessories ensure easy cleanup.

Key Features

- **Efficient Heating:** Perfectly cooked meals 2X faster with uniquely designed 5 Heating Elements and 750 Watts.
- **AirFry Technology:** Surrounds food with high intensity hot air to crisp your favorite fried foods with little to no oil, providing a deep-fried taste without the added fat.
- **8 Digital Cooking Functions:** Offers versatile cooking options including Bake, Toast, Air Fry, Bagel, Broil, Pizza, Keep Warm, and Reheat.
- **Touch-Activated Display:** Features a One-Touch Digital Control Panel for easy operation.
- **Large Capacity:** Spacious enough to cook a 12-inch pizza or toast up to 6 slices of bread.

Setup

1. **Unpacking:** Carefully remove the toaster oven and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Remove Packing Materials:** Remove any packing materials, cardboard inserts, or protective films from inside and outside the oven.
3. **Clean Accessories:** Wash the air fry basket, crumb tray, bake pan, and wire rack in warm, soapy water. Rinse thoroughly and dry completely before first use.
4. **Placement:** Place the toaster oven on a flat, stable, heat-resistant surface. Ensure there is at least 6 inches (15 cm) of clear space on all sides and above the oven for proper ventilation. Do not place the oven directly against a wall or under cabinets.
5. **Power Connection:** Ensure the power cord is fully extended and plug the oven into a grounded 120V AC electrical outlet. The power cord is approximately 26 inches long and extends from the bottom right side when facing the unit.
6. **First Use Burn-Off:** Before cooking food, operate the oven empty on the "Bake" setting at 400°F (205°C) for approximately 10-15 minutes to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal. Ensure the area is well-ventilated.



Image: The interior of the BLACK+DECKER toaster oven with the door open, revealing the wire rack and crumb tray. This illustrates the spacious design and accessory placement.

Operating Instructions

The BLACK+DECKER Crisp 'N Bake™ Toaster Oven features a digital control panel for easy selection of cooking functions, temperature, and time.

Digital Control Panel Overview

EvenToast™ Technology



Image: A detailed view of the digital control panel, showing the touch-activated buttons for various cooking functions and the central dial for adjusting settings. The display shows current temperature and time.

The control panel includes touch-sensitive buttons for functions like WARM, REHEAT, BAKE, TOAST, AIR FRY, BAGEL, BROIL, and PIZZA. A central dial allows for adjusting temperature and time, and a START/STOP button initiates or pauses cooking. The display shows current temperature and time settings.

General Operation Steps:

1. **Place Food:** Place food on the appropriate accessory (wire rack, bake pan, or air fry basket) and insert into the oven. Refer to the accessory guide for recommended rack positions.
2. **Select Function:** Touch the desired cooking function button on the digital control panel (e.g., BAKE, AIR FRY, TOAST).
3. **Adjust Settings:** Use the central dial to adjust the temperature and time as needed. The display will show the selected settings.
4. **Start Cooking:** Press the START/STOP button to begin the cooking cycle.
5. **Monitor Progress:** The oven will preheat if necessary, and the timer will count down.
6. **End of Cycle:** The oven will beep when the cooking cycle is complete. Carefully remove food using oven mitts.

Specific Cooking Functions:

- **Bake:** Ideal for casseroles, cookies, and other baked goods. Use the bake pan or an oven-safe dish on the wire rack.
- **Air Fry:** For crispy results with little to no oil. Place food in the air fry basket with the bake pan underneath to catch drips.



Image: A family enjoying air-fried snacks, demonstrating the use of the air fry function for healthier meals.

- **Toast/Bagel:** For perfectly browned toast or bagels. Use the wire rack. Adjust shade settings as desired. Note: For even toasting, some users may find it beneficial to flip bread halfway through the cycle.



Image: Six slices of toast inside the oven, illustrating the EvenToast™ Technology for consistent browning.

- **Pizza:** Optimized for cooking pizzas up to 12 inches. Use the wire rack.



**Fits A Whole
12" Pizza Or
6 Slices Of Toast**

Image: A 12-inch pizza placed on the wire rack inside the toaster oven, demonstrating its large capacity.

- **Broil:** For browning the top of food. Use the wire rack with the bake pan underneath.
- **Reheat/Warm:** For gently warming or keeping food warm.

Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the life of your toaster oven. Always unplug the appliance and allow it to cool completely before cleaning.

- **Crumb Tray:** Pull out the crumb tray from the bottom of the oven. Discard crumbs and wash the tray in warm, soapy water. Rinse and dry thoroughly. Reinsert the tray.
- **Accessories:** The air fry basket, crumb tray, bake pan, and wire rack are dishwasher-safe for convenient cleaning. For stubborn food residue, soak in warm, soapy water before washing.

Unique Design To Fit Pizza Without Taking Up Excess Counter Space



Image: A display of the oven's accessories, including the Drip Tray, Bake Pan, Air Fry Mesh Tray, and Wire Rack, all designed for easy cleaning.

- **Interior:** Wipe the interior walls with a damp cloth and mild detergent. Do not use abrasive cleaners or scouring pads, as they can damage the non-stick coating.
- **Exterior:** Wipe the exterior surfaces with a damp cloth. Dry thoroughly.
- **Glass Door:** Clean the glass door with a glass cleaner or a damp cloth. Avoid harsh chemicals.

Troubleshooting

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; circuit breaker tripped.	Ensure oven is securely plugged into a working outlet. Check household circuit breaker.
Food not cooking evenly.	Incorrect rack position; overcrowding; uneven food placement.	Refer to recipe for recommended rack position. Do not overcrowd the oven. Arrange food in a single layer for best results, especially for air frying.

Problem	Possible Cause	Solution
Smoke or strong odor during cooking.	Food residue on heating elements or interior; first use burn-off.	This is normal for first use. For subsequent uses, ensure oven and crumb tray are clean. Reduce cooking temperature if excessive smoke occurs.
Digital display is dark or hard to read.	Normal operation when not in use; low light conditions.	The display illuminates when touched or during operation. Ensure adequate lighting in your kitchen.
Rack slides out too easily.	Design feature.	Exercise caution when pulling out the rack to prevent it from sliding completely out.

Specifications

- **Brand:** BLACK+DECKER
- **Model Name:** Crisp 'N Bake™ 6-Slice
- **Model Number:** TO60D5-2BD
- **UPC:** 050875002333
- **Color:** Black
- **Product Dimensions (D x W x H):** 20.08" x 15.43" x 13.19"
- **Item Weight:** 12.7 pounds
- **Power Source:** AC
- **Special Features:** Adjustable Rack, LED Display, Large Capacity, Programmable, Timer
- **Control Type:** Touch Control
- **Door Style:** Dropdown Door
- **Included Components:** Air Fry Basket, Crumb Tray, Pan, Rack

Warranty and Support

This BLACK+DECKER Crisp 'N Bake™ 6-Slice Digital Air Fry Toaster Oven is covered by a **2-Year Limited Warranty**. For warranty claims, technical support, or service inquiries, please contact BLACK+DECKER customer service. Keep your purchase receipt as proof of purchase. For the most up-to-date support information, please visit the official BLACK+DECKER website or refer to the contact details provided in your product packaging.